


DTC	P0420	Catalyst System Efficiency Below Threshold
------------	--------------	---

CIRCUIT DESCRIPTION

The ECM compares the waveform of the oxygen sensor located before the catalyst with the waveform of the oxygen sensor located after the catalyst to determine whether or not catalyst performance has deteriorated. Air-fuel ratio feedback compensation keeps the waveform of the oxygen sensor before the catalyst repeatedly changing back and forth from rich to lean.


If the catalyst is functioning normally, the waveform of the oxygen sensor after the catalyst switches back and forth between rich and lean much more slowly than the waveform of the oxygen sensor before the catalyst.

But when both waveforms change at a similar rate, it indicates that catalyst performance has deteriorated.

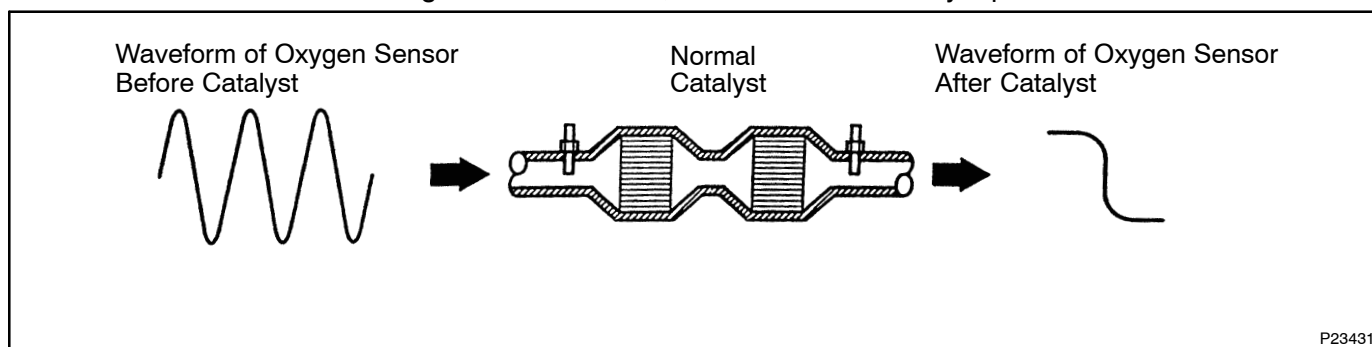

DTC No.	DTC Detection Condition	Trouble Area
P0420	After engine is warmed up and vehicle driven for 6 min. at 30 – 83 km/h (19 – 52mph), waveforms of heated oxygen sensors, bank 1 sensor 1 and bank1 sensor 2, have the same amplitude	• Front exhaust pipe (front catalyst) and rear TWC (rear catalyst) • Heated oxygen sensor

CONFIRMATION ENGINE RACING PATTERN

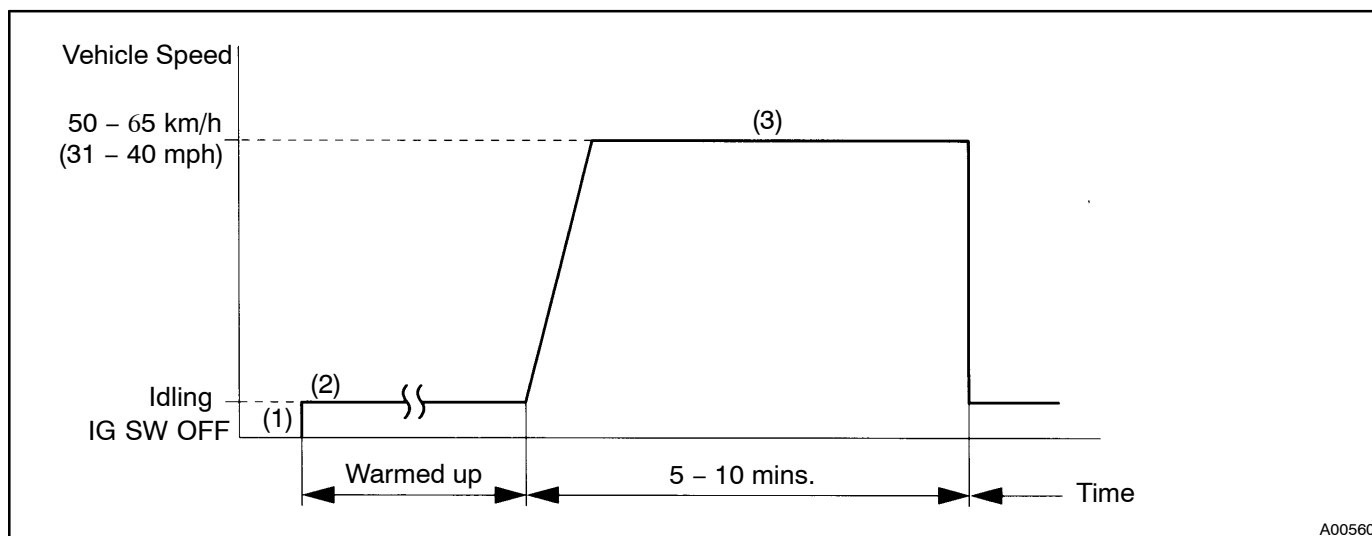

- (1) Connect the OBDII scan tool or LEXUS hand-held tester to the DLC 3.
- (2) Start and warm up the engine with all the accessories switched OFF.
- (3) Run the vehicle at 50 – 65 km/h (31 – 40 mph) for 5 – 10 mins.

HINT:

If a malfunction exists, the MIL will light up during step 3.

INSPECTION PROCEDURE