


ADJUSTMENT

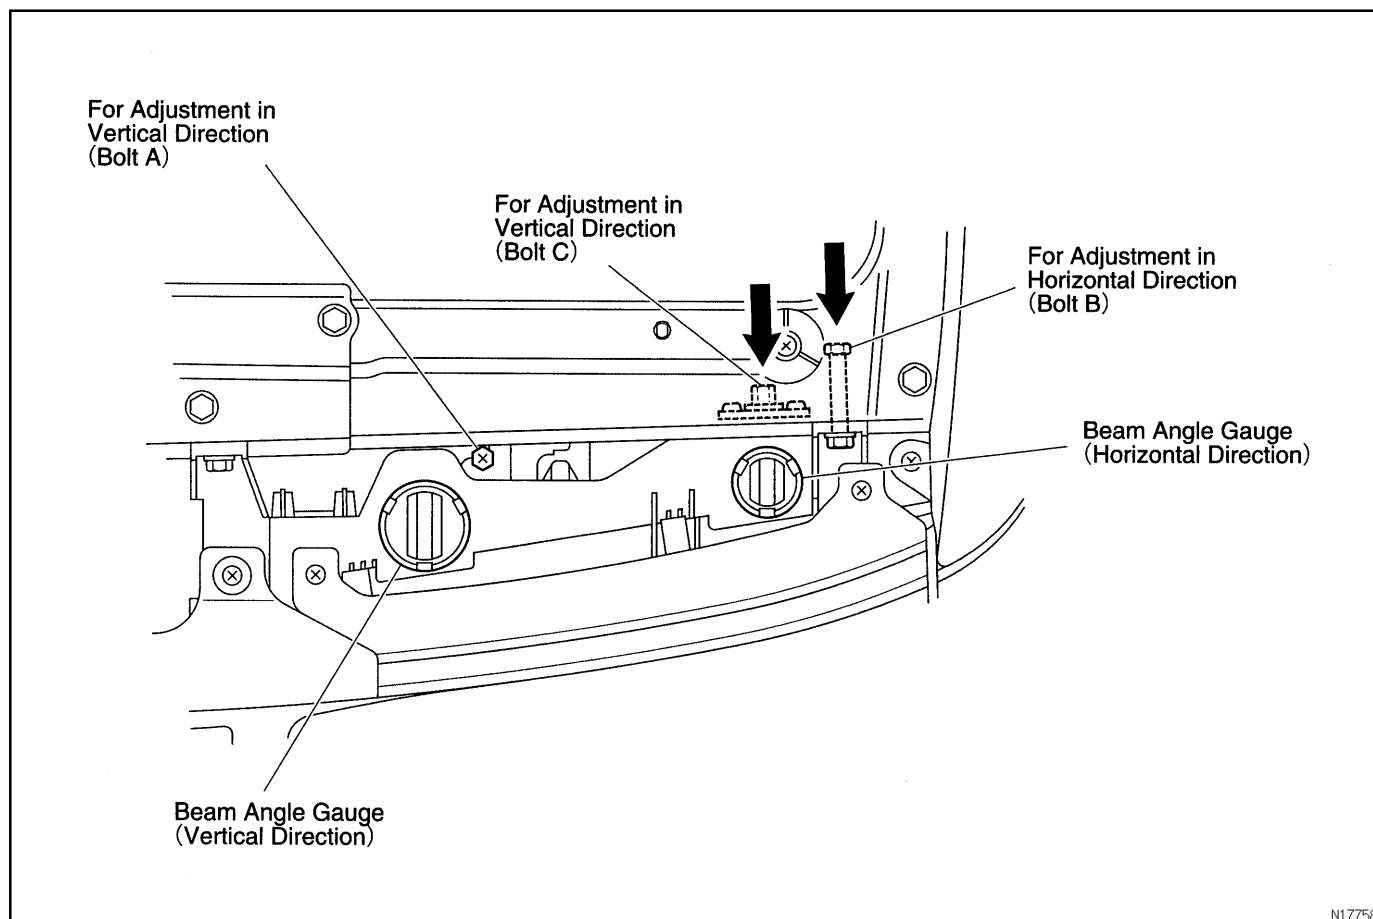


N17758

1. ADJUSTING HEADLIGHT AIM ONLY

(a) Put the vehicle in below conditions.

- Make sure that the body around the headlight is not deformed.
- Park the vehicle on a level place.
- The driver gets into the driver's seat and puts the vehicle in a state ready for driving (with a full tank).
- Bounce the vehicle several times.

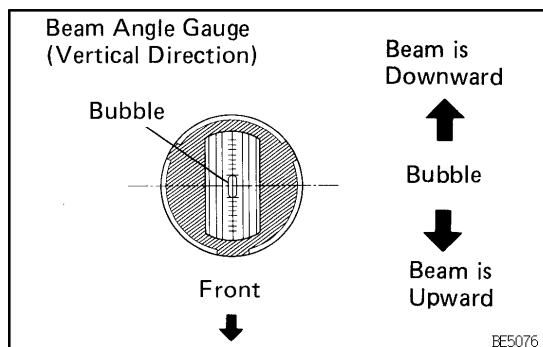


(b) Adjust headlight in vertical alignment.

If the gauge bubble is outside the acceptable range of the beam angle gauge, adjust it using adjusting screw A.

HINT:

The beam angle will change about $0^{\circ}11'$ with one mark.

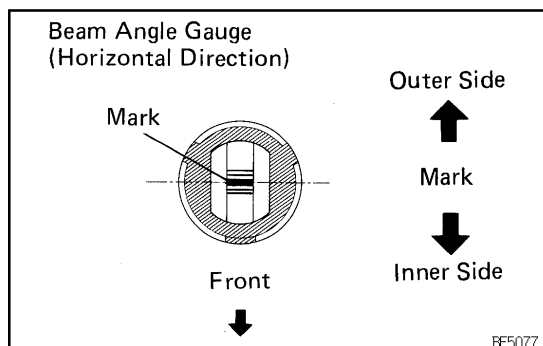

(c) Adjust headlight in horizontal alignment.

If the "0" moves away from the mark beyond the acceptable range, adjust the "0" back to the mark using adjusting screw B.

HINT:


The beam angle will change about $0^{\circ}23'$ with one mark.

2. REPLACING HEADLIGHT

(a) Replace the headlight.

(b) Put the vehicle in below conditions.

- Make sure the body around the headlight is not deformed.
- Park the vehicle on a level spot.
- The driver gets into the driver's seat and puts the vehicle in a state ready for driving (with a full tank).
- Bounce the vehicle several times.

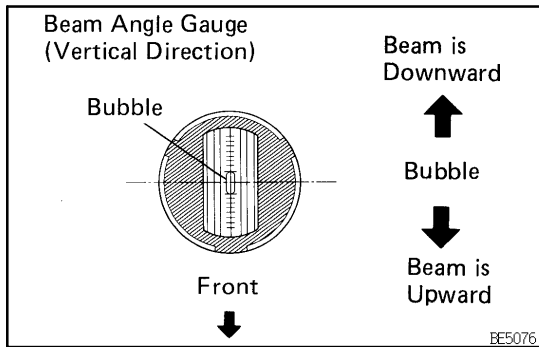

(c) Adjust headlight in vertical alignment.

- (1) Using adjusting screw A, adjust the headlight aim to within the specifications.

HINT:


The beam angle will change about $0^{\circ}11'$ with one mark.

- (2) Make sure that the gauge bubble is within the acceptable range.

HINT:

If the gauge bubble is outside the acceptable range, check that the vehicle is parked on a level place.

Readjust the headlight aim after parking the vehicle on a level place.

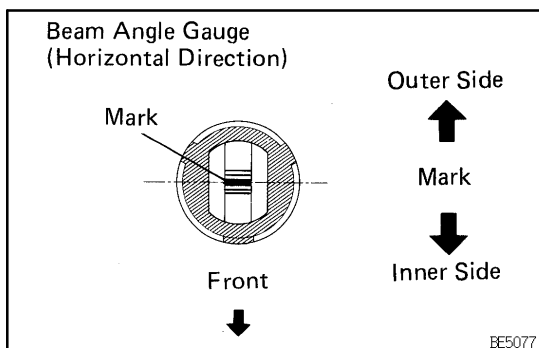

(d) Adjust headlight in horizontal alignment.

- (1) Using adjusting screw B, adjust the headlight aim to within the specifications.

HINT:

The beam angle will change about $0^{\circ}23'$ with one mark.

- (2) Using adjusting nut C, adjust the "0" back to the mark.

HINT:

For adjustment, pull nut C to the rear of the vehicle to free it. After adjustment, check that the nut C is locked in.

3. ADJUST SPIRAL CABLE (See page [SR-15](#))