


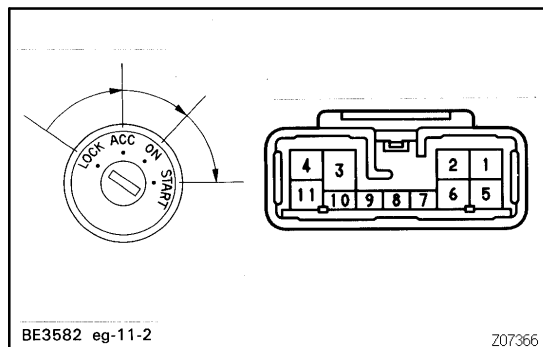


INSPECTION

1. INSPECT IGNITION SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	–	No continuity
ACC	3 – 4	Continuity
ON	2 – 3 – 4 6 – 11	Continuity
START	1 – 2 – 4 5 – 6 – 11	Continuity

If continuity is not as specified, replace the switch.

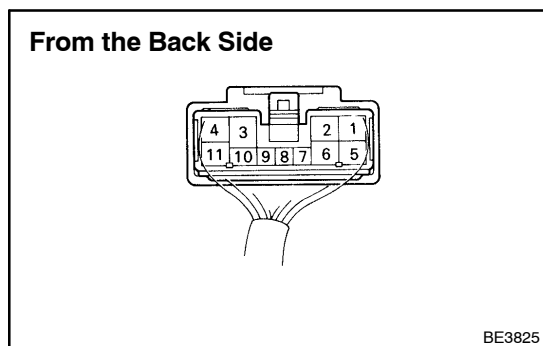


2. INSPECT IGNITION SWITCH CIRCUIT

Connect the switch connector and inspect the connector on wire harness side from the back side, as shown.

If circuit is not as specified, inspect the circuits connected to other parts.

Tester connection	Condition	Specified condition
1 – Ground	Ignition switch START	Battery positive voltage
2 – Ground	Ignition switch ON	Battery positive voltage
3 – Ground	Ignition switch ACC or ON	Battery positive voltage
4 – Ground	Constant	Battery positive voltage
5 – Ground	Ignition switch START	Battery positive voltage
6 – Ground	Ignition switch ON or START	Battery positive voltage
11 – Ground	Constant	Battery positive voltage

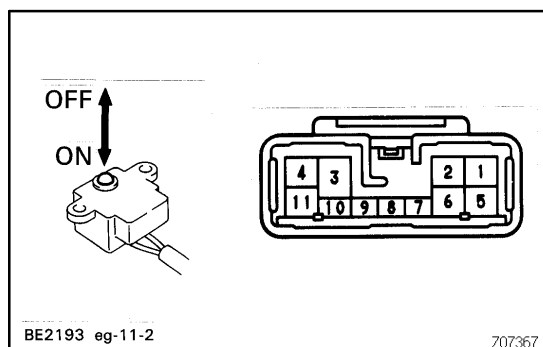


3. INSPECT KEY UNLOCK WARNING SWITCH CONTINUITY

Condition	Tester connection	Specified condition
Switch OFF (Key removed)	–	No continuity
Switch ON (Key set)	9 – 10	Continuity

If continuity is not as specified, replace the switch.

From the Back Side

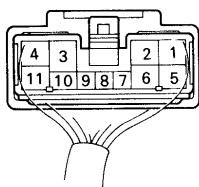

BE3825

4. INSPECT KEY UNLOCK WARNING SWITCH CIRCUIT

Connect the switch connector and inspect the connector on the wire harness side from the back side, as shown.

Tester connection	Condition	Specified condition
10 – Ground	Ignition key removed	No continuity
10 – Ground	Ignition key set	Continuity
9 – Ground	Constant	Continuity

If continuity is not as specified, inspect the circuit connected to other parts.

5. INSPECT DOOR COURTESY SWITCH CONTINUITY

(See page [BE-38](#))