


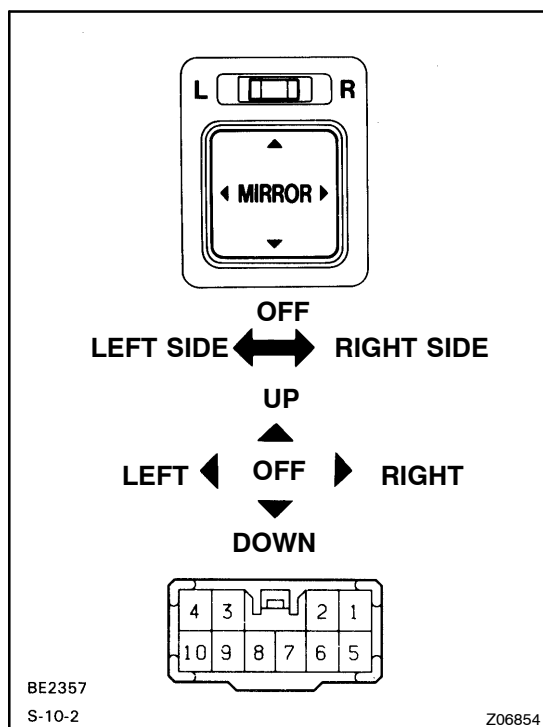

INSPECTION

1. INSPECT MIRROR SWITCH CONTINUITY

Left side:

Switch position	Tester connection	Specified condition
OFF	-	No continuity
UP	1 - 10, 3 - 4	Continuity
DOWN	1 - 3, 4 - 10	Continuity
LEFT	1 - 9, 3 - 4	Continuity
RIGHT	1 - 3, 4 - 9	Continuity

Off:


Switch position	Tester connection	Specified condition
OFF	-	No continuity
UP	3 - 4	Continuity
DOWN	1 - 3	Continuity
LEFT	3 - 4	Continuity
RIGHT	1 - 3	Continuity

Right side:

Switch position	Tester connection	Specified condition
OFF	-	No continuity
UP	1 - 6, 3 - 4	Continuity
DOWN	1 - 3, 4 - 6	Continuity
LEFT	1 - 2, 3 - 4	Continuity
RIGHT	1 - 3, 2 - 4	Continuity

If continuity is not as specified, replace the switch.

Wire Harness Side

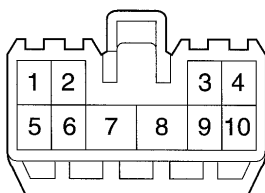


Y N17378

2. INSPECT MIRROR SWITCH CIRCUIT

Disconnect the connector from the switch and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
1 - Ground	Ignition switch position OFF	No voltage
1 - Ground	Ignition switch position ACC or ON	Battery positive voltage

If the circuit is not as specified, inspect the circuits connected to other parts.

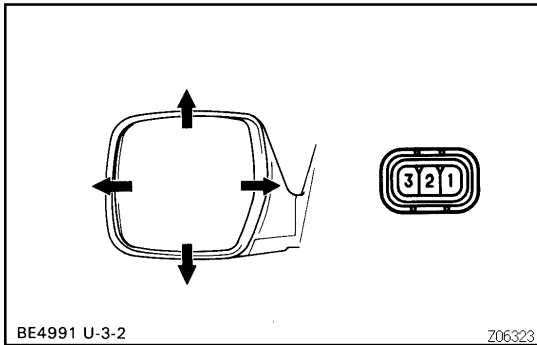

3. INSPECT MIRROR MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal in column "A" and the negative (-) lead to terminal in column "B", check that the mirror operates in column "C".

Switch position	Tester connection	Specified condition
A (+)	B (-)	C (Operation)
2	3	Mirror turns upward
3	2	Mirror turns downward
1	3	Mirror turns to left side
3	1	Mirror turns to right side

If operation is not as specified, replace the mirror assembly.