


Back-up Power Source Circuit

CIRCUIT DESCRIPTION

The ECU back-up power source provides power even when the ignition is off and is used for DTC memory, etc..


WIRING DIAGRAM

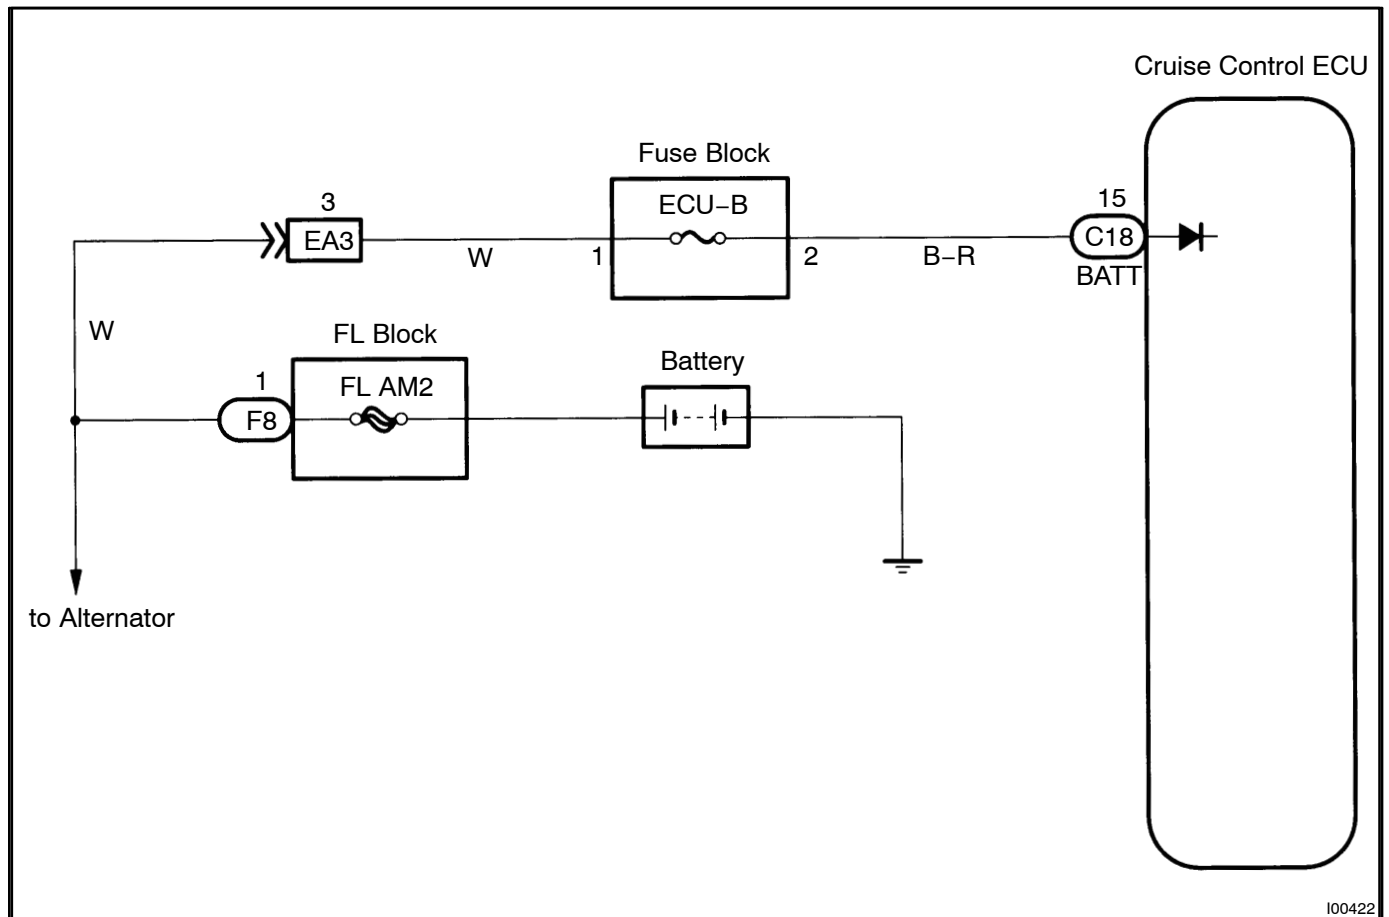

INSPECTION PROCEDURE

1 Check ECU-IG fuse.

Junction Block No.1

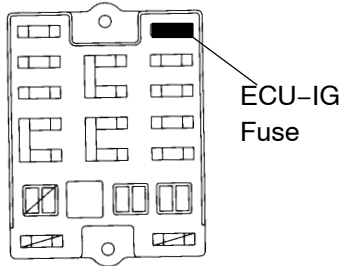

PREPARATION:

Remove the ECU-IG fuse from relay block No.2.

CHECK:

Check continuity of ECU-IG fuse.

OK:


Continuity

NG

Check for short in all the harness and components connected to the ECU-IG fuse.

OK

2 Check voltage between terminal BATT of cruise control ECU connector and body ground.

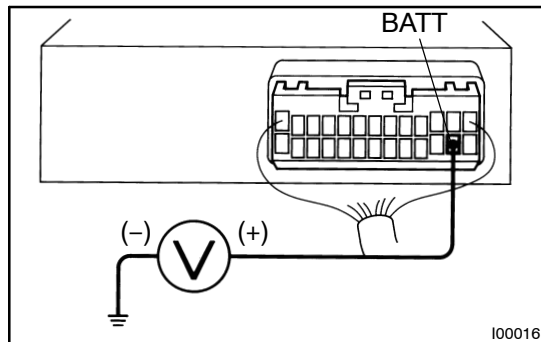

PREPARATION:

Remove the ECU with connector still connected.

CHECK:

Measure voltage between terminal BATT of ECU connector and body ground.

OK:

Voltage: 10 - 14 V

OK

Proceed to next circuit inspection shown on problem symptom table (See page [DI-297](#)).

NG

Check and repair harness and connector between battery and cruise control ECU (See page [IN-27](#)).