

DTC	P0135	Heated Oxygen Sensor Heater Circuit Malfunction (Bank 1 Sensor 1)
------------	--------------	--

DTC	P0141	Heated Oxygen Sensor Heater Circuit Malfunction (Bank 1 Sensor 2)
------------	--------------	--

CIRCUIT DESCRIPTION

Refer to DTC P0125 on page [DI-40](#).

DTC No.	DTC Detecting Condition	Trouble Area
P0135	When the heater operates, heater current exceeds 2 A (2 trip detection logic)	• Open or short in heater circuit of heated oxygen sensor • Heated oxygen sensor heater (bank 1 sensor 1, 2) • ECM
P0141	Heater current of 0.25A or less when the heater operates (2 trip detection logic)	

HINT:


- Sensor 1 refers to the sensor closer to the engine body.
- Sensor 2 refers to the sensor farther away from the engine body.

WIRING DIAGRAM

Refer to DTC P0125 (Insufficient Coolant Temp. for Closed Loop Fuel Control) on page [DI-40](#) for WIRING DIAGRAM.

INSPECTION PROCEDURE

1	Check voltage between terminals HT1, HT2 of ECM connector and body ground.
----------	---

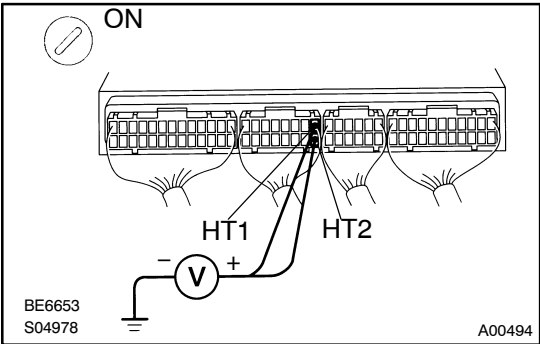

PREPARATION:

- (a) Remove the instrument panel speaker No.1 panel (See page [SF-63](#)).
- (b) Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals HT1, HT2 of ECM connector and body ground.


HINT:

- Connect terminal HT1 to bank 1 sensor 1.
- Connect terminal HT2 to bank 1 sensor 2.

OK:

Voltage: 9 – 14 V

OK	Check and replace ECM (See page IN-27).
-----------	--

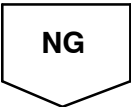

2	Check resistance of heated oxygen sensor (bank 1 sensor 1, 2) heater (See page SF-61).
---	--

NG

Replace heated oxygen sensor
(bank 1 sensor 1, 2).

OK

Check and repair harness or connector between EFI main relay (Marking: EFI) and heated oxygen sensor (bank 1 sensor 1, 2) and ECM. (See page [IN-27](#)).