



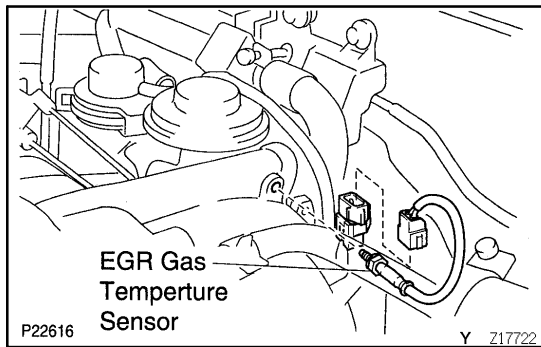

EXHAUST GAS RECIRCULATION (EGR) GAS TEMPERATURE SENSOR INSPECTION

SF1FA-02

1. REMOVE EGR GAS TEMPERATURE SENSOR

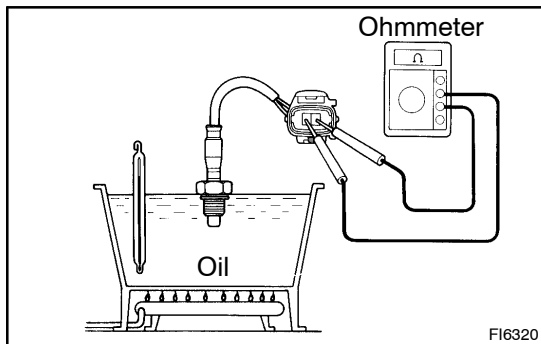

2. INSPECT EGR GAS TEMPERATURE SENSOR

Using an ohmmeter, measure the resistance between the terminals.

Temperature	Resistance
50°C (122°F)	64 – 97 kΩ
100°C (212°F)	11 – 16 kΩ
150°C (302°F)	2 – 4 kΩ

If the resistance is not as specified, replace the sensor.

3. REINSTALL EGR GAS TEMPERATURE SENSOR

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)