

## POWER TRANSISTOR (for Rear Heater)

### INSPECTION


AC1LJ-01

#### 1. REMOVE THESE PARTS:

- (a) Front seats
- (b) Rear console box
- (c) Front console box cover.
- (d) Lower center cluster finish panel
- (e) Front door scuff plates
- (f) Cowl side trims
- (g) Rear door scuff pates
- (h) Center pillar garnishes

#### 2. REMOVE POWER TRANSISTOR

- (a) Slide the floor carpet backward.

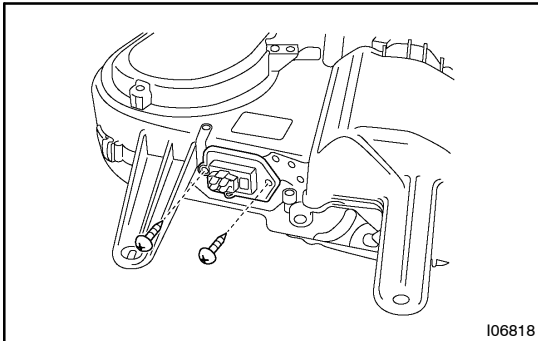

- (b) Disconnect the connector.
- (c) Remove the 2 screws and blower resistor.

#### 3. INSPECT POWER TRANSISTOR

Check the power transistor in the same way as for "POWER TRANSISTOR (For Rear Cooler)" on page [AC-84](#).

#### 4. INSTALL POWER TRANSISTOR

#### 5. INSTALL THESE PARTS:

- (a) Center pillar garnishes
- (b) Rear door scuff pates
- (c) Cowl side trims
- (d) Front door scuff plates
- (e) Lower center cluster finish panel
- (f) Front console box cover.
- (g) Rear console box
- (h) Front seats