


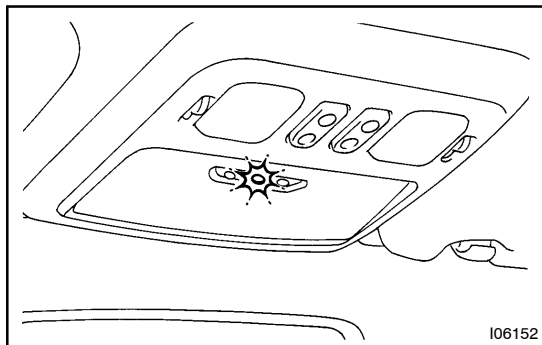


I06152

INSPECTION

1. INSPECT GARAGE DOOR OPENER SWITCH

Press the switch and check that each LED (red) lights up. Even if only one switch is found not to light up, replace it.

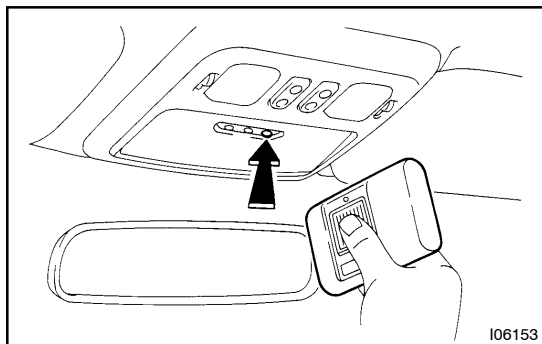

I06153

2. INSPECT GARAGE DOOR OPENER REGISTRATION AND TRANSMITTING


HINT:

Use the home link tester made by KENT MOORE for this test. As it is necessary to record the code of the hand held transmitter, customer's code will be erased. When the inspection completes, please register the customer's again.

- (a) Check that the code of hand held transmitter for inspection can be recorded.

(See page


If the code can not be registered, replace garage door opener.

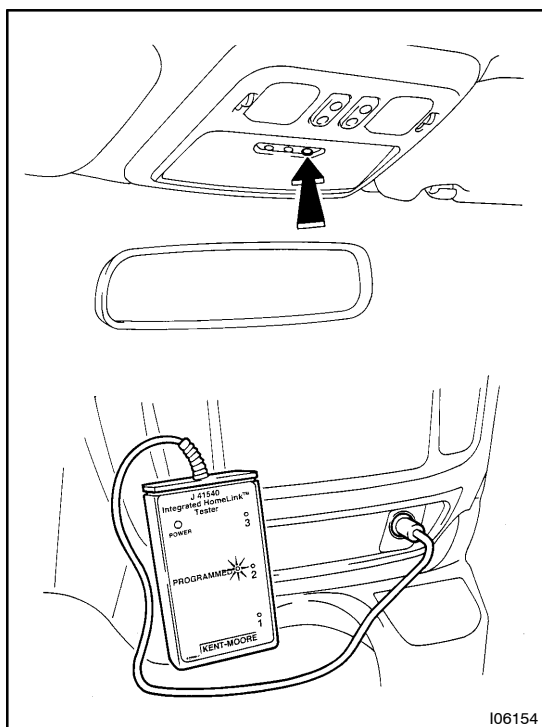

I06154

- (b) Press the switch which an inspection code has been registered for and check that LED (green) of the home link tester lights up.

If the LED (green) does not light up, replace the garage door opener.

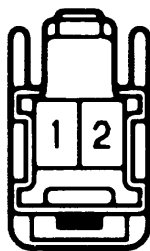Wire Harness Side

I04194

3. INSPECT GARAGE DOOR OPENER SWITCH CIRCUIT

Disconnect the connector from the switch and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
1 – Ground	Constant	Continuity
2 – Ground	Constant	Battery positive voltage

If the circuit is not as specified, inspect the power source or wire harness.