


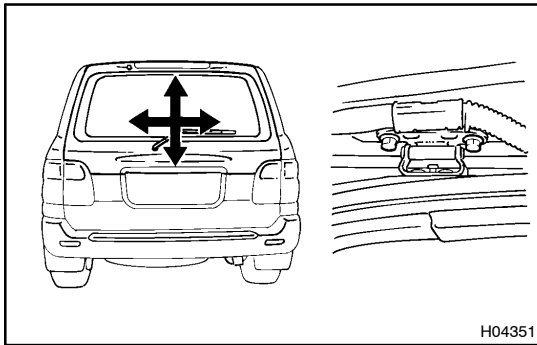


ADJUSTMENT

1. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.


Torque: 12 N·m (122 kgf·cm, 9 ft·lbf)

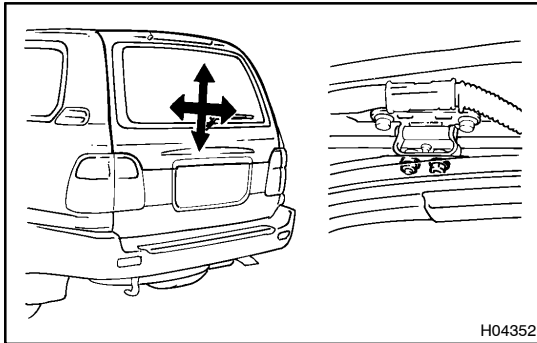

2. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

Loosen the body side hinge nuts to adjust.

Torque: 12 N·m (122 kgf·cm, 9 ft·lbf)

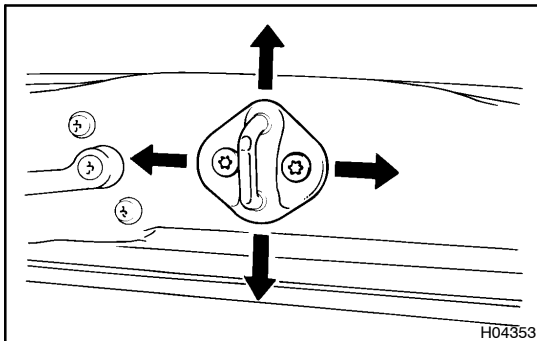

3. ADJUST DOOR LOCK STRIKER


(a) Check that the door fit and door linkages are adjusted correctly.

(b) Using a torx wrench, loosen the door lock striker mounting screws.

Torx wrench: T40 (Part No. 09042-00020 or locally manufactured tool)

Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)

(c) Using a plastic hammer, tap the door lock striker to adjust.

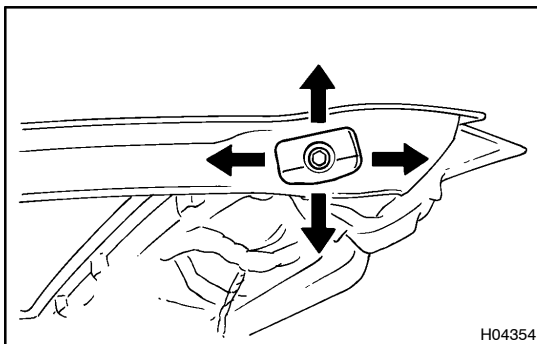

4. ADJUST LOWER STOPPER

Loosen the stopper mounting bolt to adjust.