


BRAKE Warning Light Circuit

CIRCUIT DESCRIPTION

The BRAKE warning light lights up when the brake fluid is insufficient and an abnormality occurs in the hydro brake booster.

WIRING DIAGRAM

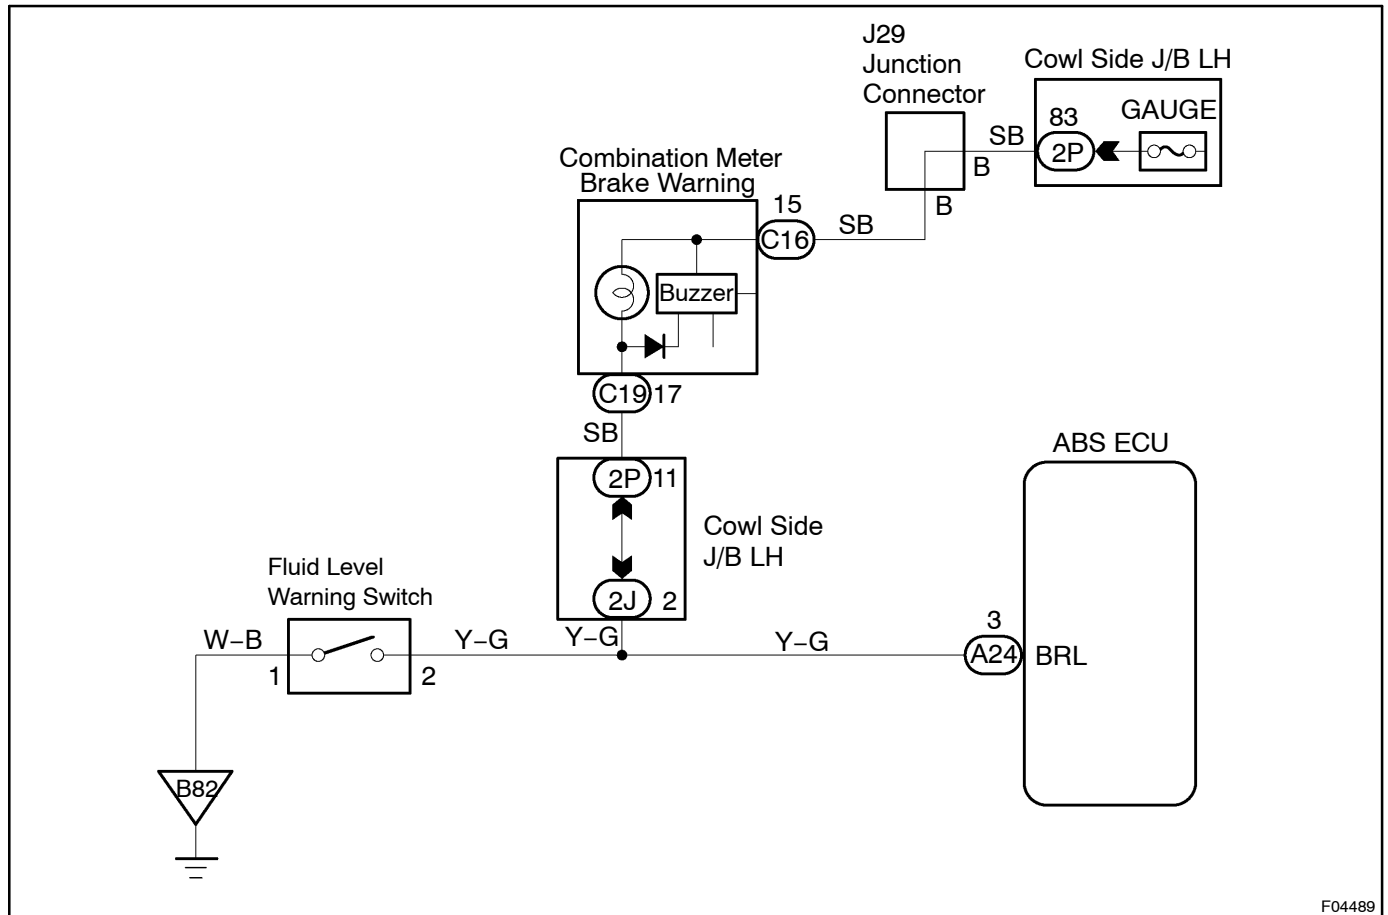

F04489

INSPECTION PROCEDURE

1	Check parking brake switch circuit (See page BE-79).
---	---

NG

Repair or replace parking brake switch circuit.

OK

2 Check brake fluid level warning switch circuit (See page [BE-79](#)).

NG

Repair or replace brake fluid level warning switch circuit.

OK

3 Is DTC output for ABS ?

Check DTC on page [BE-60](#)

Yes

Repair circuit indicated by the output code.

No

4 Check BRAKE warning light.

See combination meter troubleshooting on page [BE-2](#).

NG

Repair or replace combination meter.

OK

5 Check multiplex communication system (See page [DI-738](#)).

NG

Repair or replace multiplex communication circuit.

OK

Check and replace ABS ECU.