

FOR ALL OF VEHICLES PRECAUTION


IN086-01

1. FOR VEHICLES EQUIPPED WITH SRS AIRBAG AND SEAT BELT PRETENSIONER

- (a) The 1998 LEXUS LX470 is equipped with an SRS (Supplemental Restraint System), such as the driver airbag, front passenger airbag assembly and seat belt pretensioner.

Failure to carry out service operations in the correct sequence could cause the supplemental restraint system to unexpectedly deploy during servicing, possibly leading to a serious accident.

Further, if a mistake is made in servicing the supplemental restraint system, it is possible the SRS may fail to operate when required. Before servicing (including removal or installation of parts, inspection or replacement), be sure to read the following items carefully, then follow the correct procedure described in this manual.

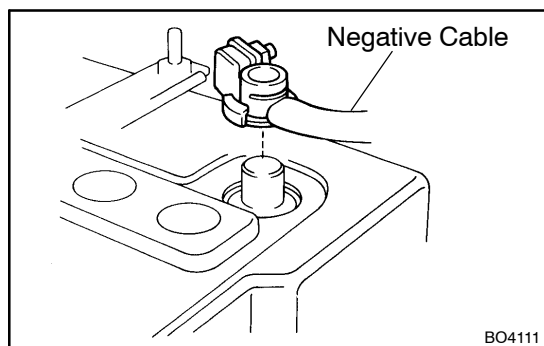

(b) GENERAL NOTICE


- (1) Malfunction symptoms of the supplemental restraint system are difficult to confirm, so the diagnostic trouble codes become the most important source of information when troubleshooting. When troubleshooting the supplemental restraint system, always inspect the diagnostic trouble codes before disconnecting the battery (See page [DI-432](#)).

- (2) Work must be started after 90 seconds from the time the ignition switch is turned to the "LOCK" position and the negative (-) terminal cable is disconnected from the battery.

(The supplemental restraint system is equipped with a back-up power source so that if work is started within 90 seconds of disconnecting the negative (-) terminal cable from the battery, the SRS may deploy.)

When the negative (-) terminal cable is disconnected from the battery, memory of the clock and audio systems will be cancelled. So before starting work, make a record of the contents memorized by the each memory system. Then when work is finished, reset the clock and audio systems as before. To avoid erasing the memory of each memory system, never use a back-up power supply from another battery.

- (3) Even in cases of a minor collision where the SRS does not deploy, the steering wheel pad, front passenger airbag assembly and seat belt pretensioner should be inspected (See page [RS-12](#), [RS-26](#) and [BO-151](#)).
- (4) Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- (5) Before repairs, remove the airbag sensor if shocks are likely to be applied to the sensor during repairs.
- (6) Never disassemble and repair the airbag sensor assembly, steering wheel pad, front passenger airbag assembly or seat belt pretensioner in order to reuse them.
- (7) If the airbag sensor assembly, steering wheel pad, front passenger airbag assembly or seat belt pretensioner have been dropped, or if there are cracks, dents or other defects in the case, bracket or connector, replace them with new ones.
- (8) Do not directly expose the airbag sensor assembly, steering wheel pad, front passenger airbag assembly or seat belt pretensioner to hot air or flames.
- (9) Use a volt/ohmmeter with high impedance (10 k Ω /V minimum) for troubleshooting of the electrical circuit.
- (10) Information labels are attached to the periphery of the SRS components. Follow the instructions on the notices.
- (11) After work on the supplemental restraint system is completed, check the SRS warning light (See page [DI-432](#)).

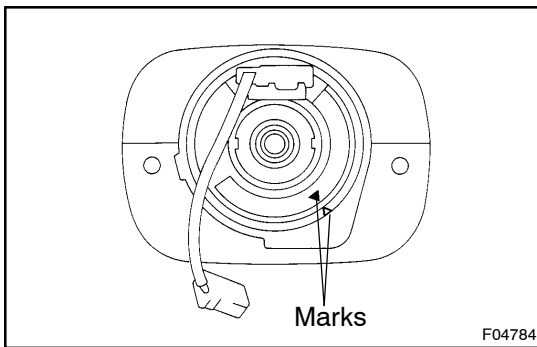


- (c) **SPIRAL CABLE (in Combination Switch)**
The steering wheel must be fitted correctly to the steering column with the spiral cable at the neutral position, otherwise cable disconnection and other troubles may result. Refer to [SR-22](#) of this manual concerning correct steering wheel installation.

(d) STEERING WHEEL PAD (with Airbag)


- (1) When removing the steering wheel pad or handling a new steering wheel pad, it should be placed with the pad top surface facing up.
Storing the pad with its metallic surface facing upward may lead to a serious accident if the airbag inflates for some reason. In addition do not store a steering wheel pad on top of another one.
- (2) Never measure the resistance of the airbag squib. (This may cause the airbag to deploy, which is very dangerous.)
- (3) Grease should not be applied to the steering wheel pad and the pad should not be cleaned with detergents of any kind.
- (4) Store the steering wheel pad where the ambient temperature remains below 93°C (200°F), without high humidity and away from electrical noise.
- (5) When using electric welding, first disconnect the airbag connector (yellow color and 2 pins) under the steering column near the combination switch connector before starting work.
- (6) When disposing of a vehicle or the steering wheel pad alone, the airbag should be deployed using an SST before disposal (See page RS-14).
Carry out the operation in a safe place away from electrical noise.

Example:



Correct

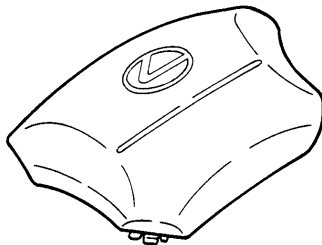

Wrong

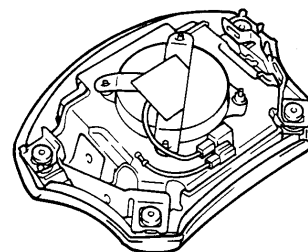

B04214

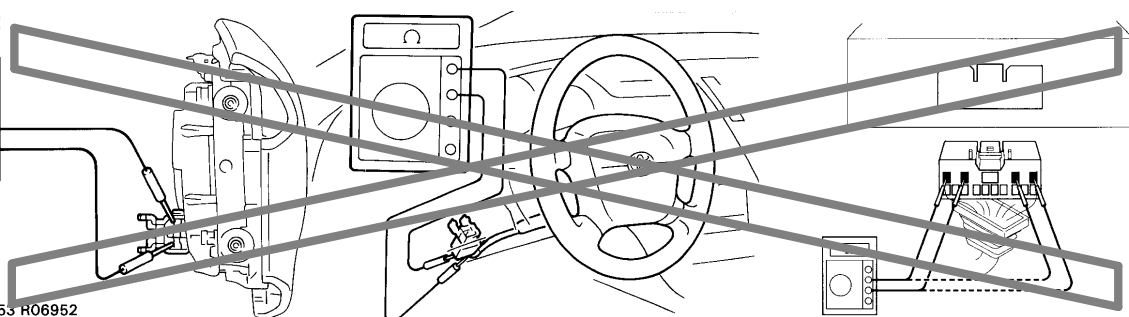Example:

R05643 R06953 R06952


Z13950

(e) FRONT PASSENGER AIRBAG ASSEMBLY


- (1) Always store a removed or new front passenger airbag assembly with the airbag deployment direction facing up.
Storing the airbag assembly with the airbag deployment direction facing down could cause a serious accident if the airbag inflates.
- (2) Never measure the resistance of the airbag squib. (This may cause the airbag to deploy, which is very dangerous.)
- (3) Grease should not be applied to the front passenger airbag assembly and the airbag door should not be cleaned with detergents of any kind.
- (4) Store the airbag assembly where the ambient temperature remains below 93°C (200°F), without high humidity and away from electrical noise.
- (5) When using electric welding, first disconnect the airbag connector (yellow color and 2 pins) installed on the assembly before starting work.
- (6) When disposing of a vehicle or the airbag assembly alone, the airbag should be deployed using an SST before disposal (See page [RS-28](#)).
Perform the operation in a safe place away from electrical noise.

Example:


Correct

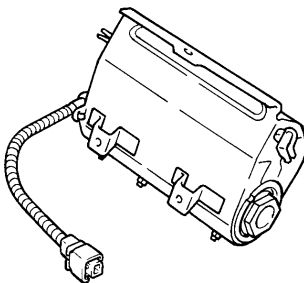

Wrong

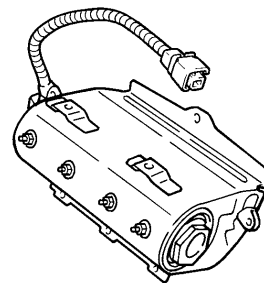

B04717

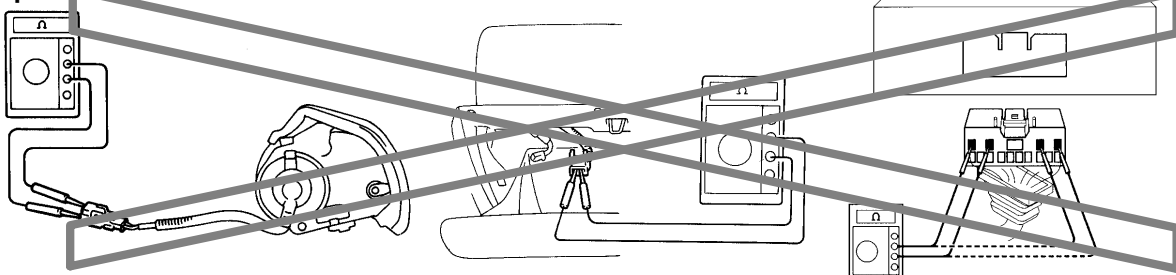
Example:

R05648 R05649 R06952

Z13951

(f) SEAT BELT PRETENSIONER

- (1) Never measure the resistance of the seat belt pretensioner. (This may cause the seat belt pretensioner activation which is very dangerous.)
- (2) Never disassemble the seat belt pretensioner.
- (3) Never install the seat belt pretensioner in another vehicle.
- (4) Store the seat belt pretensioner where the ambient temperature remains below 80°C (176°F) and away from electrical noise without high humidity.
- (5) When using electric welding, first disconnect the connector (yellow color and 2 pins) before starting work.
- (6) When disposing of a vehicle or the seat belt pretensioner alone, the seat belt pretensioner should be activated before disposal (See page [BO-152](#)). Perform the operation in a safe place away from electrical noise.
- (7) The seat belt pretensioner is hot after activation, so let it cool down sufficiently before the disposal. However never apply water to the seat belt pretensioner.

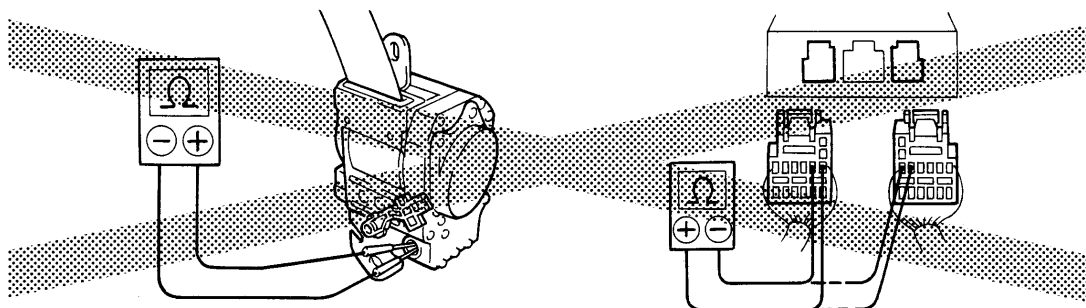Example:


B04210

(g) AIRBAG SENSOR ASSEMBLY

- (1) Never reuse the airbag sensor assembly involved in a collision when the SRS has deployed.
- (2) The connectors to the airbag sensor assembly should be connected or disconnected with the sensor mounted on the floor. If the connectors are connected or disconnected while the airbag sensor assembly is not mounted to the floor, it could cause undesired ignition of the supplemental restraint system.
- (3) Work must be started after 90 seconds from the time the ignition switch is turned to the "LOCK" position and the negative (-) terminal cable is disconnected from the battery, even if only loosening the set bolts of the airbag sensor assembly.

(h) WIRE HARNESS AND CONNECTOR

The SRS wire harness is integrated with the cowl wire harness assembly and floor wire harness assembly. The wires for the SRS wire harness are encased in a yellow corrugated tube. All the connectors for the system are also a standard yellow color. If the SRS wire harness becomes disconnected or the connector becomes broken due to an accident, etc., repair or replace it as shown on page [RS-48](#).

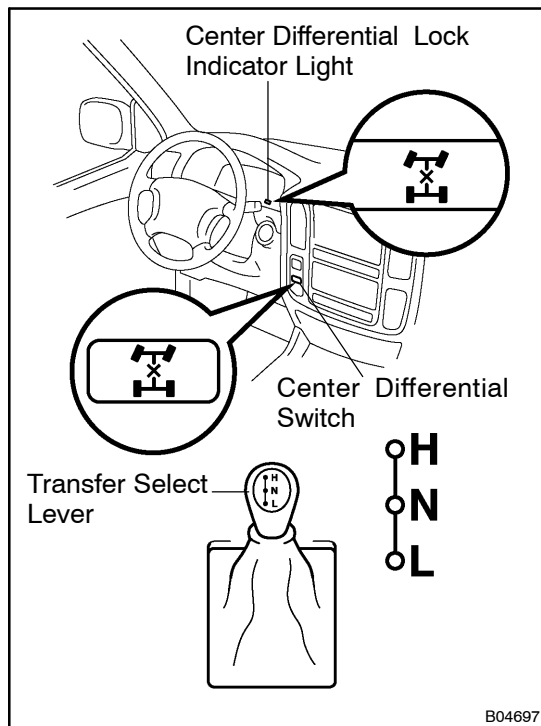

2. WHEN SERVICING FULL-TIME 4WD VEHICLES

The Full-time 4WD LEXUS LX470 is equipped with the mechanical lock type center differential system.

When carrying out any kind of servicing or testing on a Full-time 4WD in which the front or rear wheels are made to rotate (braking test, speedometer test, on-vehicle wheel balancing, etc.), or when towing the vehicle, be sure to observe the precautions given below.

If incorrect preparations or test procedures are used, the test will not only be unsuccessful, but may be dangerous as well.

Therefore, before beginning any such servicing or test, be sure to check the following items:

- Center differential mode position (FREE or LOCK)
- Whether wheels should be touching ground or jacked up
- Transmission gear position (N position)
- Transfer gear position (H or L position)
- Maximum testing vehicle speed
- Maximum testing time

CAUTION:

- **Never accelerate or decelerate the vehicle suddenly**
- **Observe the other cautions given for each individual test**


(a) Before Beginning Test

During tests with a brake tester or chassis dynamometer, such as braking force tests or speedometer tests, if only the front or rear wheels are to be rotated, it is necessary to set the position of the center differential to the FREE position or to the LOCK position depending on the type of test being performed.


- Select the position of the center differential by pushing the center differential lock switch with the transfer select lever to "H" position.
- After selecting the position, confirm the operation of indicator light.

HINT:

- Move the vehicle forward or backward slightly if the indicator light does not operate correctly when the center differential lock switch is turned ON or OFF.
- When the transfer select lever is put in "L" position, the center differential is put in LOCK condition regardless of the position of the center differential lock switch.

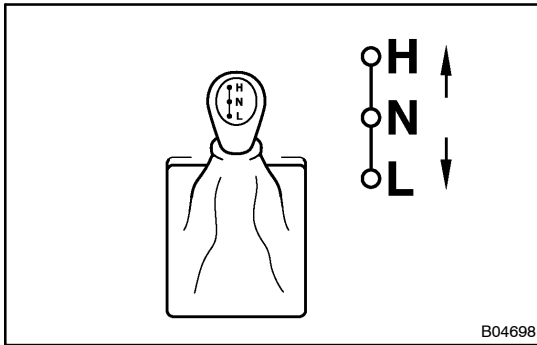

- Transfer gear "H" ↔ "L" gear shifting procedure:
When shifting, always put the shift lever of the transmission in N position. In other positions, the gears of the transfer clash, and switching cannot occur.

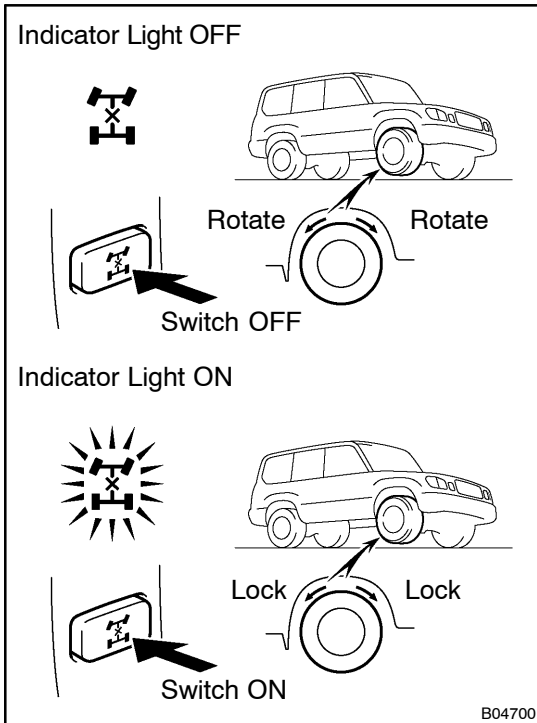**CAUTION:**

When center differential switch is turned ON:

- Operate the switch only when all 4 wheels are stopped or when driving with the wheels in a straight line.
- Never operate the switch when any tire is slipping.
- Never operate the switch when any tire is spinning freely.
- Never operate the switch when swerving or cornering.


Center differential FREE condition

	Condition	Wheel
Center differential switch	OFF	A lifted wheel can be rotated even if only one wheel is lifted up, as long as transmission is in N position.
Indicator light	OFF	
Transfer select lever	H position	


Center differential LOCK conditions

	Condition	Wheel
Center differential switch	ON	A lifted wheel cannot be rotated even if only one wheel is lifted up, as long as transmission is in N position.
Indicator light	ON	
Transfer select lever	H position	

	Condition	Wheel
Center differential switch	OFF	A lifted wheel cannot be rotated even if only one wheel is lifted up, as long as transmission is in N position.
Indicator light	ON	
Transfer select lever	L position	

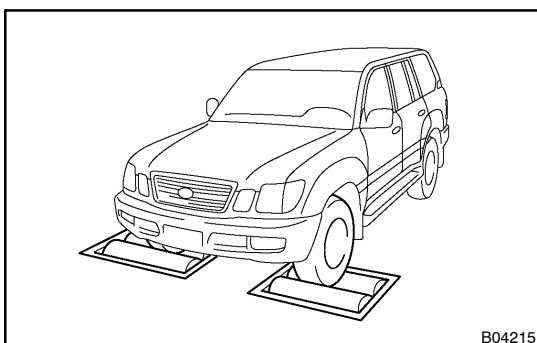


- (b) Braking Force Test
(Vehicle Speed: Below 0.5 km/h or 0.3 mph)
When performing low-speed type brake tester measurements, observe the following instructions.
- Position the wheels to be tested (front or rear) on the tester.
 - Put the center differential in FREE position.
 - Shift the transmission shift lever to "N" position and perform the test.

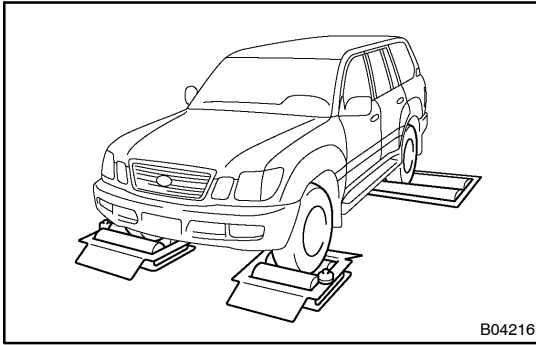

(c) Speedometer Tests or Others Tests
(Using Speedometer Tester)

- (1) After checking that the center differential is free, measure the speed with the front wheels on the free roller or jacked up and rear wheels on the tester roller.
- (2) When measuring the speed, pay due attention to the points below.
 - Check that the center differential is securely free.
 - Ensure that the vehicle does not move using wires.
 - The maximum speed should be less than 60 km/h and maximum driving time should be 1 minute.
 - Never operate sudden shifting, braking, acceleration and deceleration.

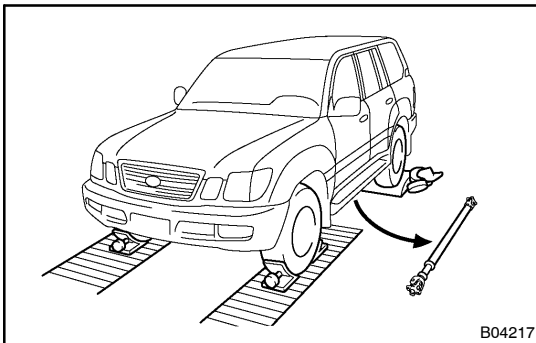


(d) Speedometer Tests or Other Tests
(Using Chassis Dynamometer)

- (1) Remove the front propeller shaft and lock the center differential. Measure the speed with rear wheels on the tester roller.
- (2) When measuring the speed, pay due attention to the points below.
 - Check that the center differential is securely locked.
 - Ensure that the vehicle is securely fixed.
 - Never operate sudden shifting, braking, acceleration and deceleration.

(e) On-Vehicle Wheel Balancing

When doing on-vehicle wheel balancing on a full-time 4WD vehicle, to prevent the wheels from rotating at different speeds in different directions from each other (which could damage the center differential), always be sure to observe the following precautions:

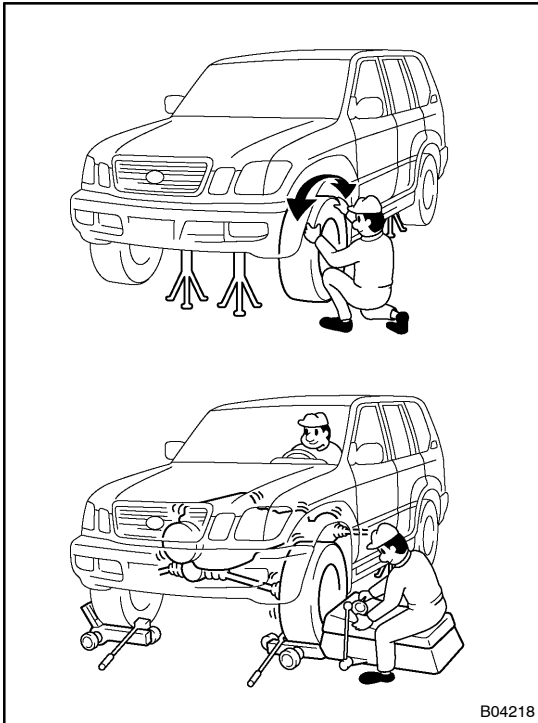

- (1) All 4 wheels should be jacked up, clearing the ground completely.
- (2) Put the center differential in LOCK position.
- (3) The parking brake lever should be fully released.
- (4) None of the brakes should be allowed to drag.
- (5) The wheels should be driven on the wheel balancer with the engine running.




HINT:

When doing this, be careful of the other wheels, which will rotate at the same time.

- (6) Avoid sudden acceleration, deceleration and braking.
- (7) Carry out the wheel balancing with the transmission in D position.

3. WHEN TOWING FULL-TIME 4WD VEHICLES

- Use one of the methods shown below to tow the vehicle.
- If the vehicle has trouble in the chassis and drive train, use method 1 (flat bed truck).

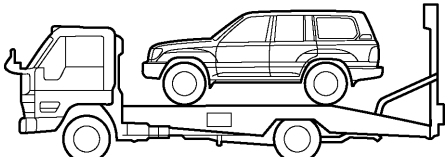

Towing Method Conditions	Parking Brake	Transsmission Shift Lever Position
1. Flat Bed Truck 	Applied	Any Position
2. Wheel Lift Type Truck From Front  From Rear 	Applied	Any Position

B04205

NOTICE:

Do not use any towing method other than those shown above.

For example, the towing methods shown below are dangerous or damage the vehicle, so do not use them.

NO 	• If this towing method is used, either from the front or rear, there is a danger of the drive train heating up and causing breakdown, or of the front wheels flying off the dolly. • Never tow the vehicle using a method where the lifted-up wheel cannot rotate.
NO 	• Do not use the sling type towing method, either from the front or rear, as this method causes damage to the body.

B04206

4. FOR VEHICLES EQUIPPED WITH A CATALYTIC CONVERTER**CAUTION:**

If large amount of unburned gasoline flows into the converter, it may overheat and create a fire hazard. To prevent this, observe the following precautions and explain them to your customer.

- (a) Use only unleaded gasoline.
- (b) Avoid prolonged idling.
Avoid running the engine at idle speed for more than 20 minutes.
- (c) Avoid spark jump test.
 - (1) Perform spark jump test only when absolutely necessary. Perform this test as rapidly as possible.
 - (2) While testing, never race the engine.
- (d) Avoid prolonged engine compression measurement.
Engine compression tests must be done as rapidly as possible.
- (e) Do not run engine when fuel tank is nearly empty.
This may cause the engine to misfire and create an extra load on the converter.
- (f) Avoid coasting with ignition turned off and prolonged braking.
- (g) Do not dispose of used catalyst along with parts contaminated with gasoline or oil.

5. IF VEHICLE IS EQUIPPED WITH MOBILE COMMUNICATION SYSTEM

For vehicles with mobile communication systems such as two-way radios and cellular telephones, observe the following precautions.

- (a) Install the antenna as far as possible away from the ECU and sensors of the vehicle's electronic system.
- (b) Install the antenna feeder at least 20 cm (7.87 in.) away from the ECU and sensors of the vehicle's electronic systems. For details about ECU and sensors locations, refer to the section on the applicable component.
- (c) Do not wind the antenna feeder together with the other wiring as much as possible, also avoid running the antenna feeder parallel with other wire harnesses.
- (d) Check that the antenna and feeder are correctly adjusted.
- (e) Do not install powerful mobile communications system.

6. FOR USING OBD II SCAN TOOL OR LEXUS HAND-HELD TESTER**CAUTION:**

Observe the following items for safety reasons:

- Before using the OBD II scan tool or LEXUS hand-held tester, the OBD II scan tool's instruction book or LEXUS hand-held tester's operator manual should be read thoroughly.
- Be sure to route all cables securely when driving with the OBD II scan tool or LEXUS hand-held tester connected to the vehicle. (i.e. Keep cables away from feet, pedals, steering wheel and shift lever.)
- Two persons are required when test driving with the OBD II scan tool or LEXUS hand-held tester, one person to drive the vehicle and the other person to operate the OBD II scan tool or LEXUS hand-held tester.

7. FOR VEHICLES EQUIPPED WITH POWER WINDOW CONTROL SYSTEM

When the battery is disconnected or the power to the window regulator motor is cut, the power window control system does not operate. It is necessary to initialize the system in the following procedures. Otherwise window cannot be operated normally.

- (1) Close window to the highest position.
- (2) Keep holding the switch for 5 seconds.
- (3) Check that automatic operation works. If not, repeat the above procedures.

8. FOR VEHICLES EQUIPPED WITH SLIDING ROOF SYSTEM

Sliding roof stop position might be required to be initialized when battery failures (such as battery disconnection, connector disconnection and the voltage drop) are detected while the system is in operation. This also occurs when rotating the motor with the battery disconnected. Sliding roof initialization can be done by the following procedures.

- (1) Operate the roof up to the maximum tilt position.
- (2) Release the switch, and push it again in the same direction. (After 10 seconds have elapsed, initialization begins.)
- (3) The roof starts automatic operation if holding the switch, completes full one cycle (tilt down, slide open, slide close and tilt up) of travel. Do not release the switch until the roof stops.
- (4) Check that the roof stops at the correct position.