


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is in ON or ACC position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.

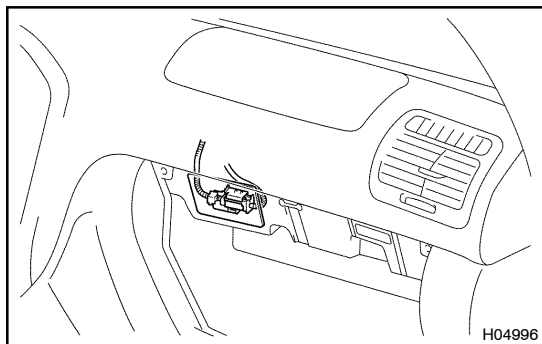


1. DISCONNECT AIRBAG CONNECTOR

- Remove the glove compartment door.
- Remove the No.1 under cover from the lower No.2 finish panel.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

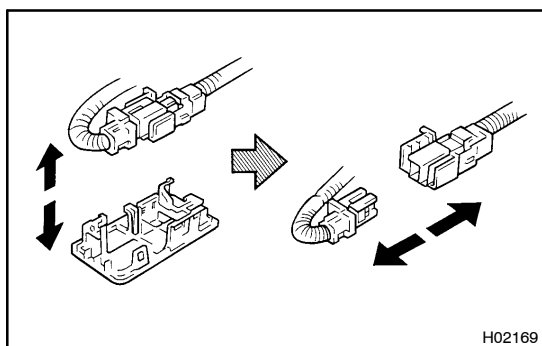


- Pull up the connector.
- Disconnect the front passenger airbag connector.

2. REMOVE INSTRUMENT PANEL

(See page [BO-96](#))

3. REMOVE THESE PARTS:

- Center bracket
- Defroster nozzle assembly
- No.5 heater to register duct
- No.2 side defroster nozzle duct

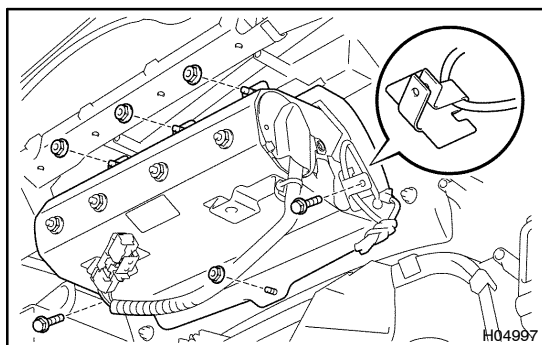

4. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- Remove the 2 bolts and airbag door straps.
- Remove the 4 nuts, then remove the front passenger airbag assembly.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment side facing downward.
- Never disassemble the front passenger airbag assembly.