



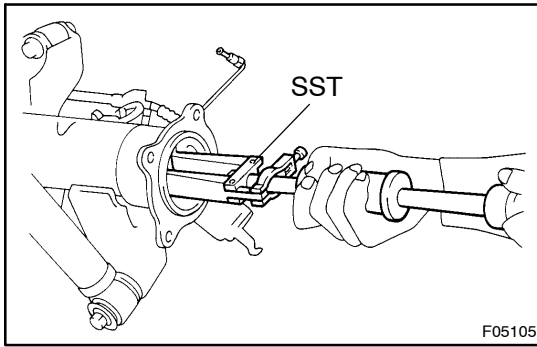

REPLACEMENT

REPLACE OIL SEAL (INNER SIDE)

- (a) Using SST, remove the oil seal.
SST 09308-00010

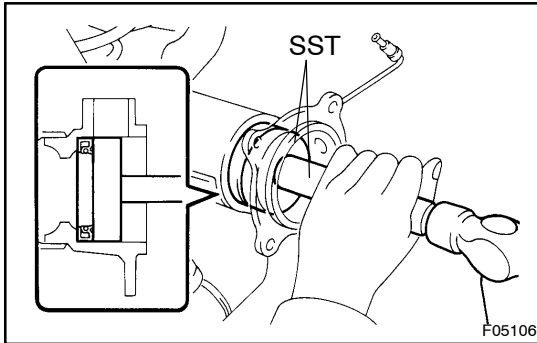

- (b) Using SST and a hammer, install a new oil seal.
SST 09950-60020 (09951-00710),
09950-70010 (09951-07150)
- (c) Coat MP grease to the oil seal lip.