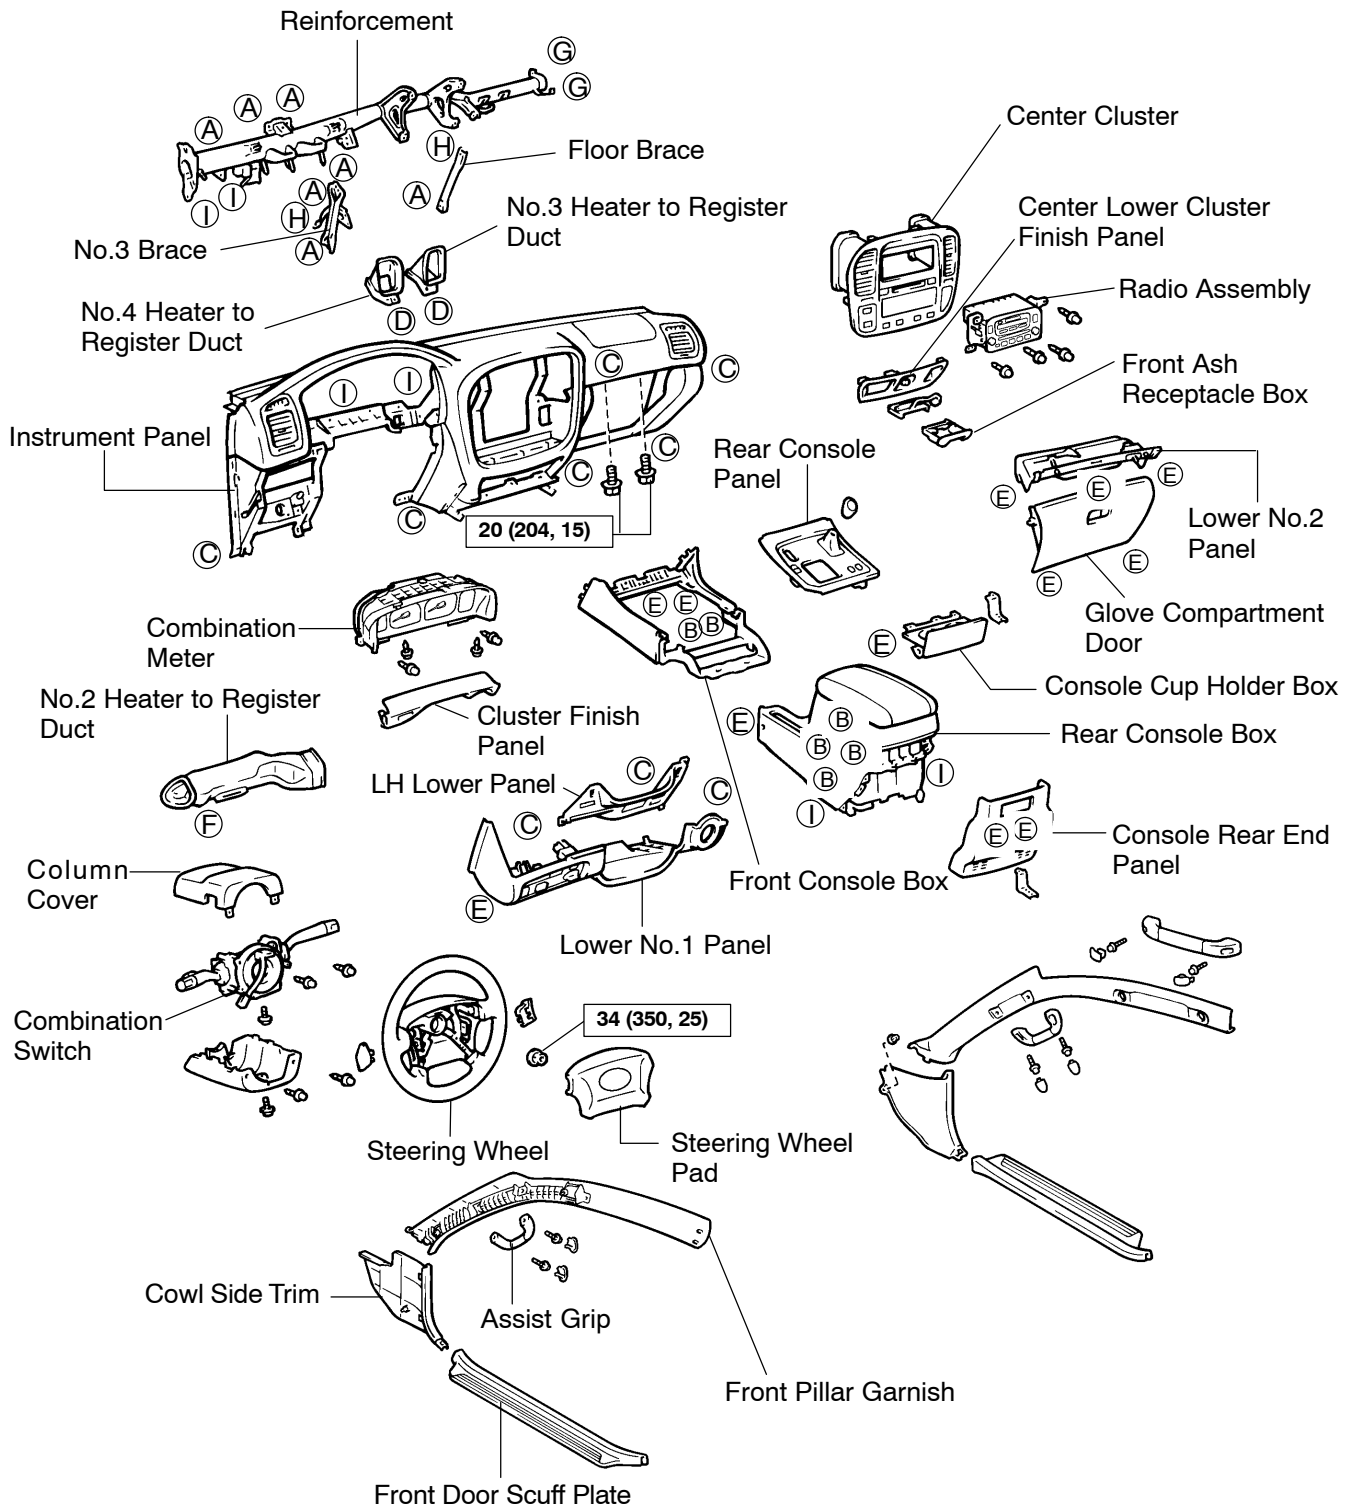


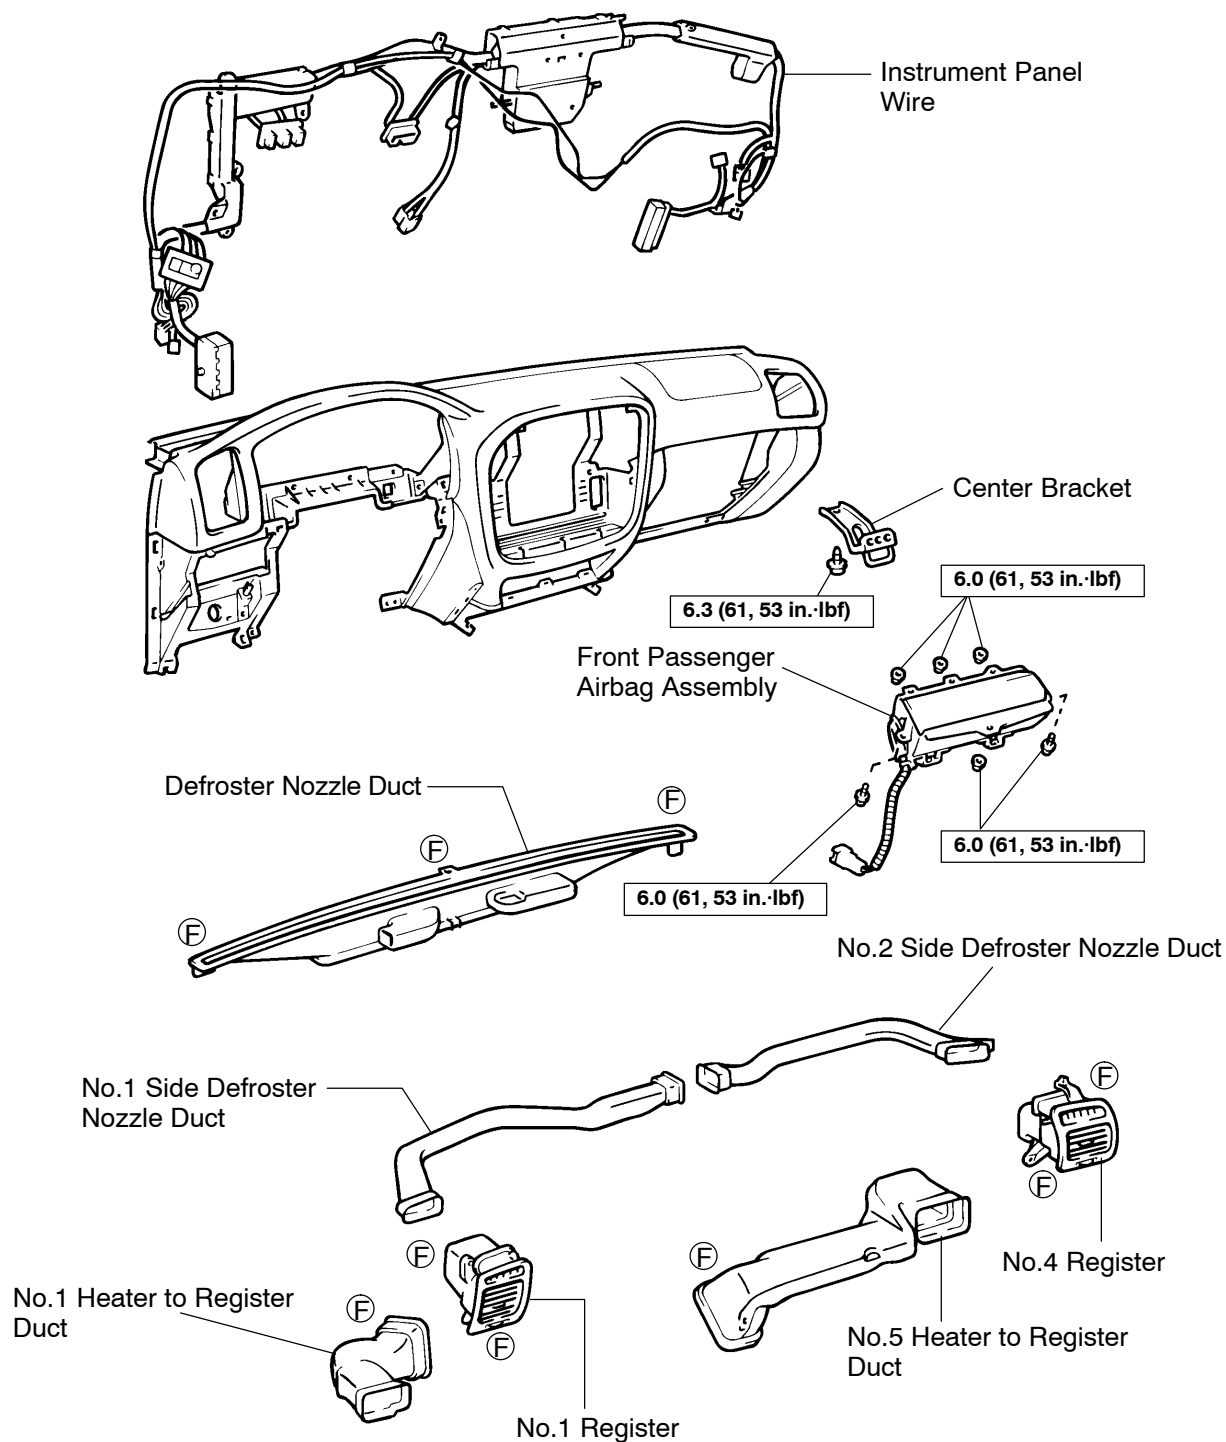
INSTRUMENT PANEL COMPONENTS

BO1ML-01



N·m (kgf·cm, ft·lbf) : Specified torque

H04386

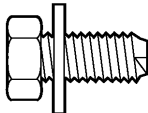
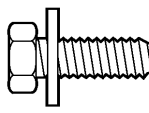

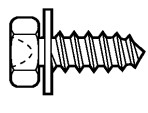
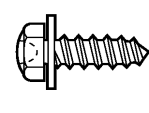

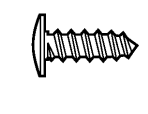
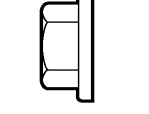



N·m (kgf·cm, ft·lbf) : Specified torque

H04819

HINT:

Screw shapes and size are indicated in the table below. The codes ("A" – "I") correspond to those indicated on the previous page.

mm (in.)								
	Shape	Size		Shape	Size		Shape	Size
Ⓐ		ø = 8 (0.31) L = 16 (0.63)	Ⓑ		ø = 6 (0.24) L = 18 (0.71)	Ⓒ		ø = 6 (0.24) L = 16 (0.63)
Ⓓ		ø = 6 (0.24) L = 16 (0.63)	Ⓔ		ø = 5 (0.20) L = 16 (0.63)	Ⓕ		ø = 5 (0.25) L = 14 (0.55)
Ⓖ		ø = 5 (0.20) L = 14 (0.55)	Ⓖ		ø = 8 (0.31)	Ⓖ		ø = 6 (0.24)

H04082