


## Door Courtesy Switch Circuit

### CIRCUIT DESCRIPTION

The door courtesy switch goes ON when the door is opened and goes OFF when the door is closed.

### WIRING DIAGRAM

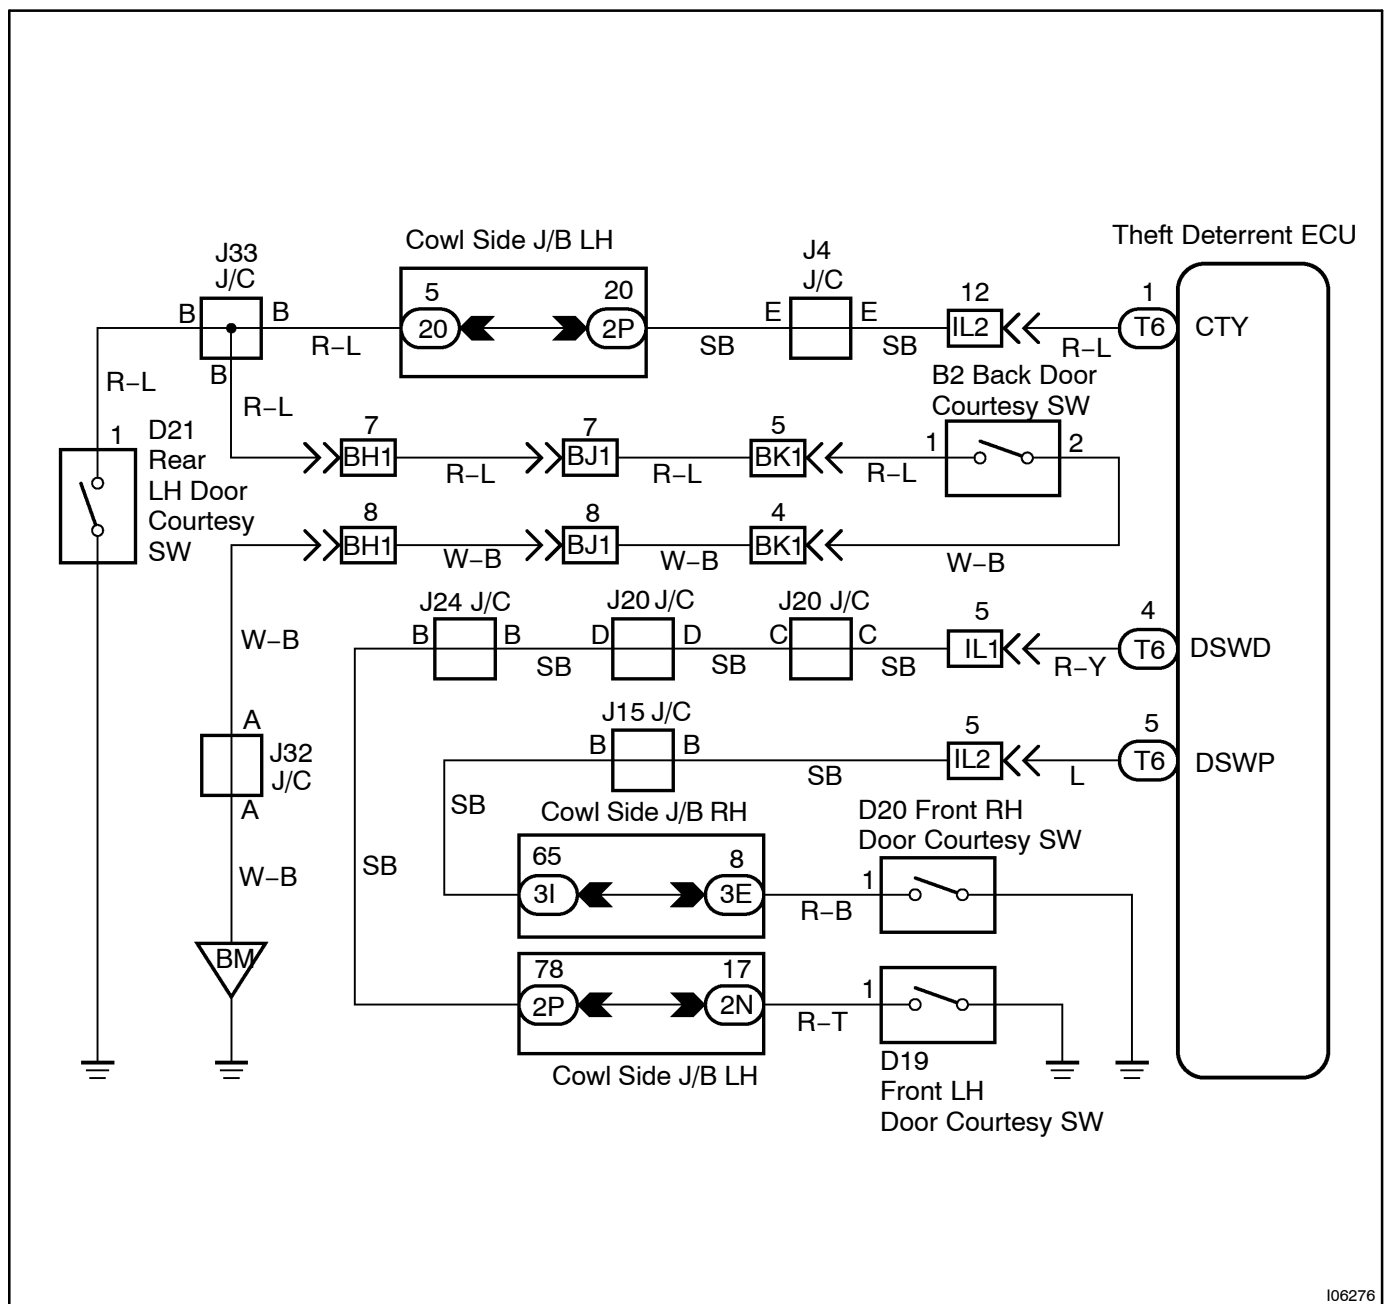

I06276

**INSPECTION PROCEDURE**

|          |                                                    |
|----------|----------------------------------------------------|
| <b>1</b> | <b>Check operation of open door warning light.</b> |
|----------|----------------------------------------------------|

**CHECK:**

Check that open door warning light comes ON when each door is opened, and goes OFF when all doors are closed.

**NG****Check and repair open door warning light circuit.****OK**

|          |                                                                                                                                       |
|----------|---------------------------------------------------------------------------------------------------------------------------------------|
| <b>2</b> | <b>Check for open in harness and connector between theft deterrent ECU and door courtesy switch (See page <a href="#">IN-33</a>).</b> |
|----------|---------------------------------------------------------------------------------------------------------------------------------------|

**NG****Repair or replace harness or connector.****OK****Check and replace theft deterrent ECU.\*1**

\*1: When there is a malfunction that the theft deterrent system cannot be set, proceed to the next numbered circuit inspection shown in problem symptom table (See page [DI-630](#)).