


Door lock control switch circuit

CIRCUIT DESCRIPTION

Door lock control switch circuit can be checked using DTC check. (Refer to [DI-798](#))

WIRING DIAGRAM

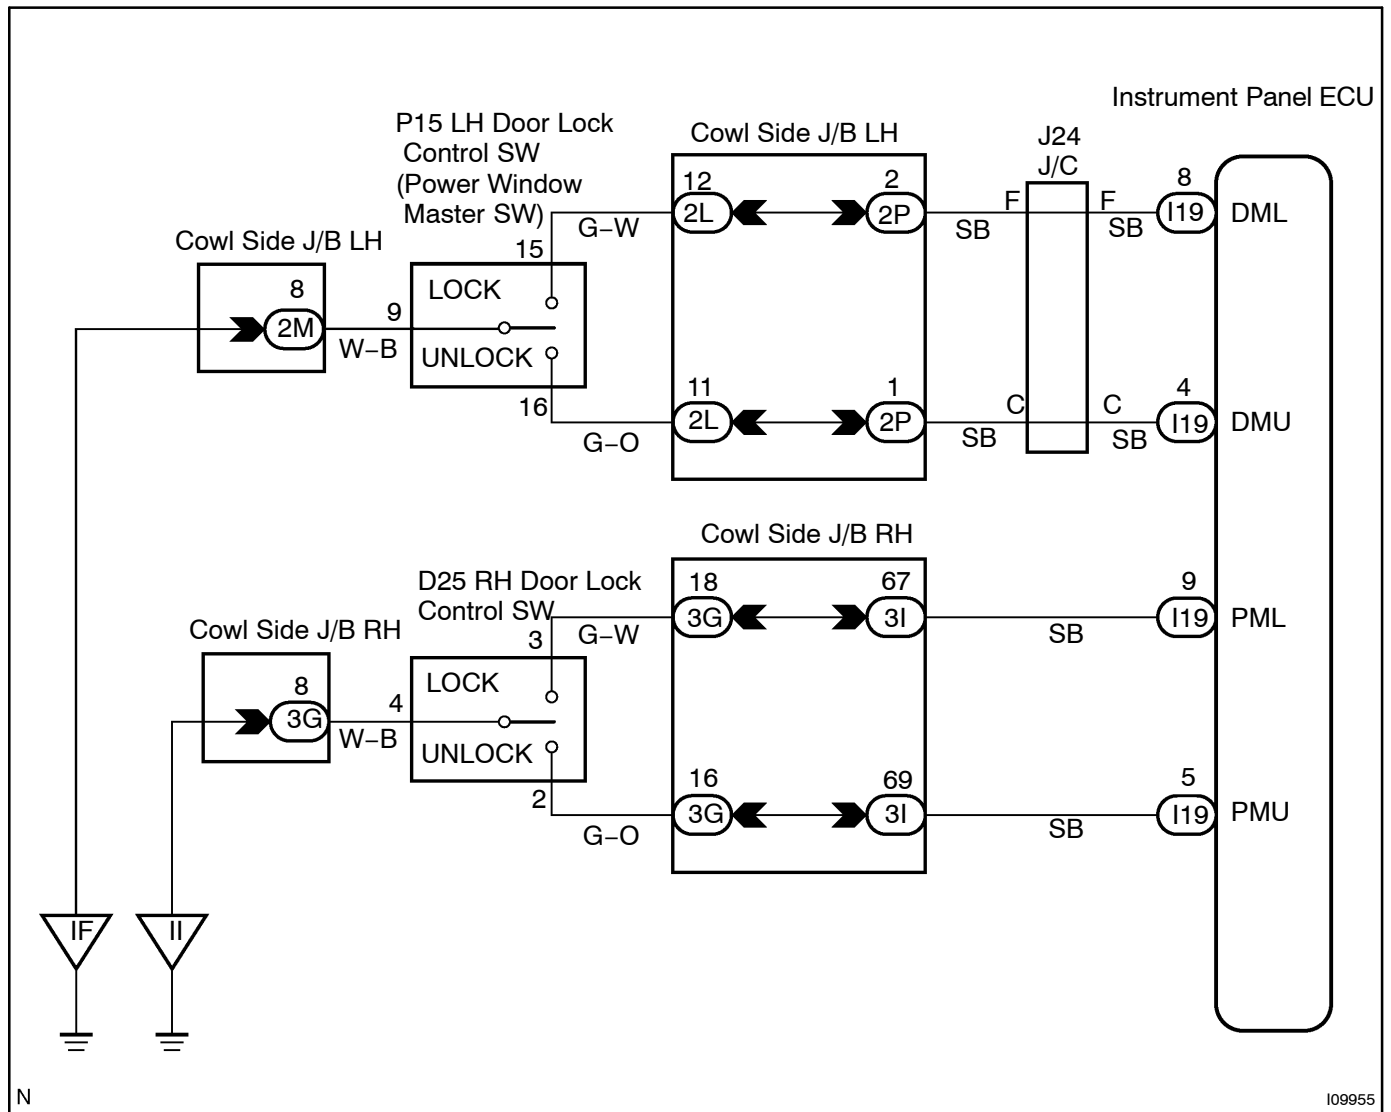

INSPECTION PROCEDURE

1 Check the door lock control switch (See page [BE-116](#)).

NG

Replace the door lock control switch.

OK

2 Check wireharness and connector between door lock control switch and Body ECU.

NG

Repair or replace wireharness or connector.

OK

3 Check wireharness and connector between door lock control switch and power window master switch.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-743](#)).