


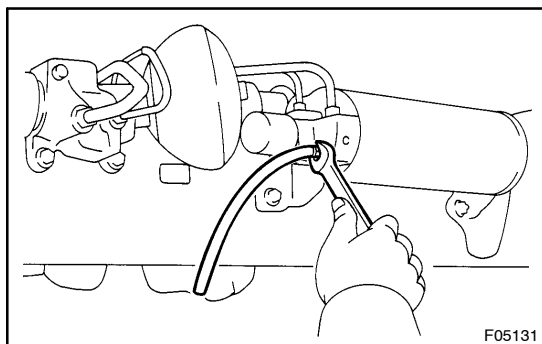


REMOVAL

1. DRAIN SUSPENSION FLUID AHC

- (a) Connect the hose to the bleeder plug for height control accumulator and loosen the bleeder plug.
- (b) After the fluid pressure has dropped and oil has drained out, tighten the bleeder plug and remove the hose.

Torque: 6.9 N·m (70 kgf·cm, 61 in·lbf)

2. REMOVE FRONT FENDER APRON

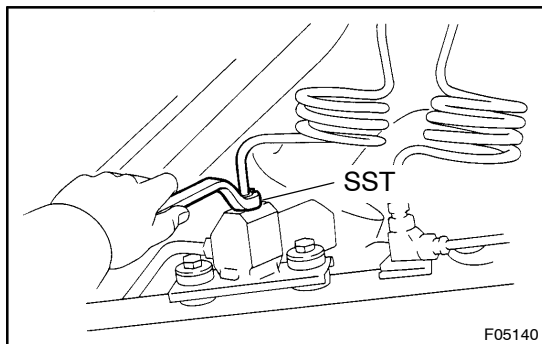


3. REMOVE PUMP ATTENUATOR

- (a) Using SST, disconnect the inlet fluid line from the pump attenuator.

SST 09751-36011

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

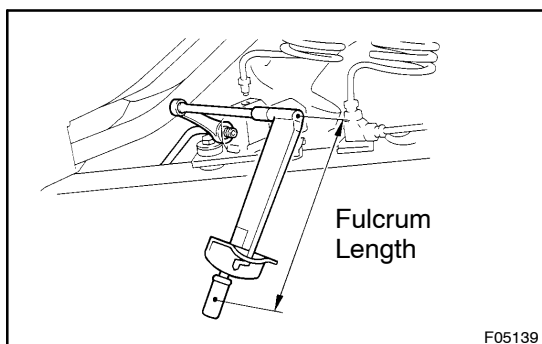

- (b) Using SST, disconnect the outlet fluid line from the pump attenuator.

SST 09631-22020

Torque: 24 N·m (245 kgf·cm, 18 ft·lbf)

HINT:

At the time of installation, please refer to the following items.

- Use a torque wrench with a fulcrum length of 300 mm (11.81 in.).
 - This torque value is effective in case that SST is parallel to a torque wrench.
- (c) Remove the 2 bolts and pump attenuator.
- Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)**
- (d) Remove the 2 collars and cushions.