

REMOVAL


1. REMOVE THESE PARTS:

(See page [BO-26](#))

- (a) Assist grip plugs
- (b) Assist grip
- (c) Inside handle bezel
- (d) Center back door garnish
- (e) Back door garnish

2. REMOVE REAR WIPER ARM

(See page [BO-52](#))

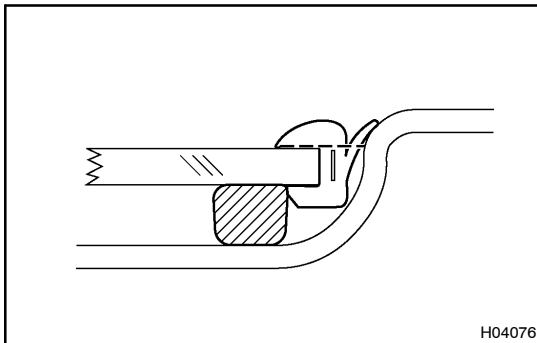


H04076

3. REMOVE BACK WINDOW OUTSIDE MOULDING

Using a knife, cut off the moulding as shown.

NOTICE:

Do not damage the body with the knife.

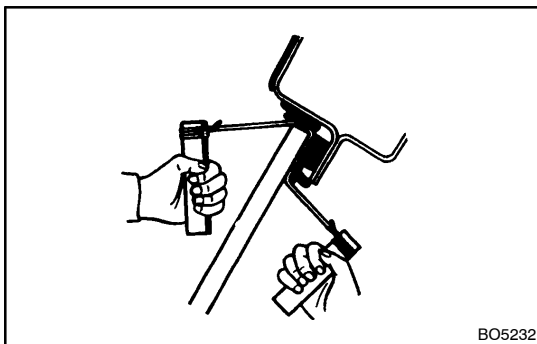


BO5232

4. REMOVE BACK DOOR GLASS

- (a) Disconnect the connector.
- (b) Push piano wire through between the body and glass from the interior.
- (c) Tie both wire ends to wooden blocks or similar object.

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.

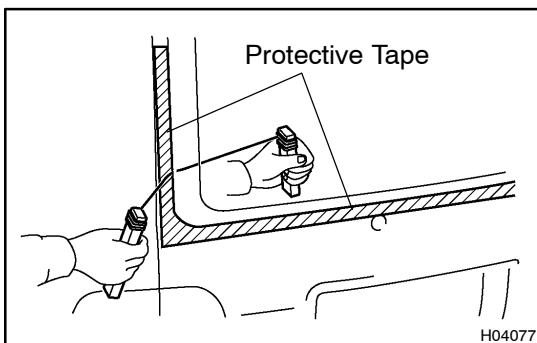

H04077

NOTICE:

When separating the glass, take care not to damage the paint and exterior ornaments.

- (d) Cut the adhesive by pulling the piano wire around it.
- (e) Remove the glass.

NOTICE:

Leave as much of the adhesive on the body as possible when cutting off the glass.