



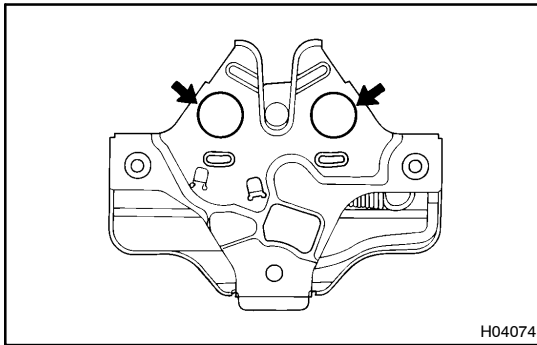

INSTALLATION

1. BEFORE INSTALLING PARTS, COAT LOCK WITH MP GREASE

Apply MP grease to the sliding surface of the lock.

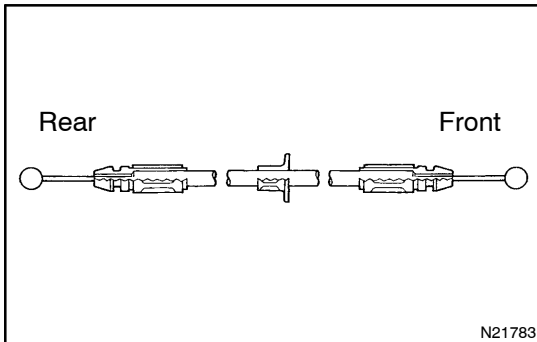

2. INSTALL HOOD LOCK CONTROL CABLE

- (a) Push the rear side cable through the grommet.
- (b) Using a screwdriver, push the cable stopper into the grommet.

HINT:

- Tape the screwdriver tip before use.
 - Do not damage the grommet with the screwdriver.
- (c) Pass the front side cable through the upper radiator support.
 - (d) Install the cable with clamps.

3. INSTALL HOOD RELEASE LEVER

4. CHECK HOOD LOCK CONTROL FOR PROPER OPERATION

After checking for proper operation, tighten the 2 bolts and nut to install the lock.

Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)

5. INSTALL FENDER LINER