


DTC	C1340 / 47	Center Differential Lock Circuit
------------	-------------------	---

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1240 / 47	Open or short circuit in center differential lock circuit.	- Center differential lock system - Center differential lock circuit

WIRING DIAGRAM

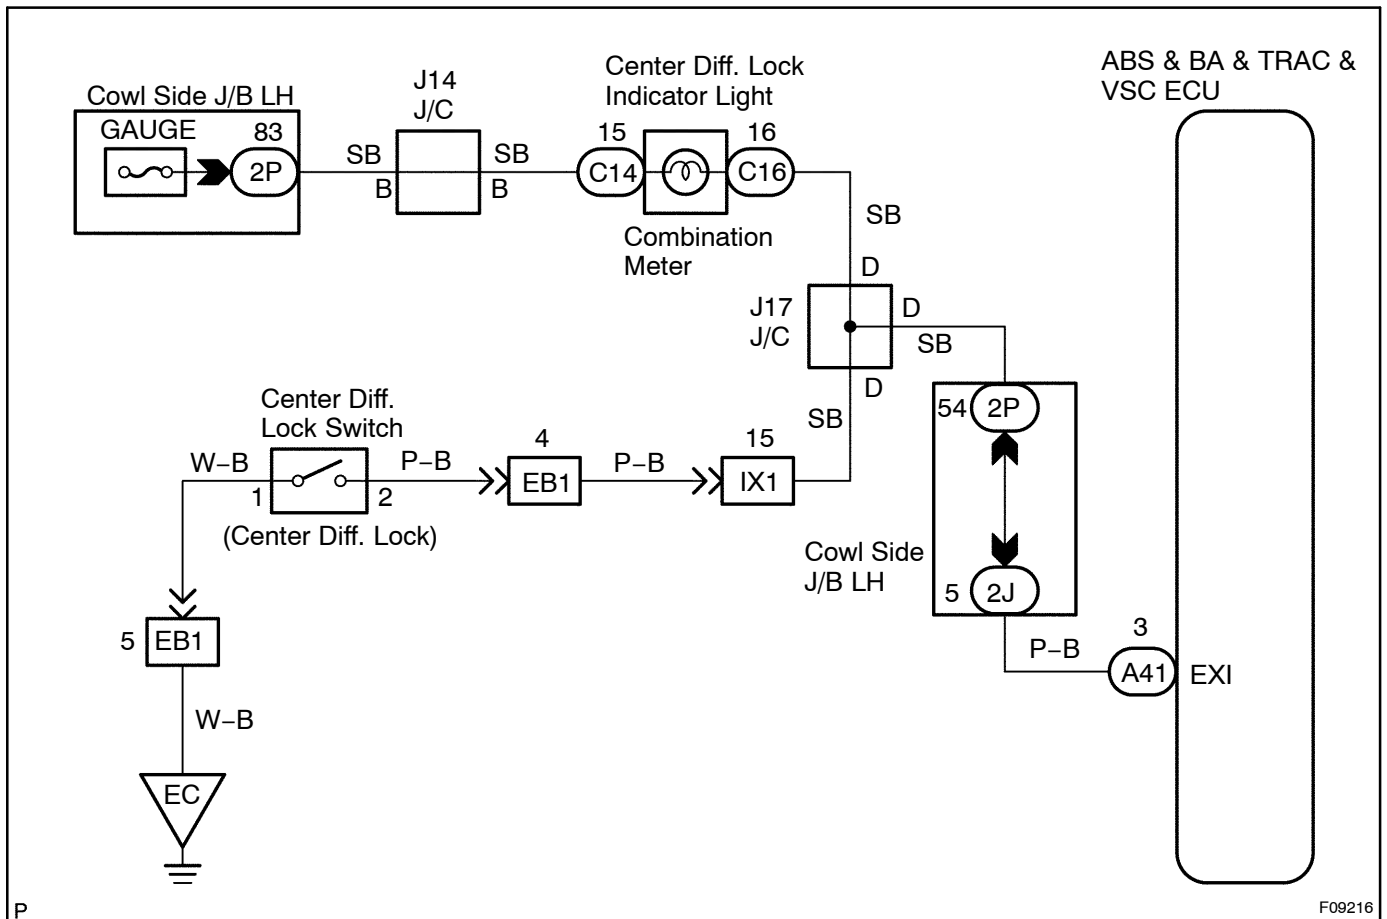

INSPECTION PROCEDURE

1 Check the center differential is free and center diff. lock switch is OFF.

NG

Repair the center differential lock system.

OK

2 Is DTC output?

Check DTC on page [DI-308](#).

NO

Normal.

YES

3 Check that bulb for center diff. lock indicator light is not burnt out.

YES

Replace indicator light.

NO

4 Check for open circuit in harness and connector between battery and center diff. lock indicator light, center diff. lock indicator light and ABS & BA & TRAC & VSC ECU (See page [IN-34](#)).

NG

Repair or replace harness or connector.

OK

Check and replace ABS & BA & TRAC & VSC ECU.