

Pattern Select Switch Circuit (2nd Start Switch) & 2nd Start Switch Indicator Light Circuit


CIRCUIT DESCRIPTION

When 2nd start mode is selected with the pattern select switch, the ECM controls the solenoid valves and the transmission starts from 2nd gear.

In D position, the transmission automatically shifts up through 3rd to O/D as usual.

In 2nd position, the transmission is held in 2nd gear.

WIRING DIAGRAM

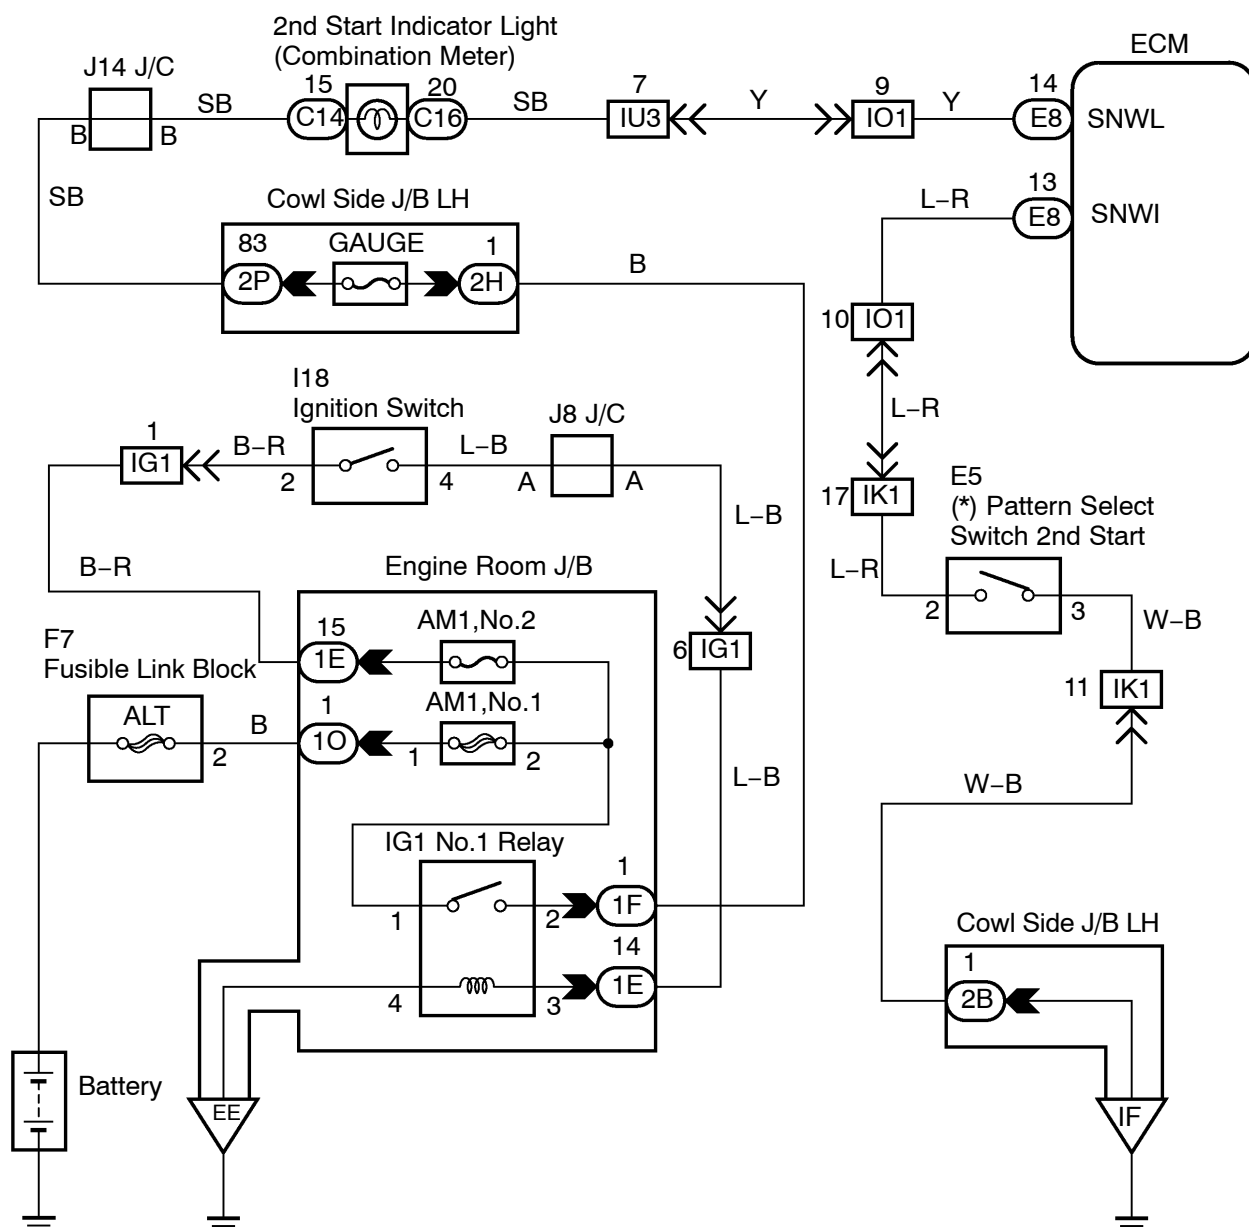

(*) Pattern Select Switch (2nd Start Switch)

When the 2nd start switch is pushed, the switch contact is made and the 2nd mode is selected.


To cancel the 2nd start, push the 2nd start switch once again. The 2nd start is automatically cancelled out when the ignition switch is turned OFF.

N

D10599

INSPECTION PROCEDURE

1	Check operation of 2nd start switch.
---	--------------------------------------

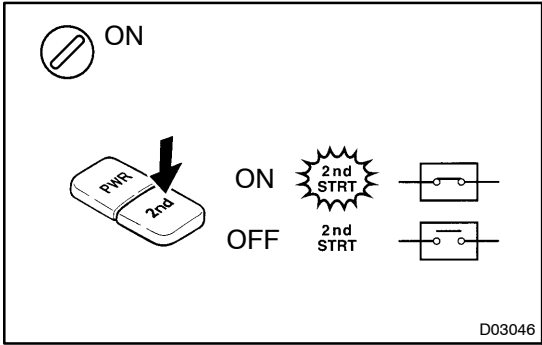

PREPARATION:

Turn the ignition switch ON.

CHECK:

- Check "2nd STRT" indicator light when 2nd start switch is pushed in to ON.
- Check "2nd STRT" indicator light when 2nd start switch is pushed again, or PWR mode switch is pushed into ON.

OK:

- "2nd STRT" indicator light lights up.
- "2nd STRT" indicator light goes off. When PWR mode switch is pushed in to ON, "2nd STRT" indicator light goes off, and "PWR" indicator light lights up.

OK

Proceed to next circuit inspection shown on matrix chart (See page [DI-161](#)).

NG


2	Check 2nd start indicator bulb.
---	---------------------------------

NG

Replace the 2nd start indicator bulb.

OK

3	Check 2nd start switch.
---	-------------------------

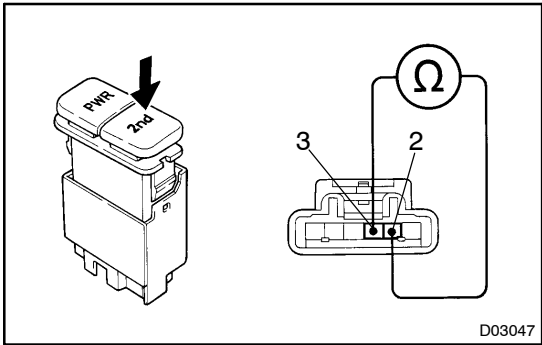

PREPARATION:

Disconnect the pattern select switch connector.

CHECK:

Check continuity between terminals 2 and 3 of pattern select switch connector when pattern select switch is set to 2nd start switch ON and OFF.

OK:

2nd start switch	Specified condition
Press continuously "2nd" switch	Continuity
Release "2nd" switch	No continuity


NG

Replace the 2nd start indicator bulb.

OK

4

Check voltage between terminal SNWL and SNWI of ECM and body ground.

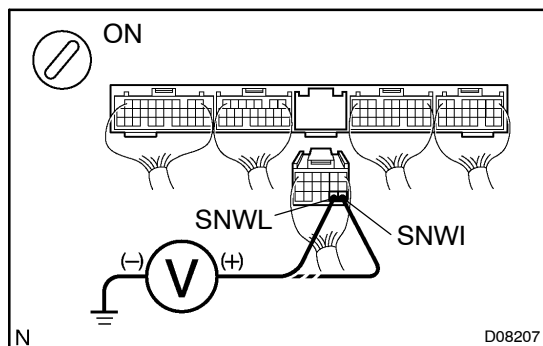**PREPARATION:**

- (a) Turn the ignition switch ON.
- (b) Disconnect the connector of ECM.

CHECK:

Check voltage between terminal SNWI of ECM and body ground when the select switch is set to 2nd start switch ON and OFF.

OK:

2nd start switch	Voltage
ON	9 ~ 14 V
OFF	Below 1.5 V

CHECK:

Check voltage between terminal SNWL of ECM and body ground.

OK:

Voltage: 7.5 ~ 14 V

OK

Check and replace the ECM (See page [IN-34](#)).

NG

Check and replace harness and connector between battery and pattern select switch, pattern select switch and ECM, battery and 2nd start indicator light, 2nd start indicator light and ECM (See page [IN-34](#)).