

REMOVAL

NOTICE:

Remove the steering wheel assembly before the steering gear removal, because there is possibility of breaking of the spiral cable.


1. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
2. **REMOVE STEERING WHEEL PAD**
(See page [SR-12](#))
3. **REMOVE STEERING WHEEL**
(See page [SR-12](#))
4. **REMOVE NO. 1 ENGINE UNDER COVER**
Remove the 7 bolts.
5. **REMOVE NO. 2 ENGINE UNDER COVER**
Remove the 6 bolts.
6. **DISCONNECT RH AND LH TIE ROD ENDS**
(See page [SA-18](#))
7. **REMOVE ENGINE OIL FILTER ASSEMBLY**
 - (a) Disconnect the 2 clips and hoses.
 - (b) Remove the 2 bolts and nut with the bracket.
 - (c) Remove the O-ring.
8. **DISCONNECT NO. 2 INTERMEDIATE SHAFT ASSEMBLY**
(See page [SR-12](#))

HINT:

Turn the steering wheel fully to the right side.

9. DISCONNECT PRESSURE FEED TUBE

Remove the union bolt, gasket and disconnect the pressure feed tube.

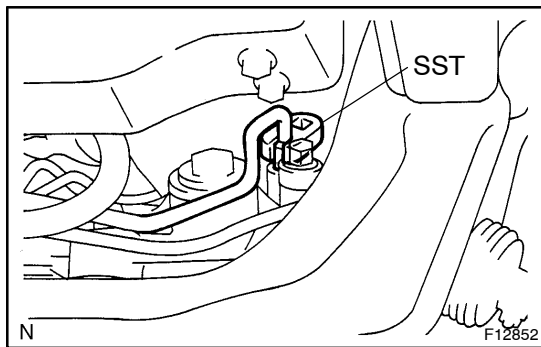

10. DISCONNECT RETURN TUBE

Using SST, disconnect the tube.


SST 09023-38400

11. REMOVE BRACKET AND GROMMET

Remove the 2 bolts.


12. DISCONNECT TUBE CLAMP

Remove the bolt.

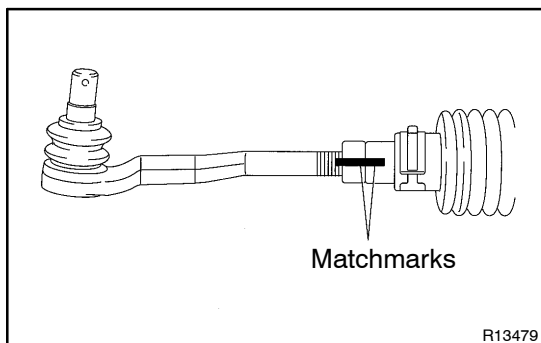

13. REMOVE RH AND LH TIE ROD ENDS AND LOCK NUTS

- (a) Place matchmarks on the tie rod end and rack end.
- (b) Loosen the lock nut, and remove the tie rod end and lock nut.
- (c) Employ the same manner described above to the other side.

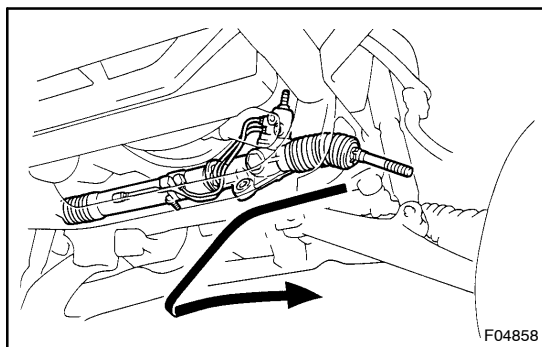**14. REMOVE PS GEAR ASSEMBLY**

Remove the 2 gear assembly set bolts, nut and washers.

HINT:

Slide the gear assembly to the right side, pull out the left side of the gear assembly from the member.