


DTC	C1254 / 54	Pressure Switch Circuit
------------	-------------------	--------------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1254 / 54	Either of the following 1. or 2. is detected: - After turning the ignition switch ON, short or open circuit in pressure switch (PL) continued for more than 1 sec. - After turning the ignition switch ON open in pressure switch (PH) continued for more than 1 sec.	- Pressure switch (PH or PL) - Pressure switch circuit


WIRING DIAGRAM

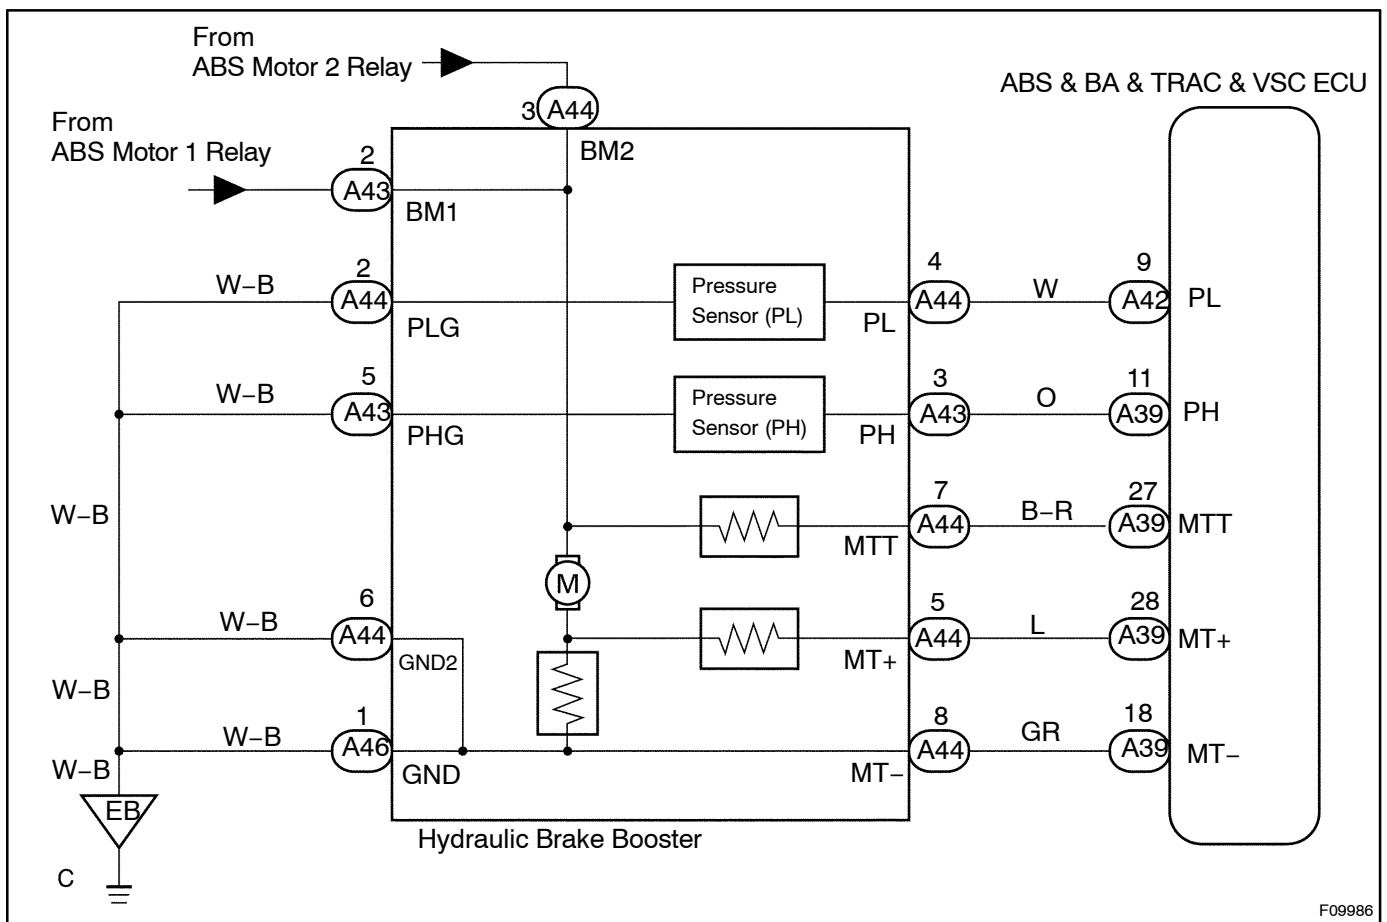

F09986

INSPECTION PROCEDURE

1 Check pressure switch (PL) resistance.

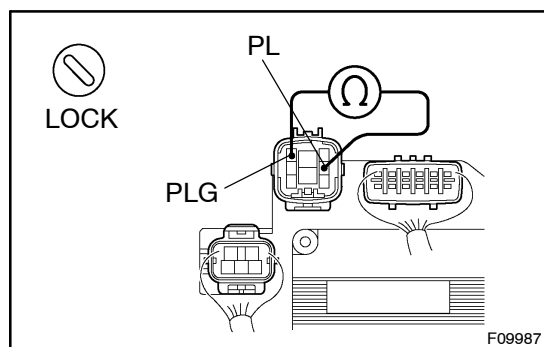**PREPARATION:**

- Disconnect the connector (8P) from the hydraulic brake booster.
- With ignition switch OFF, depress the brake pedal more than 40 times to decrease the accumulator pressure.

HINT:

When a pressure in power supply system is released, reaction force becomes light and stroke becomes longer.

CHECK:

Measure resistance between terminals PL and PLG of hydraulic brake booster connector.

OK:


Resistance: 5.1 – 6.3 kΩ

HINT:

After inspection, connect the connector and clear the DTC (See page [DI-326](#)).

NG**Replace hydraulic brake booster assembly.****OK**

2 Check pressure switch (PH) resistance.

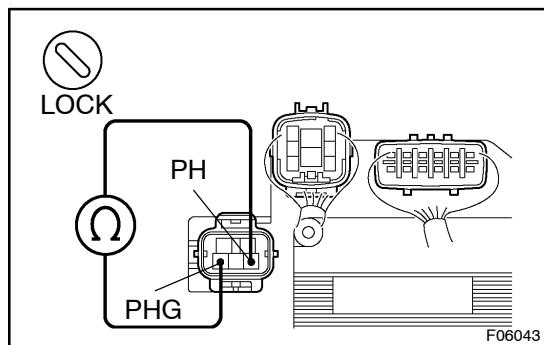

PREPARATION:

- Disconnect the connector (5P) from the hydraulic brake booster.
- With ignition switch OFF, depress the brake pedal more than 40 times to decrease the accumulator pressure.

HINT:

When a pressure in power supply system is released, reaction force becomes light and stroke becomes longer.

CHECK:

Measure resistance between terminals PH and PHG of hydraulic brake booster connector.

OK:

Resistance: 0.9 – 1.1 kΩ

HINT:

After inspection, connect the connector and clear the DTC (See page [DI-326](#)).

NG

Replace hydraulic brake booster assembly.

OK

3 Check for open and short circuit in harness and connector between pressure switch and ABS & BA & TRAC & VSC ECU (See page [IN-34](#)).

NG

Repair or replace harness or connector.

OK

Check and replace ABS & BA & TRAC & VSC ECU.