


DTC	47	Rear Air Mix Damper Control Servomotor Circuit
------------	-----------	---

CIRCUIT DESCRIPTION

The rear air mix damper control servomotor is controlled by the A/C control assembly and moves the air mix damper to the desired position.

DTC No.	Detection Item	Trouble Area
47	Air mix damper position sensor value does not change even if A/C control assembly operates air mix damper control servomotor.	• Rear air mix damper control servomotor • Rear air mix damper position sensor • Harness or connector between rear air mix control servomotor and rear A/C amplifier • Rear A/C amplifier

WIRING DIAGRAM

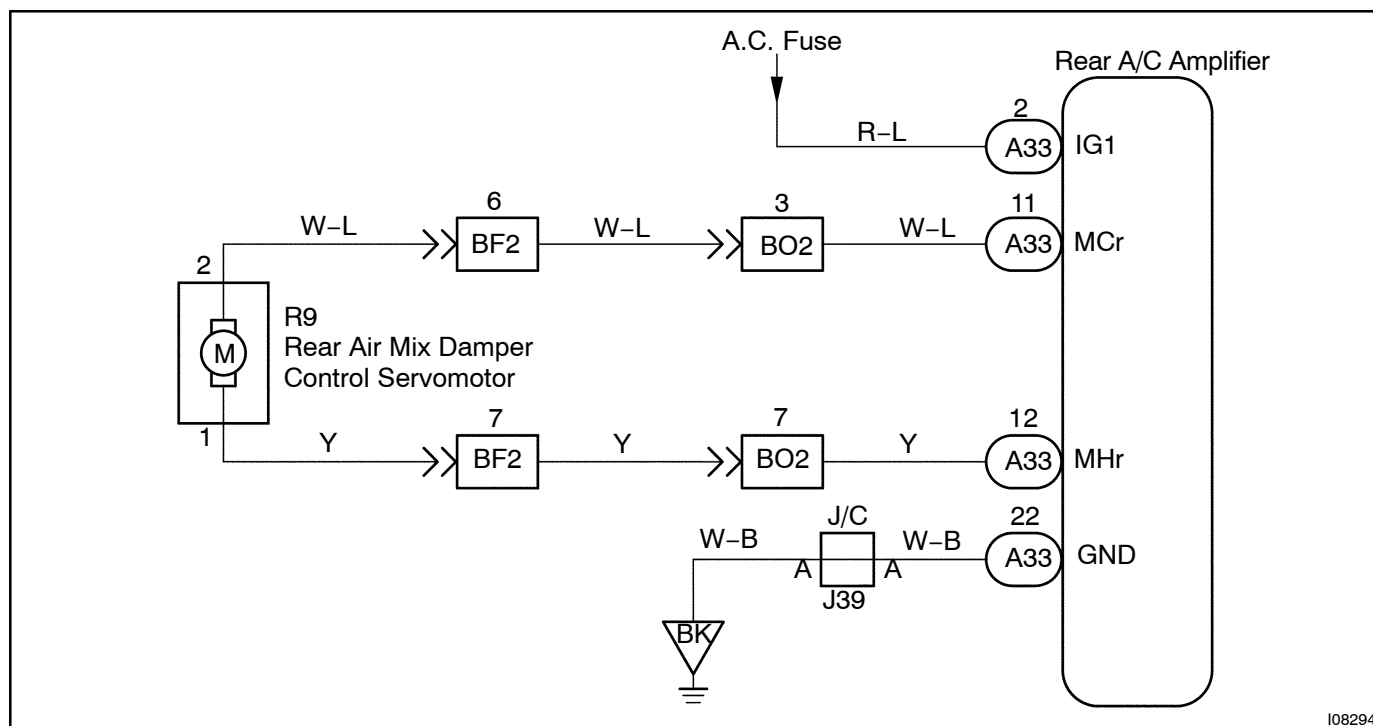

I08294

INSPECTION PROCEDURE

HINT:

In case of w/ Navigation system, start the inspection step 1 and in case of w/o Navigation system, start the inspection step 2.

1	Actuator check.
---	------------------------

PREPARATION:

- (a) Warm up the engine.
- (b) Set the actuator check mode (See page [DI-943](#)).
- (c) Press the UPDr switch and change it to step operation.

CHECK:

Press the UPDr switch and check the operation of the air mix damper and the condition of the blower.

OK:


Display Code	Air Mix Damper	Condition
0 – 3	0 % (Fully closed)	Cool air comes out
4 – 5	50 %	
6 – 9	100 % (Full opened)	Warm air comes out

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-956](#)).

NG

2	Check rear air mix damper control servomotor.
---	--

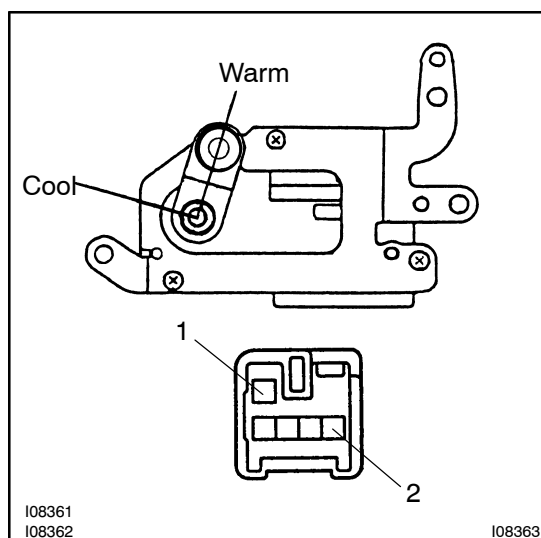

PREPARATION:

Remove the rear air mix damper control servomotor (See page [AC-49](#)).

CHECK:

Connect positive (+) lead to terminal 1 and negative (-) lead to terminal 2.

OK:

The lever turns smoothly to Warm side.

CHECK:

Connect positive (+) lead to terminal 2 and negative (-) lead to terminal 1.

OK:

The lever turns smoothly to Cool side.

NG

Replace rear air mix damper control servomotor assembly.

OK

3

Check harness and connector between rear A/C amplifier and rear air mix damper control servomotor assembly (See page [IN-34](#)).

NG

Repair or replace harness or connector.

OK

Check and replace rear A/C amplifier.