


Stop light switch circuit

CIRCUIT DESCRIPTION

The Body ECU is detecting the condition of the stop light switch.

WIRING DIAGRAM

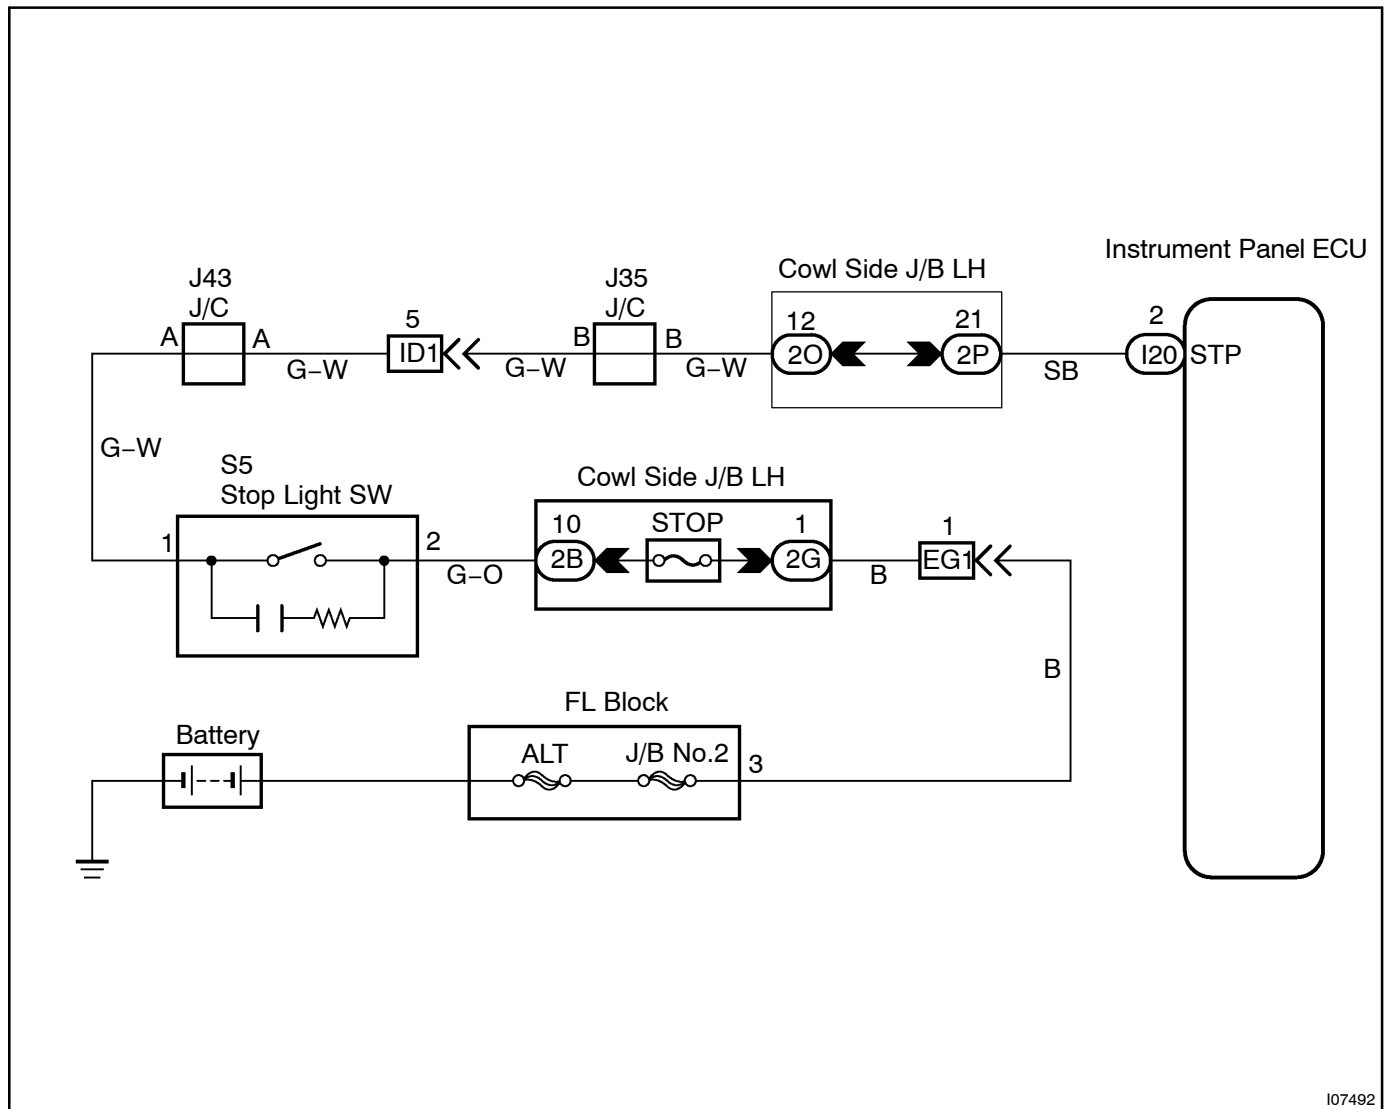

I07492

INSPECTION PROCEDURE

1 Check stop light switch (See page [BE-60](#)).

NG

Replace the stop light switch.

OK

2 Check wireharness and connector between stop light switch and Body ECU, battery and stop light switch.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-766](#)).