



ADJUSTMENT

1. ADJUST DOOR IN FORWARD / REARWARD AND VERTICAL DIRECTIONS

- Remove the front door scuff plate.
- Remove the rear door scuff plate.
- Remove the front door opening trim.
- Remove the rear door opening trim.
- Remove the center pillar lower garnish.

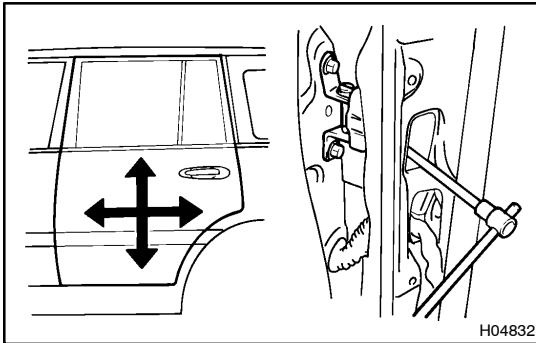


- Loosen the body side hinge nuts to adjust them.
Torque: 23 N·m (235 kgf·cm, 17 ft·lbf)
- Install the removed parts.

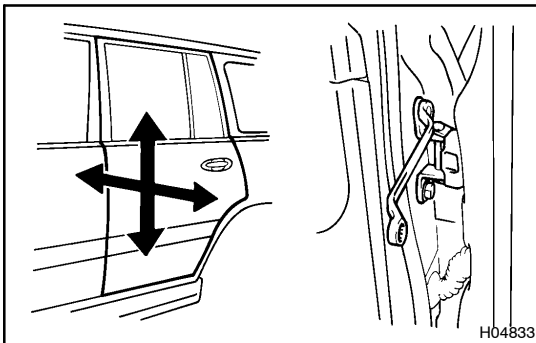

2. ADJUST DOOR IN LEFT / RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust them.

Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)

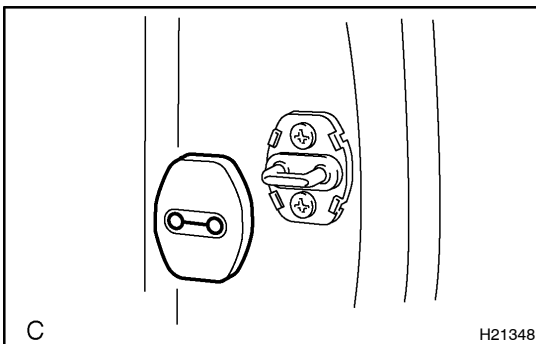


3. ADJUST DOOR LOCK STRIKER

- Using a screwdriver, remove the door lock striker cover.

HINT:

Tape up the screwdriver tip before use.

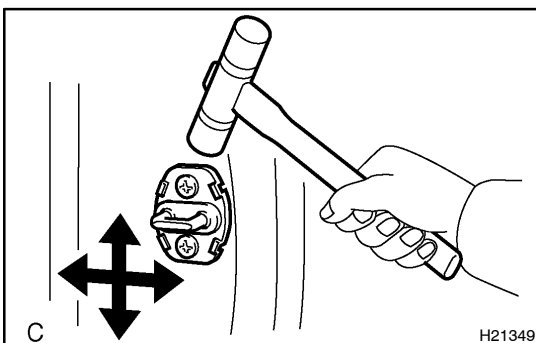

- Check that the door fits, and door lock linkages are adjusted correctly.
- Loosen the striker mounting screws.
Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)
- Using a plastic hammer, tap the striker to adjust it.