



REMOVAL

1. REMOVE TRANSFER SHIFT LEVER KNOB
2. REMOVE UPPER CONSOLE PANEL
(See page [BO-104](#))

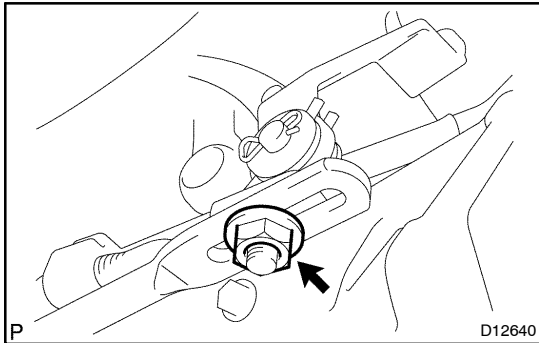

3. SEPARATE NO. 1 FLOOR SHIFT GEAR SHIFTING ROD
 - (a) Shift into the N position.
 - (b) Remove the nut and separate the No. 1 floor shift gear shifting rod from the connecting rod swivel.

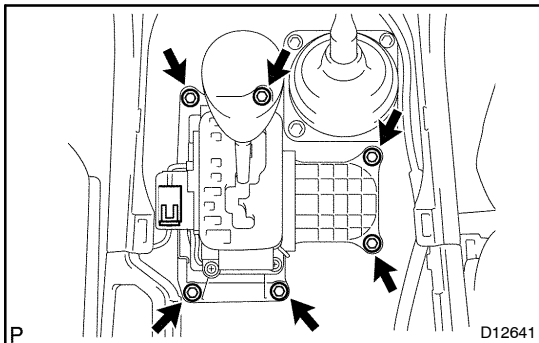

4. REMOVE FLOOR SHIFT LEVER ASSEMBLY
 - (a) Disconnect the connector.
 - (b) Remove the 6 bolts.
Torque: 8.3 N·m (85 kgf·cm, 73 in.·lbf)
 - (c) Remove the floor shift lever assembly.