



PARKING LOCK PAWL ON-VEHICLE REPAIR

AT11Q-01


1. REMOVE VALVE BODY (See page [AT-8](#))

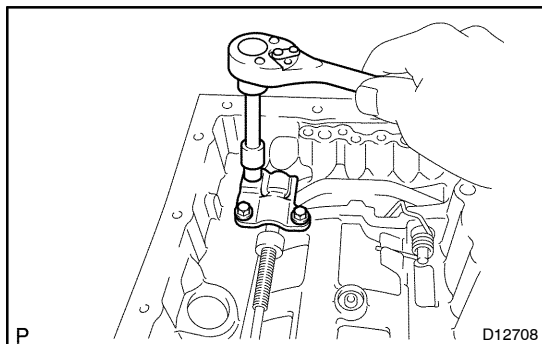


2. REMOVE PARKING LOCK PAWL BRACKET

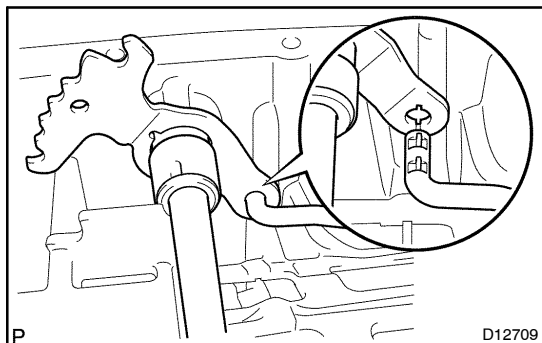

3. REMOVE PARKING LOCK ROD

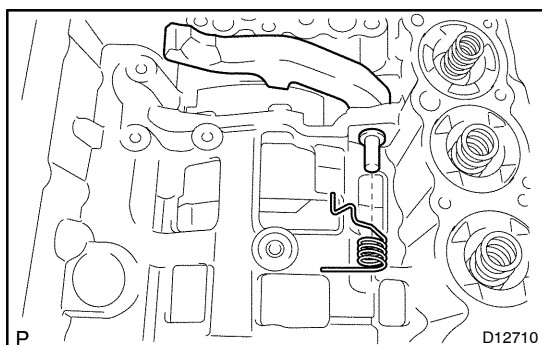

4. REMOVE SPRING FROM PARKING LOCK PAWL SHAFT
5. REMOVE PARKING LOCK PAWL AND SHAFT
6. INSTALL PARKING LOCK PAWL AND SHAFT
7. INSTALL SPRING TO PARKING LOCK PAWL SHAFT

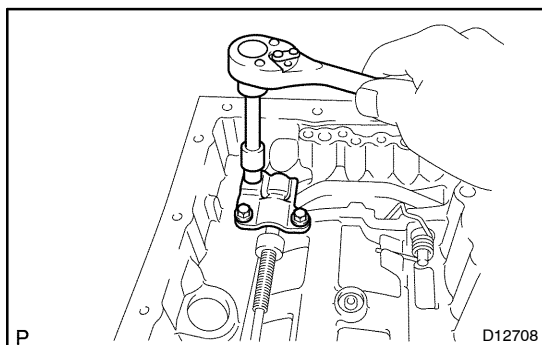

8. INSTALL PARKING LOCK PAWL BRACKET

HINT:

- Push the lock rod fully forward.
 - Check that the parking lock pawl operates smoothly.
- Torque: 7.4 N·m (75 kgf·cm, 65 in.·lbf)**
9. INSTALL VALVE BODY (See page [AT-8](#))