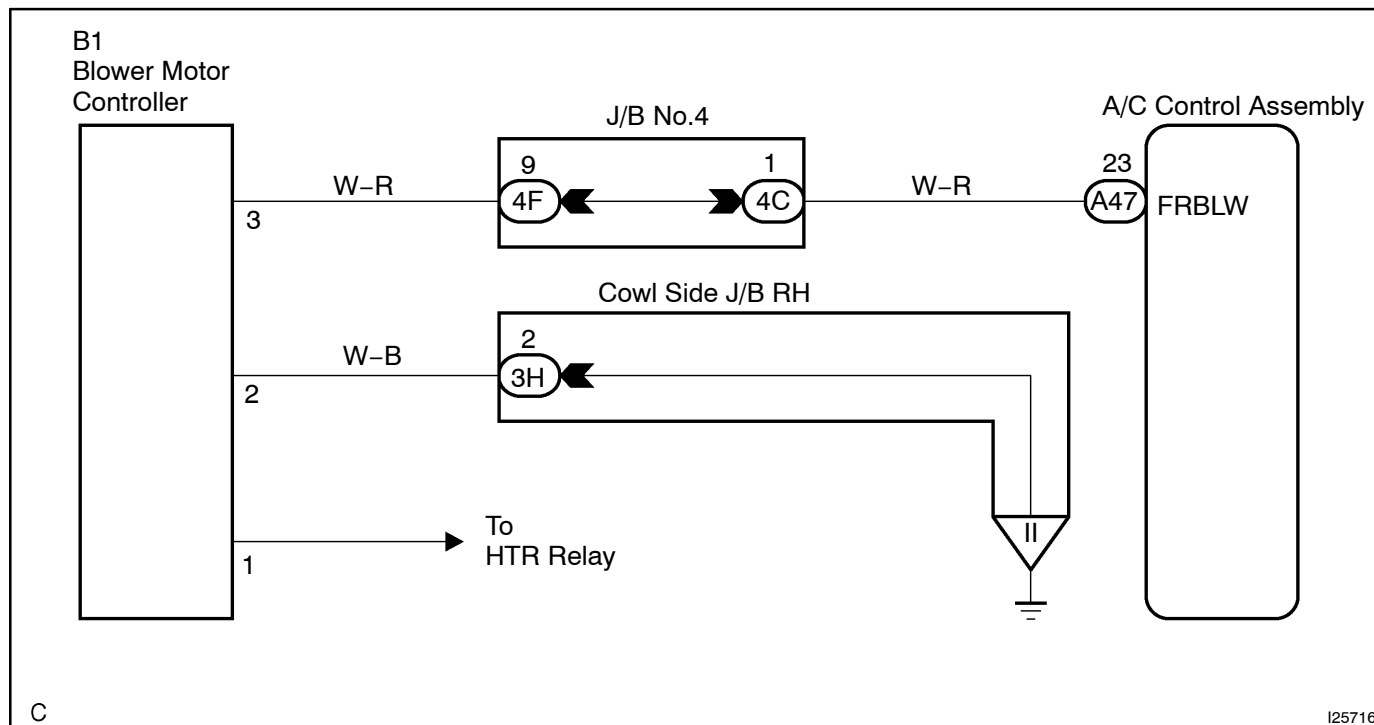


Blower Motor Circuit

CIRCUIT DESCRIPTION

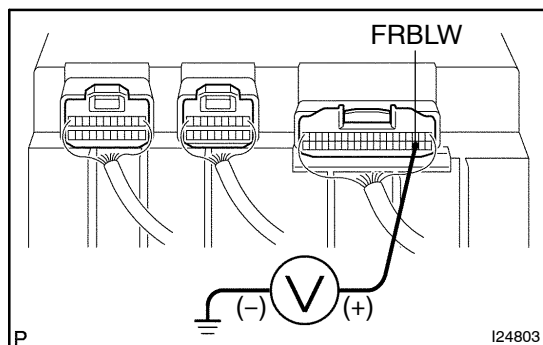
This is the power source for the blower motor.

WIRING DIAGRAM



INSPECTION PROCEDURE

1	Check voltage between terminal FRBLW of A/C amplifier and body ground.
---	---

**PREPARATION:**

Remove the A/C amplifier with connector still connected.

CHECK:

- (a) Turn ignition switch to ON.
- (b) Operate blower motor.
- (c) Measure voltage between terminal FRBLW of A/C amplifier and body ground.

OK:

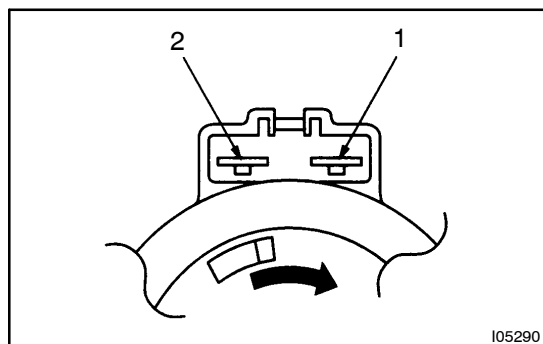
Voltage : Battery voltage

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1758](#)).

NG

2	Check blower motor.
---	----------------------------

**PREPARATION:**

Remove blower motor (See page [AC-80](#)).

CHECK:

Connect the positive (+) lead from the battery to terminal 2 of blower motor connector and the negative (-) lead to terminal 1.

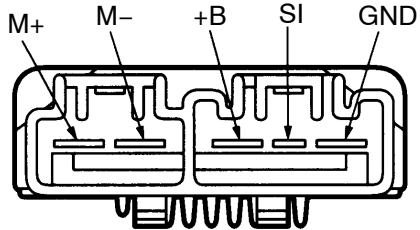
OK:

Blower motor operates smoothly.

NG

Replace blower motor.

OK

3 Check blower motor controller. ON

I10047

PREPARATION:

Remove blower motor controller with connectors still connected.

CHECK:

- (a) Turn ignition switch to ON.
- (b) Operate blower motor (High blower speed).

OK:

Terminals	Standard Value
GND ↔ Body Ground	Continuity
+B ↔ Body Ground	Battery Positive Voltage
+M ↔ Body Ground	Battery Positive Voltage
M+ ↔ M-	Battery Positive Voltage
SI ↔ Body Ground	1 – 3 V

NG**Replace blower motor controller.****OK****Repair or replace harness or connector.**