


Power Seat Control Switch Circuit

CIRCUIT DESCRIPTION

This circuit provides power for Power Seat Control Switch (Driver's seat Control Switch) from Power Seat Control ECU.

Also, the switch sends "SLIDE" signal as multiplexed voltage signal so that the seat slide can be operated even if the CPU for the Switch fails or infrared ray is cut off.

WIRING DIAGRAM

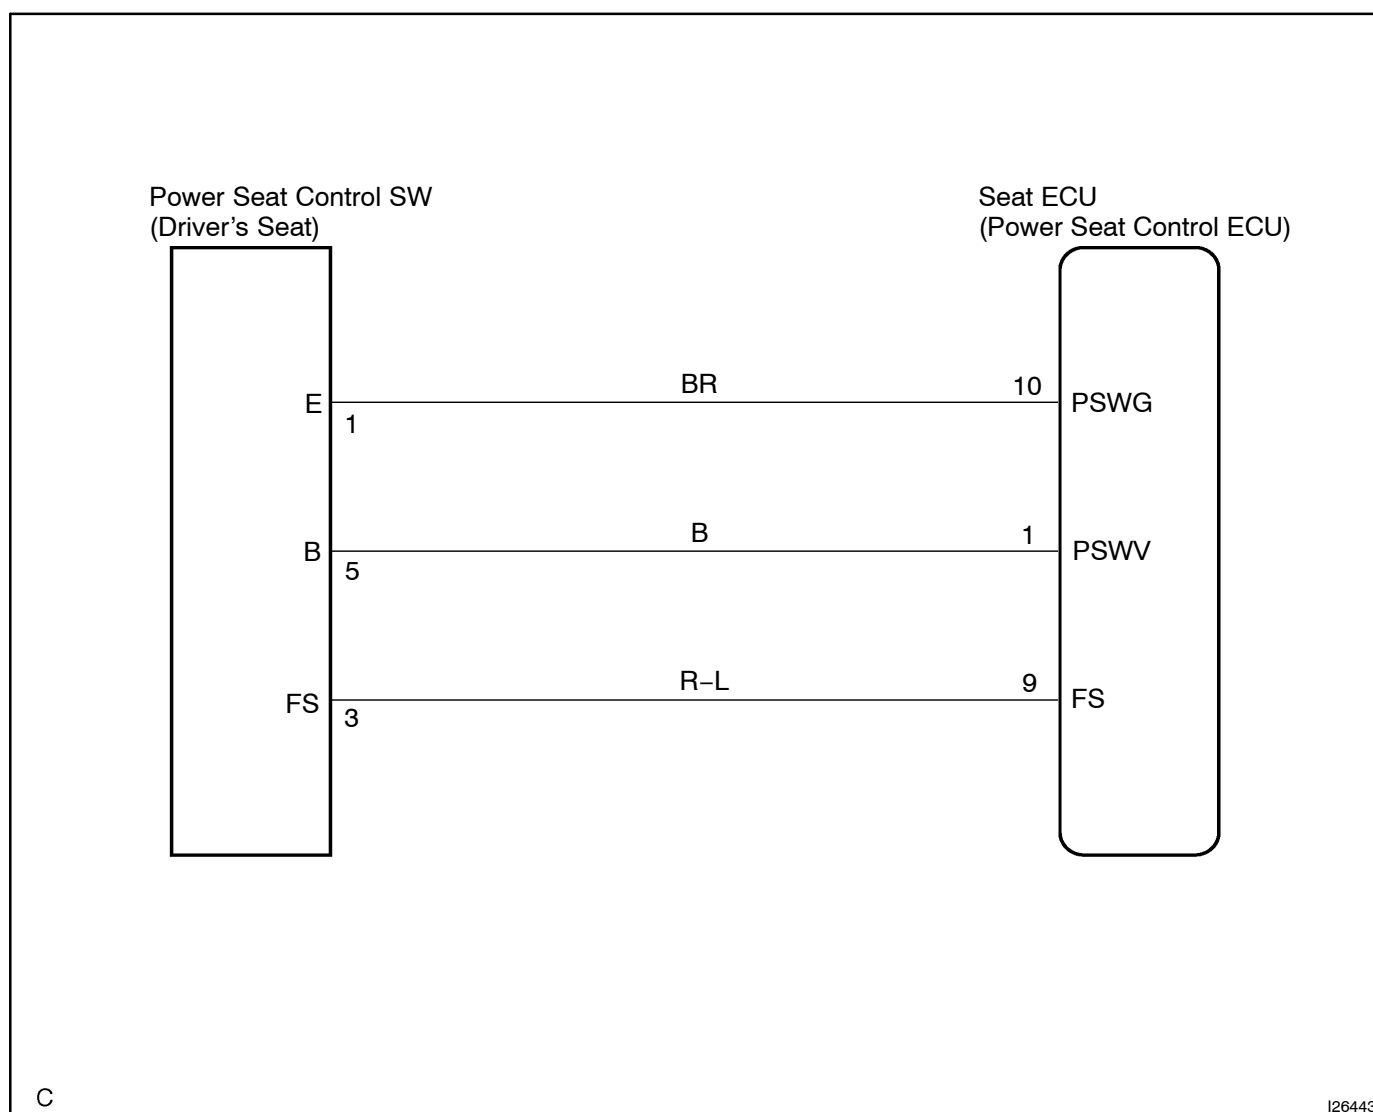

INSPECTION PROCEDURE

1	Check wire harness and connector between Power Seat Control Switch and Power Seat Control ECU (See page IN-36).
----------	--

NG**Repair or replace wire harness or connector.****OK****Proceed to next circuit inspection shown in problem symptom table (See page [DI-1127](#)).**