


INSTALLATION

NOTICE:

- **Never use SRS parts from another vehicle. When replacing parts, replace them with new ones.**
- **Never reuse the curtain shield airbag sensor assembly involved in a collision when the airbag has deployed.**
- **Never repair a sensor in order to reuse it.**

HINT:

For step 2 to 8, refer to page [BO-131](#).

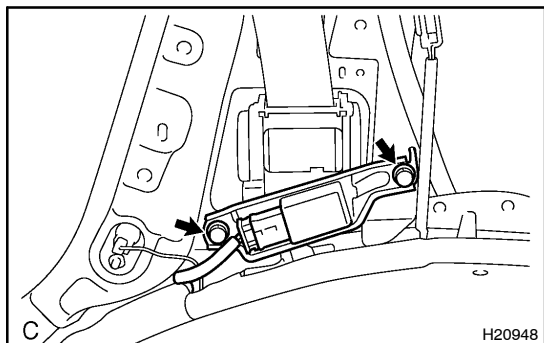

1. INSTALL CURTAIN SHIELD AIRBAG SENSOR ASSEMBLY

- (a) Install the curtain shield airbag sensor assembly with the 2 bolts.

Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

- (b) Connect the connector.

NOTICE:

- **Connection of the connector is done after the sensor assembly has been installed.**
- **Make sure that the sensor assembly is installed with the specified torque.**
- **If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.**
- **When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.**
- **After installation, shake the sensor assembly to check that there is no looseness.**

2. INSTALL QUARTER TRIM PANEL

3. INSTALL STRIKER PLATES

4. INSTALL REAR NO. 2 SEAT

5. INSTALL REAR MAT SET PLATE

6. INSTALL REAR SEAT BELT ANCHOR

7. INSTALL REAR DOOR OPENING TRIM

8. INSTALL REAR DOOR SCUFF PLATE

9. INSPECT SRS WARNING LIGHT (See page [DI-876](#))