


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch at ON position, DTCs will be recorded.
- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never reuse the sensor involved in a collision when the SRS has deployed.
- Never repair a sensor in order to reuse it.

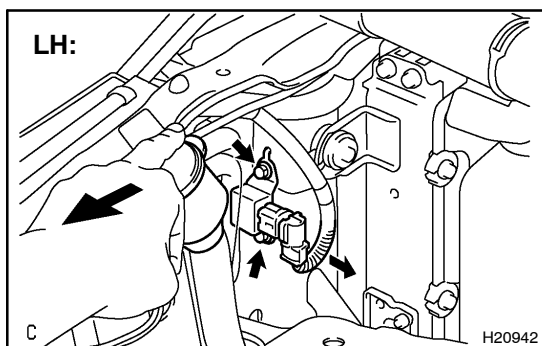


1. REMOVE FRONT AIRBAG SENSOR LH

- (a) Remove the battery carrier and battery.
- (b) Disconnect the front airbag sensor connector.

NOTICE:

Disconnect the connector with sensor assembly installed.

- (c) Pull the windshield washer tank opening as shown in the illustration.
- (d) Remove the 2 bolts and front airbag sensor LH.

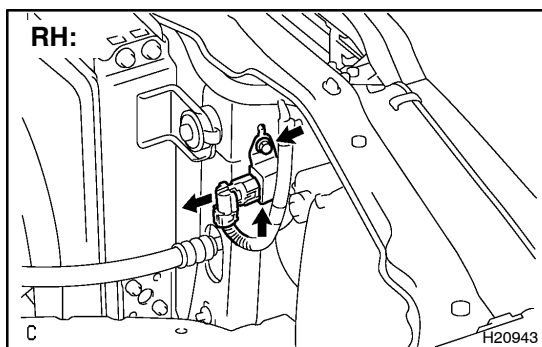

2. REMOVE FRONT AIRBAG SENSOR RH

- (a) Disconnect the front airbag sensor connector.

NOTICE:

Disconnect the connector with sensor assembly installed.

- (b) Remove the 2 bolts and front airbag sensor RH.