



INSPECTION

1. REMOVE V-BANK COVER
2. REMOVE INTAKE AIR CONNECTOR
3. REMOVE THROTTLE BODY FROM INTAKE MANIFOLDS (See page [SF-36](#))
4. REMOVE UPPER AND LOWER INTAKE MANIFOLDS ASSEMBLY (See page [EM-35](#))

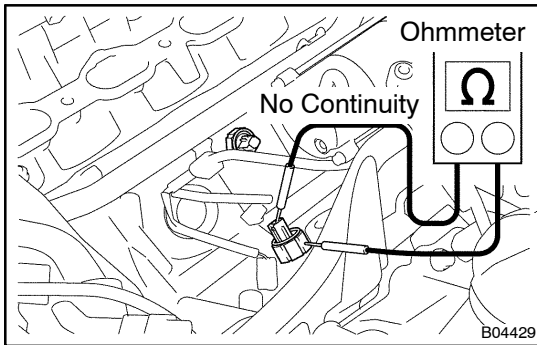

5. INSPECT KNOCK SENSOR 1, 2

- (a) Disconnect the knock sensor connectors.
- (b) Using an ohmmeter, check that there is no continuity between the terminal and body.

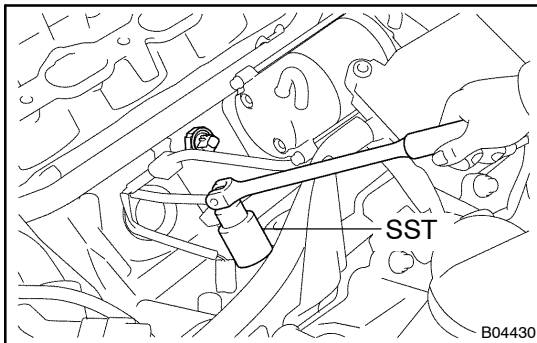

If there is a continuity, replace the sensor with SST.

SST 09816-30010

Torque: 45 N·m (450 kgf·cm, 33 ft·lbf)

- (c) Reconnect the knock sensor connectors.
6. REINSTALL UPPER AND LOWER INTAKE MANIFOLDS ASSEMBLY (See page [EM-59](#))
7. REINSTALL THROTTLE BODY TO INTAKE MANIFOLDS (See page [SF-50](#))
8. REINSTALL INTAKE AIR CONNECTOR
9. REINSTALL V-BANK COVER