


## REMOVAL

### HINT:

Removal of the thermostat would have an adverse effect, causing a lowering of cooling efficiency. Do not remove the thermostat, even if the engine tends to overheat.

#### 1. DRAIN ENGINE COOLANT

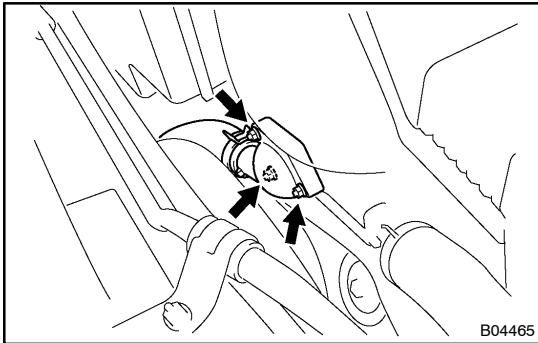

#### 2. DISCONNECT WATER INLET FROM WATER INLET HOUSING

Remove the 3 nuts, and disconnect the water inlet from the water inlet housing.

#### 3. REMOVE THERMOSTAT

- (a) Remove the thermostat.
- (b) Remove the gasket from the thermostat.