


DTC	C1203 / 53	ECM Communication Circuit Malfunction
------------	-------------------	--

CIRCUIT DESCRIPTION


The circuit is used to send TRAC & VSC control information from the skid control ECU to the ECM (TRC+, TRC-), and engine control information from the ECM to the skid control ECU (ENG+, ENG-).

DTC No.	DTC Detecting Condition	Trouble Area
C1203 / 53	Either of the following 1. or 2. continues for 5 sec.: 1. ECU IG1 terminal voltage is 9.5 V to 17.0 V and data transmission to the ECM is impossible. 2. ECU IG1 terminal voltage is 9.5 V to 17.0 V, engine speed is 500 rpm or more or vehicle speed is 60 km/h (36 mph) or more and data receiving from the ECM is impossible.	• TRC+ or TRC- circuit • ENG+ or ENG- circuit • ECM

WIRING DIAGRAM

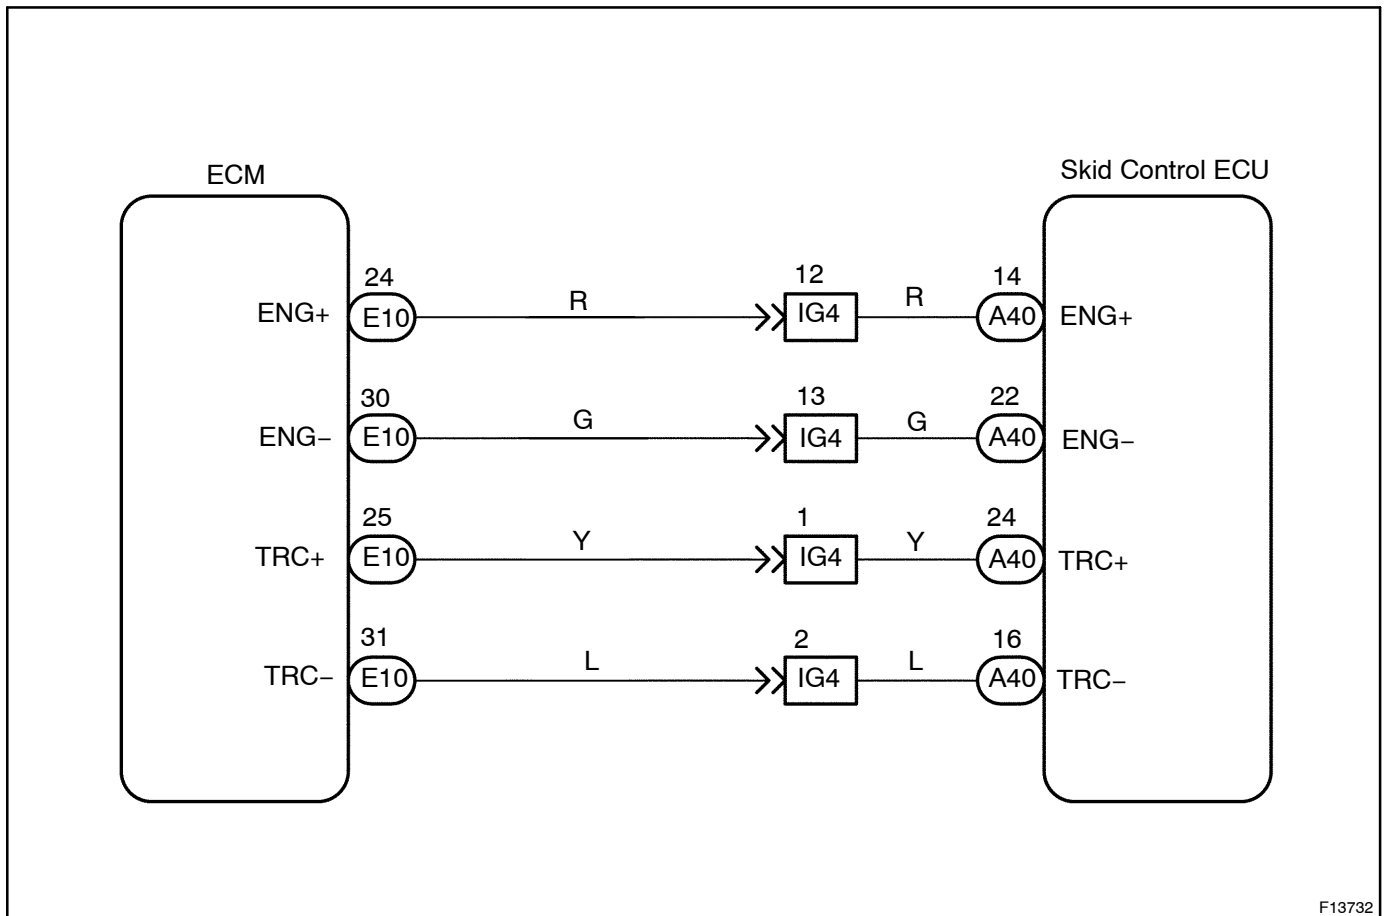

F13732

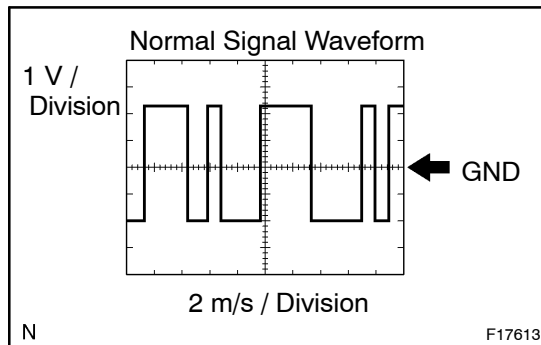INSPECTION PROCEDURE**1 Check skid control ECU communication.****(REFERENCE) INSPECTION USING OSCILLOSCOPE****PREPARATION:**

- (a) Remove the skid control ECU.
- (b) Connect the oscilloscope to the each of terminals ENG+ or TRC+ and GND of the skid control ECU.

CHECK:

Start the engine, and check the signal waveform.

NG**Check and replace skid control ECU.****OK****2 Check for open and short circuit in harness and connector between each of terminals ENG+, ENG-, TRC+, TRC- of skid control ECU and ECM (See page IN-36).****NG****Repair or replace harness or connector.****OK****Check and replace ECM.**