


DTC	C1268 / 68	Transfer L4 Position Switch Circuit
------------	-------------------	--

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1268 / 68	Open or short circuit in transfer L4 position switch.	- Transfer L4 position switch - Transfer L4 position switch circuit

WIRING DIAGRAM

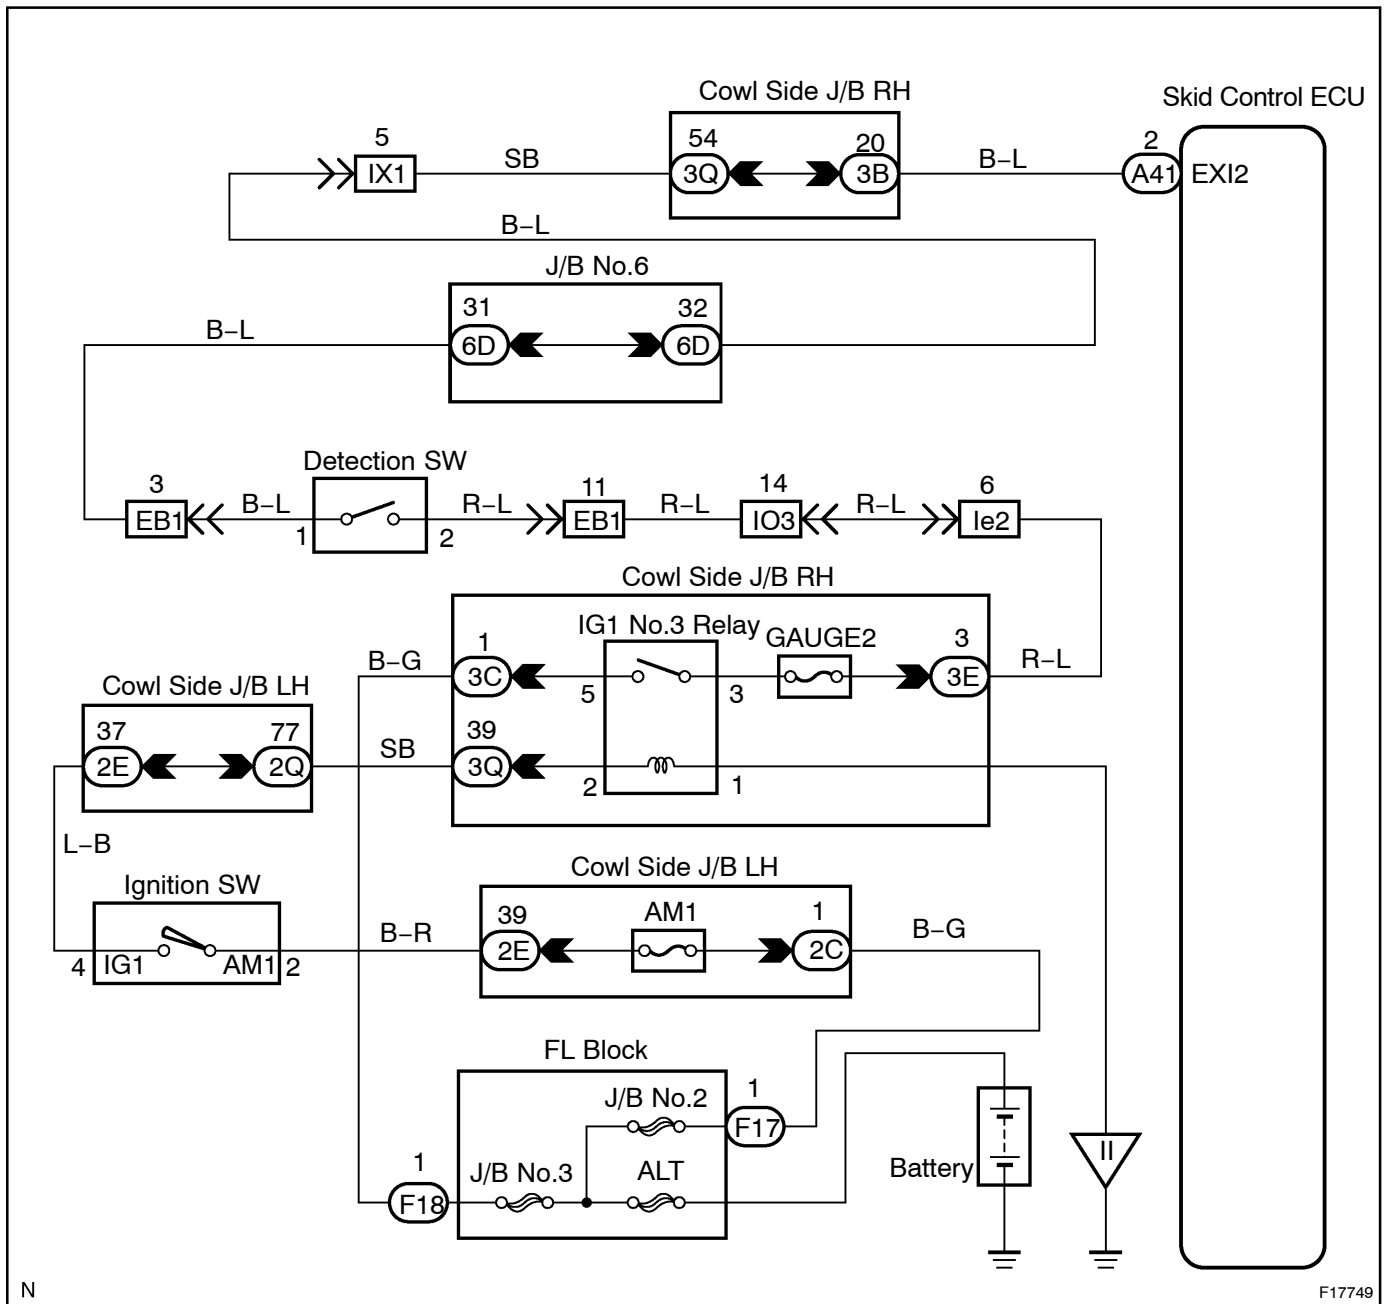


N

F17749

INSPECTION PROCEDURE

- | | |
|----------|---|
| 1 | Check voltage between terminal EXI2 of skid control ECU and body ground. |
|----------|---|

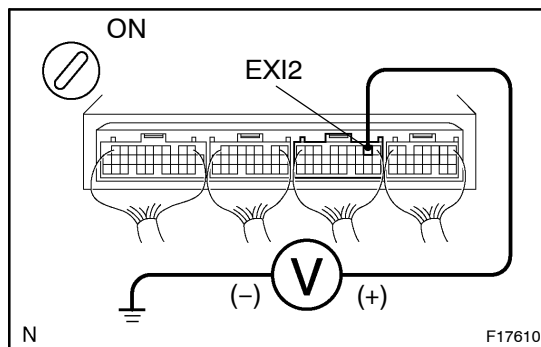**PREPARATION:**

Remove the skid control ECU with connectors still connected.

CHECK:

- (a) Turn the ignition switch ON.
- (b) Measure voltage between terminal EXI2 of skid control ECU and body ground when transfer in L4 position.

OK:

Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown in problem symptoms chart (See page [DI-619](#)).

NG

- | | |
|----------|---|
| 2 | Check transfer L4 position switch (See page TR-49). |
|----------|---|

NG

Replace transfer L4 position switch.

OK

- | | |
|----------|---|
| 3 | Check for open or short circuit in harness and connector between transfer L4 position switch and skid control ECU (See page IN-36). |
|----------|---|

NG

Repair or replace harness or connector.

OK

4	Check for open or short circuit in harness and connector between skid control ECU and ECM (See page IN-36).
---	--

NG

Repair or replace harness or connector.

OK

Check and replace skid control ECU.