


Jam protection limit / pulse switch circuit on rear right door

CIRCUIT DESCRIPTION

The rear RH power window switch receives the driver door power window switch signal from the master switch to operate the power window motor.

WIRING DIAGRAM

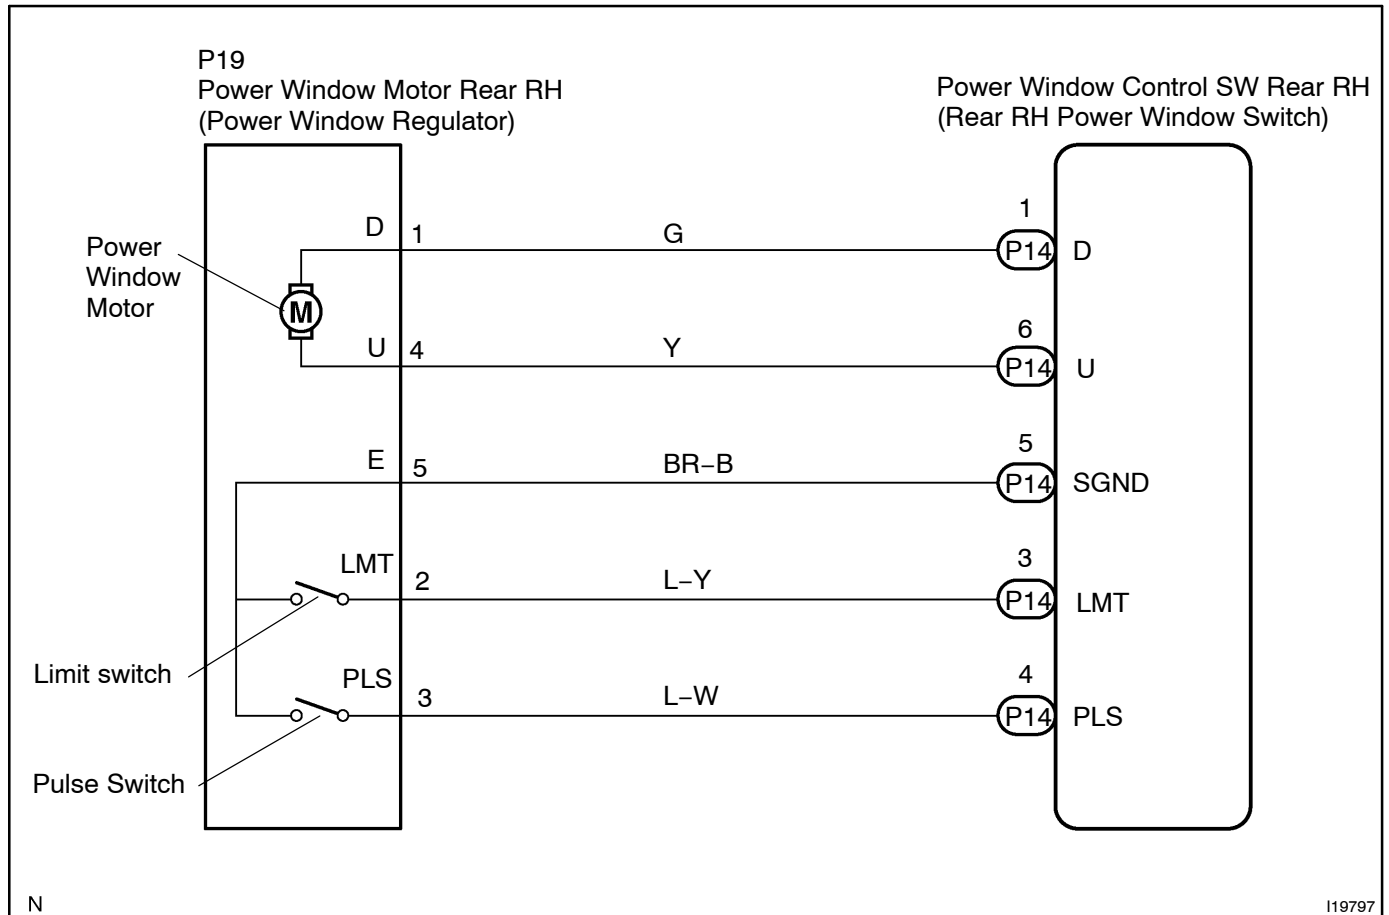

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check power window motor using hand-held tester.
---	--

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the power window motor can operate in ACTIVE TEST (See page [DI-1481](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1484](#)).

NG

2	Check power window motor (See page BE-105).
---	--

NG

Replace power window motor.

OK

3	Check wire harness and connector between power window motor and rear RH power window switch (See page IN-36).
---	--

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1484](#)).