


## Telescopic Motor Circuit

### CIRCUIT DESCRIPTION

The ECU provides both +B and ground for the telescopic motor.  
Reversing polarity of the applied voltage reverses the motor.

### WIRING DIAGRAM

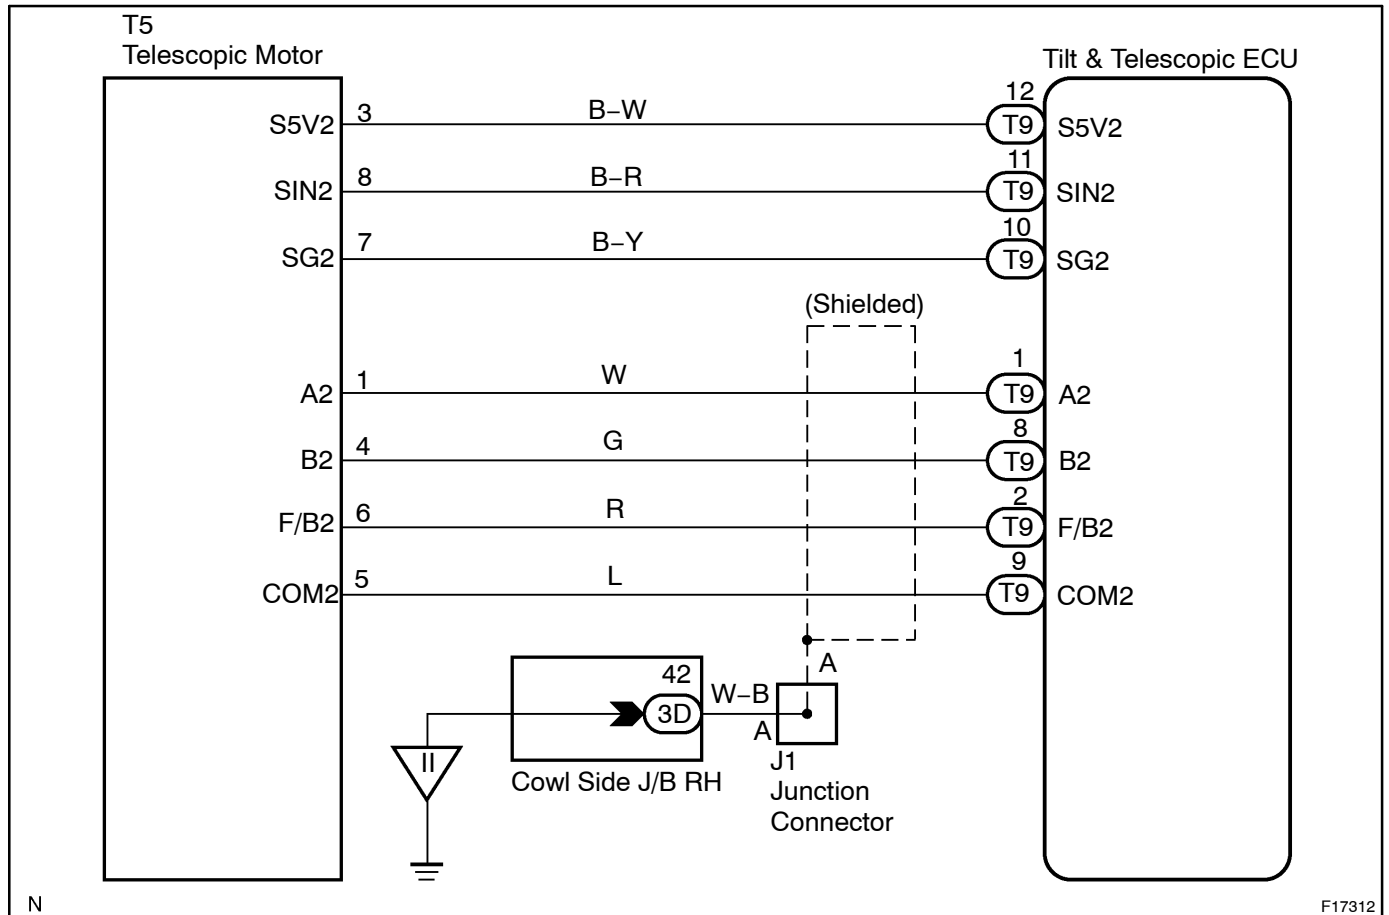


## INSPECTION PROCEDURE

### HINT:

- In case of using LEXUS hand-held tester, start inspection from step 1.
- In case of not using LEXUS hand-held tester, start inspection from step 2.

### 1 Check telescopic motor operation using LEXUS hand-held tester.

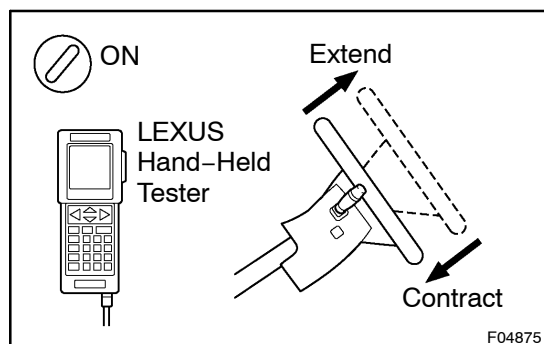

#### PREPARATION:

- Connect the LEXUS hand-held tester to the DLC3
- Turn ignition switch ON and push the LEXUS hand-held tester main switch ON.
- Select the ACTIVE TEST mode on the LEXUS hand-held tester.

#### CHECK:

Check that the steering column length become short (long) and confirm that telescopic position value change when the ACTIVE TEST carried out.

#### OK:


Steering column length must be short (long).  
Telescopic position value must be changed.

OK

Proceed to next circuit inspection shown on the problem symptom table (See page [DI-766](#)).

NG

### 2 Check telescopic motor.

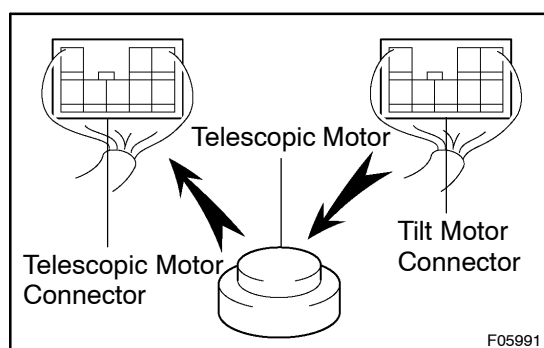

#### PREPARATION:

- Disconnect telescopic motor connector and tilt motor connector.
- Remove telescopic motor (See page [SR-16](#)).

#### CHECK:

Connect tilt motor connector to telescopic motor. Then confirm that telescopic motor moved when operating the manual switch.

NG

Replace telescopic motor.

OK

|   |                                                                                                                                                  |
|---|--------------------------------------------------------------------------------------------------------------------------------------------------|
| 3 | Check for open or short circuit in harness and connector between tilt and telescopic ECU and telescopic motor (See page <a href="#">IN-36</a> ). |
|---|--------------------------------------------------------------------------------------------------------------------------------------------------|

NG

Repair or replace harness or connector.

OK

Proceed to next circuit inspection shown on the problem symptom table (See page [DI-766](#)).