

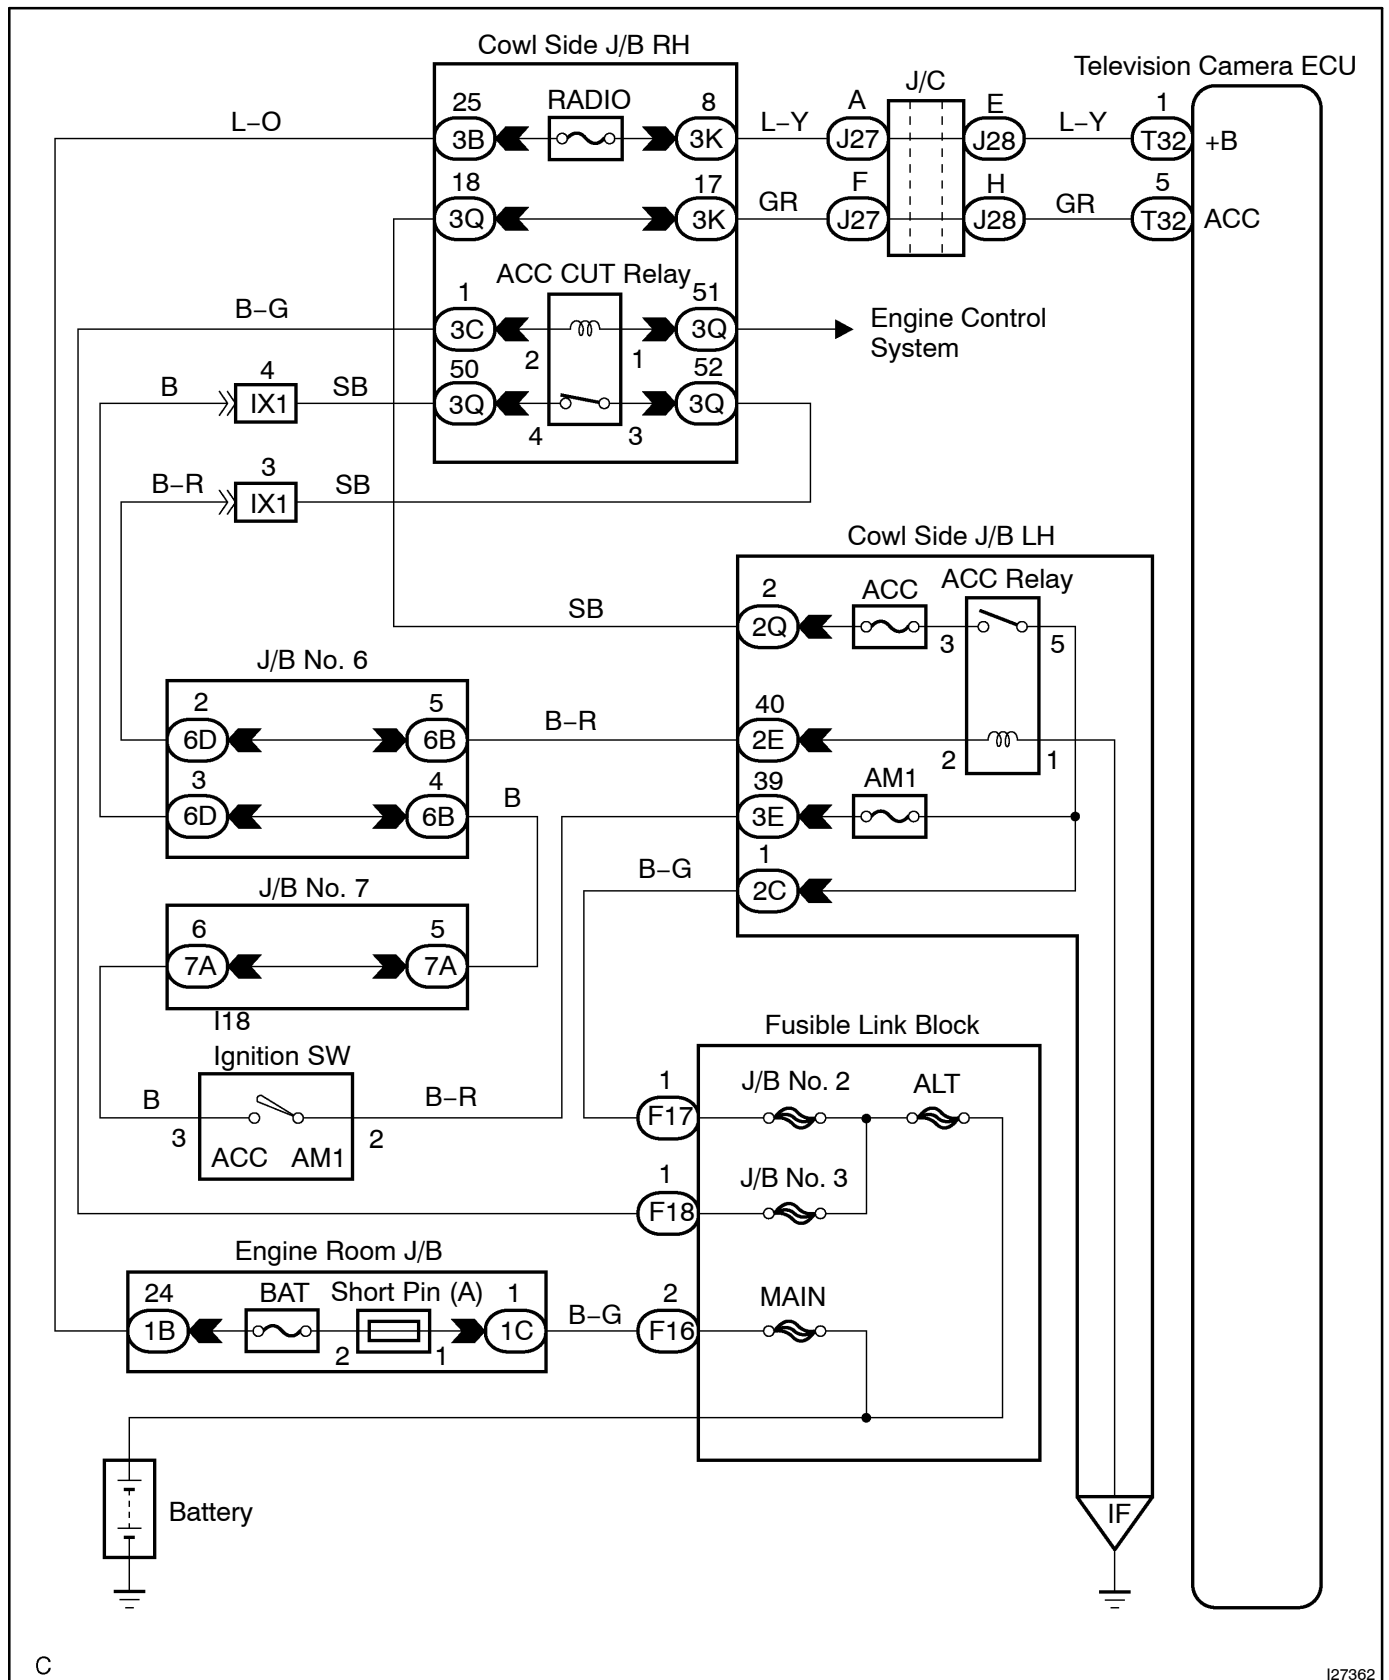
CIRCUIT INSPECTION

Power Source Circuit

CIRCUIT DESCRIPTION

This circuit provides the power to the television camera ECU.

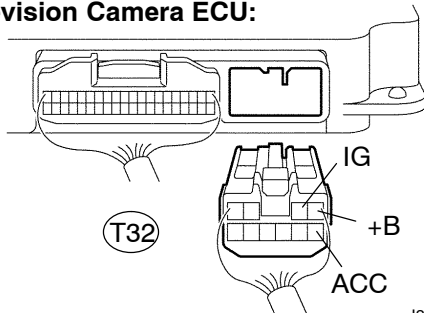
WIRING DIAGRAM



I27362

INSPECTION PROCEDURE

- 1 Check voltage between terminals +B, ACC, IG and GND1 of television camera ECU.**

Television Camera ECU:

P

I27529

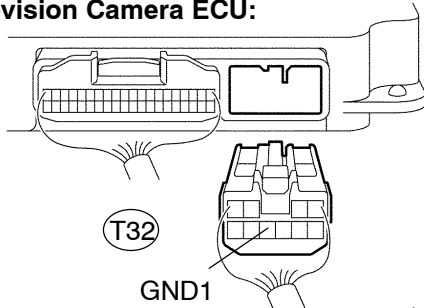
- (a) Disconnect the T32 connector from the television camera ECU.
 (b) Measure the voltage according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
+B – Body ground	Always	10 to 14 V
ACC – Body ground	Ignition SW ACC	10 to 14 V
IG – Body ground	Ignition SW ON	10 to 14 V

NG**Repair or replace harness or connector.****OK**

- 2 Check continuity between terminal GND1 and body ground.**

Television Camera ECU:

P

I27529

- (a) Disconnect the T32 connector from the television camera ECU.
 (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
GND1 – Body ground	Always	Below 1 Ω

NG**Repair or replace harness or connector.****OK****Replace television camera ECU.**