

REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is at ON position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.


1. REMOVE ROOF HEADLINING (See page [BO-126](#))

2. REMOVE CURTAIN SHIELD AIRBAG ASSEMBLY

- (a) Disconnect the curtain shield airbag connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

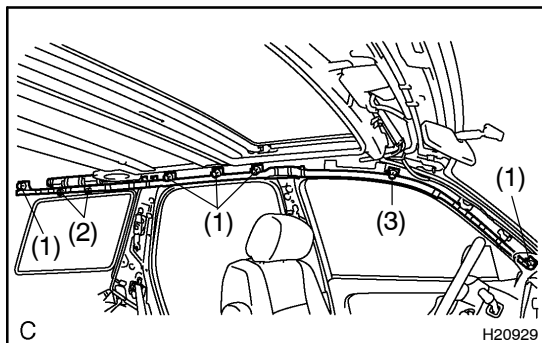

- (b) In the order shown in the illustration, remove the bolts and curtain shield airbag assembly.

HINT:

- Loosen the bolt (3) before removing the bolt (2).
- Bind the front and rear parts of the curtain shield airbag assembly before removing the bolt (3).

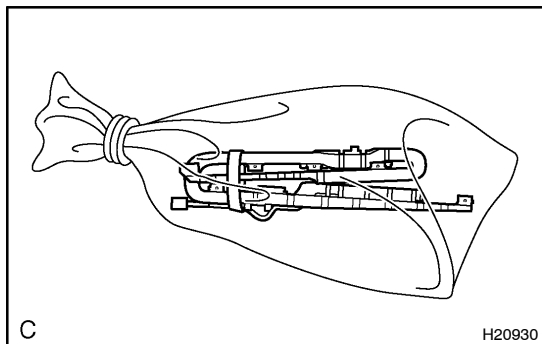

- (c) Put the removed curtain shield airbag in a clear plastic bag and keep it in a safe place.

CAUTION:

Never disassemble the curtain shield airbag assembly.

NOTICE:

Plastic bag is not reusable.