


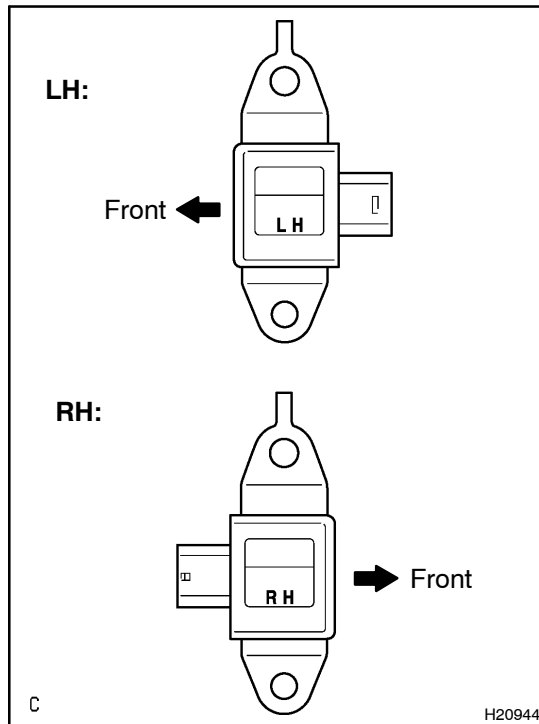

## INSTALLATION

### NOTICE:

- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never reuse the sensor involved in a collision when the SRS has deployed.
- Never repair a sensor in order to reuse it.

### 1. INSTALL FRONT AIRBAG SENSOR

- (a) Install the front airbag sensor with the arrow on the sensor facing toward the front of the vehicle.

**Torque: 7.5 N·m (76 kgf·cm, 66 in·lbf)**

### NOTICE:

- Make sure that the sensor is installed with the specified torque.
- If the sensor has been dropped, or there are cracks, dents or other defects in the case, brackets or connector, replace the removed sensor with a new one.
- The front sensor is equipped with an electrical connection check mechanism. Be sure to lock this mechanism securely when connecting the connector. If the connector is not securely locked, a malfunction code will be detected by the diagnostic system.

- (b) Connect the front airbag sensor connector.

### 2. INSTALL BATTERY AND BATTERY CARRIER

### 3. INSPECT SRS WARNING LIGHT (See page [DI-882](#))