


RSCA OFF SWITCH INSPECTION

RS0X1-01

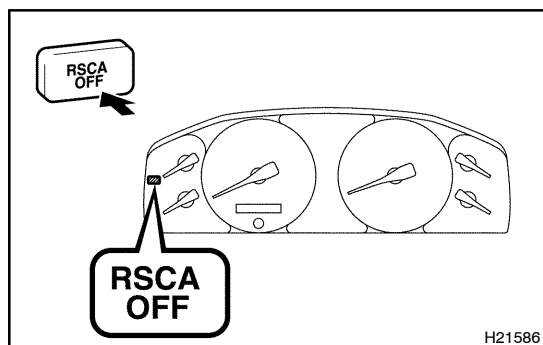


1. INSPECT RSCA OFF INDICATOR LIGHT

- (a) Turn the ignition switch to ON.
- (b) Check that the RSCA OFF indicator light goes off after it comes on for 3 seconds.
- (c) Check that the RSCA OFF indicator light comes on after pressing the RSCA OFF switch approx. 2 seconds.

2. INSPECT RSCA OFF SWITCH CONTINUITY

- (a) Remove the LWR instrument panel finish panel (See page [BO-104](#)).
- (b) Remove the RSCA OFF switch from the LWR instrument panel finish panel.

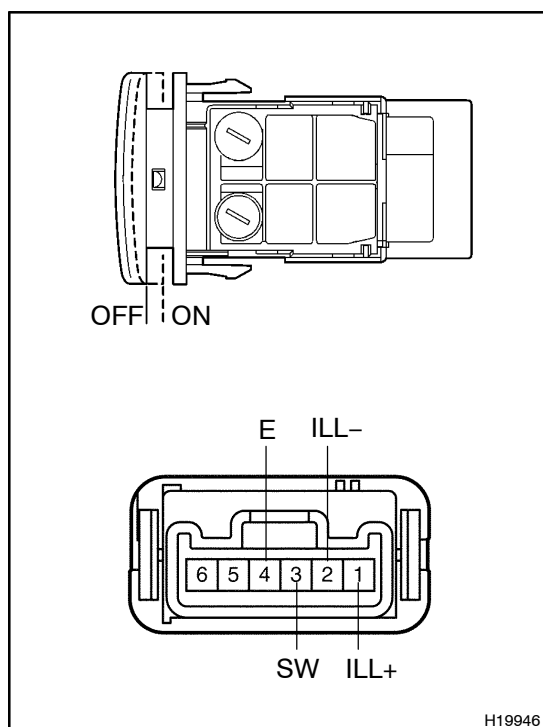

- (c) Inspect the continuity between the each terminals.

Switch position	Tester connection	Specified condition
OFF	SW (3) ↔ E (4)	No continuity
Hold ON	SW (3) ↔ E (4)	Continuity
Illumination	ILL + (1) ↔ ILL - (2)	Continuity

If continuity is not as specified, replace the RSCA OFF switch or bulb.