




NOTICE: When inspecting or repairing the SRS, perform service in accordance with the following precautionary instructions and the procedure, and precautions in the Repair Manual applicable for the model year.


- Malfunction symptoms of the SRS are difficult to confirm, so the DTCs become the most important source of information when troubleshooting. When troubleshooting the SRS, always inspect the DTCs before disconnecting the battery.
- **Work must be started more than 90 seconds after the ignition SW is turned to the "LOCK" position and the negative (-) terminal cable is disconnected from the battery.**
(The SRS is equipped with a back-up power source so that if work is started within 90 seconds from disconnecting the negative (-) terminal cable of the battery, the SRS may deploy.)
- When the negative (-) terminal cable is disconnected from the battery, the memory of the clock and audio system will be cleared. So before starting work, make a record of the contents in the audio memory system. When work is finished, reset the audio systems as they were before and adjust the clock. Some vehicles have power tilt steering, power telescopic steering, power seat and power outside rear view mirror which are all equipped with memory function. However, it is not possible to make a record of these memory contents. So when the work is finished, it will be necessary to explain it to your customer, and ask the customer to adjust the features and reset the memory. To avoid erasing the memory in each system, never use a back-up power supply from outside the vehicle.
- Before repair, remove the airbag sensor if shocks are likely to be applied to the sensor during repair.
- Do not expose the following parts directly to hot air or flame;
- Even in cases of a minor collision where the SRS does not deploy, the following parts should be inspected;
- Never use SRS parts from another vehicle. When replacing parts, replace with new parts.
- For the purpose of reuse, never disassemble and repair the following parts.
- If the following parts have been dropped, or have cracks, dents and other defects in their case, bracket, and connector, replace with new one.
- Use a volt/ohmmeter with high impedance (10 k Ω /V minimum) for troubleshooting electrical circuits of the system.
- Information labels are attached to the periphery of the SRS components. Follow the instructions of the notice.
- After work on the SRS is completed, check the SRS warning light.
- If the vehicle is equipped with a mobile communication system, refer to the precaution in the IN section of the Repair Manual.

- | |
|--|
| <ul style="list-style-type: none"> * Steering wheel pad * Front passenger airbag assembly * Side airbag assembly * Curtain shield airbag assembly * Seat belt pretensioner * Center airbag sensor assembly * Front airbag sensor assembly * Side airbag sensor assembly * Rear airbag sensor assembly |
|--|

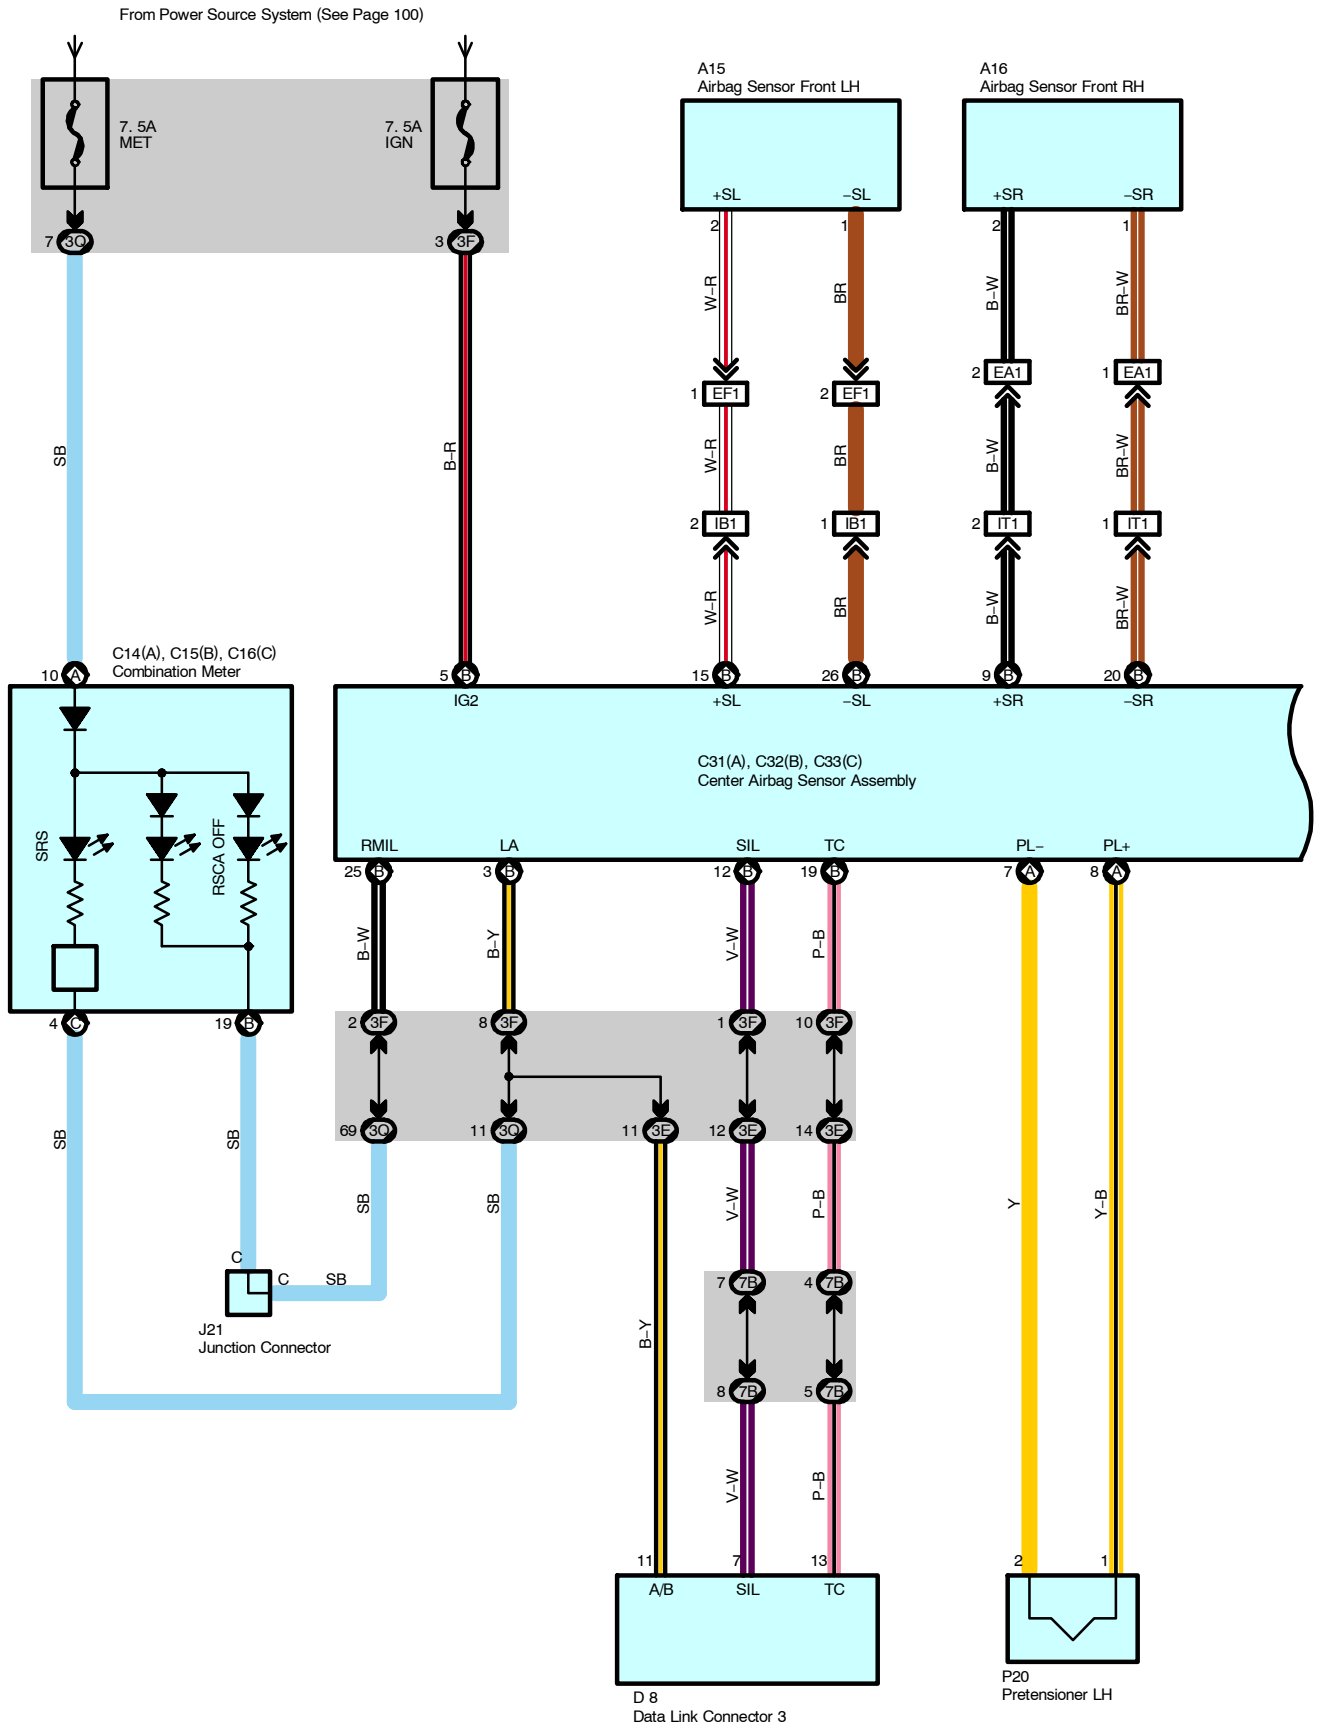

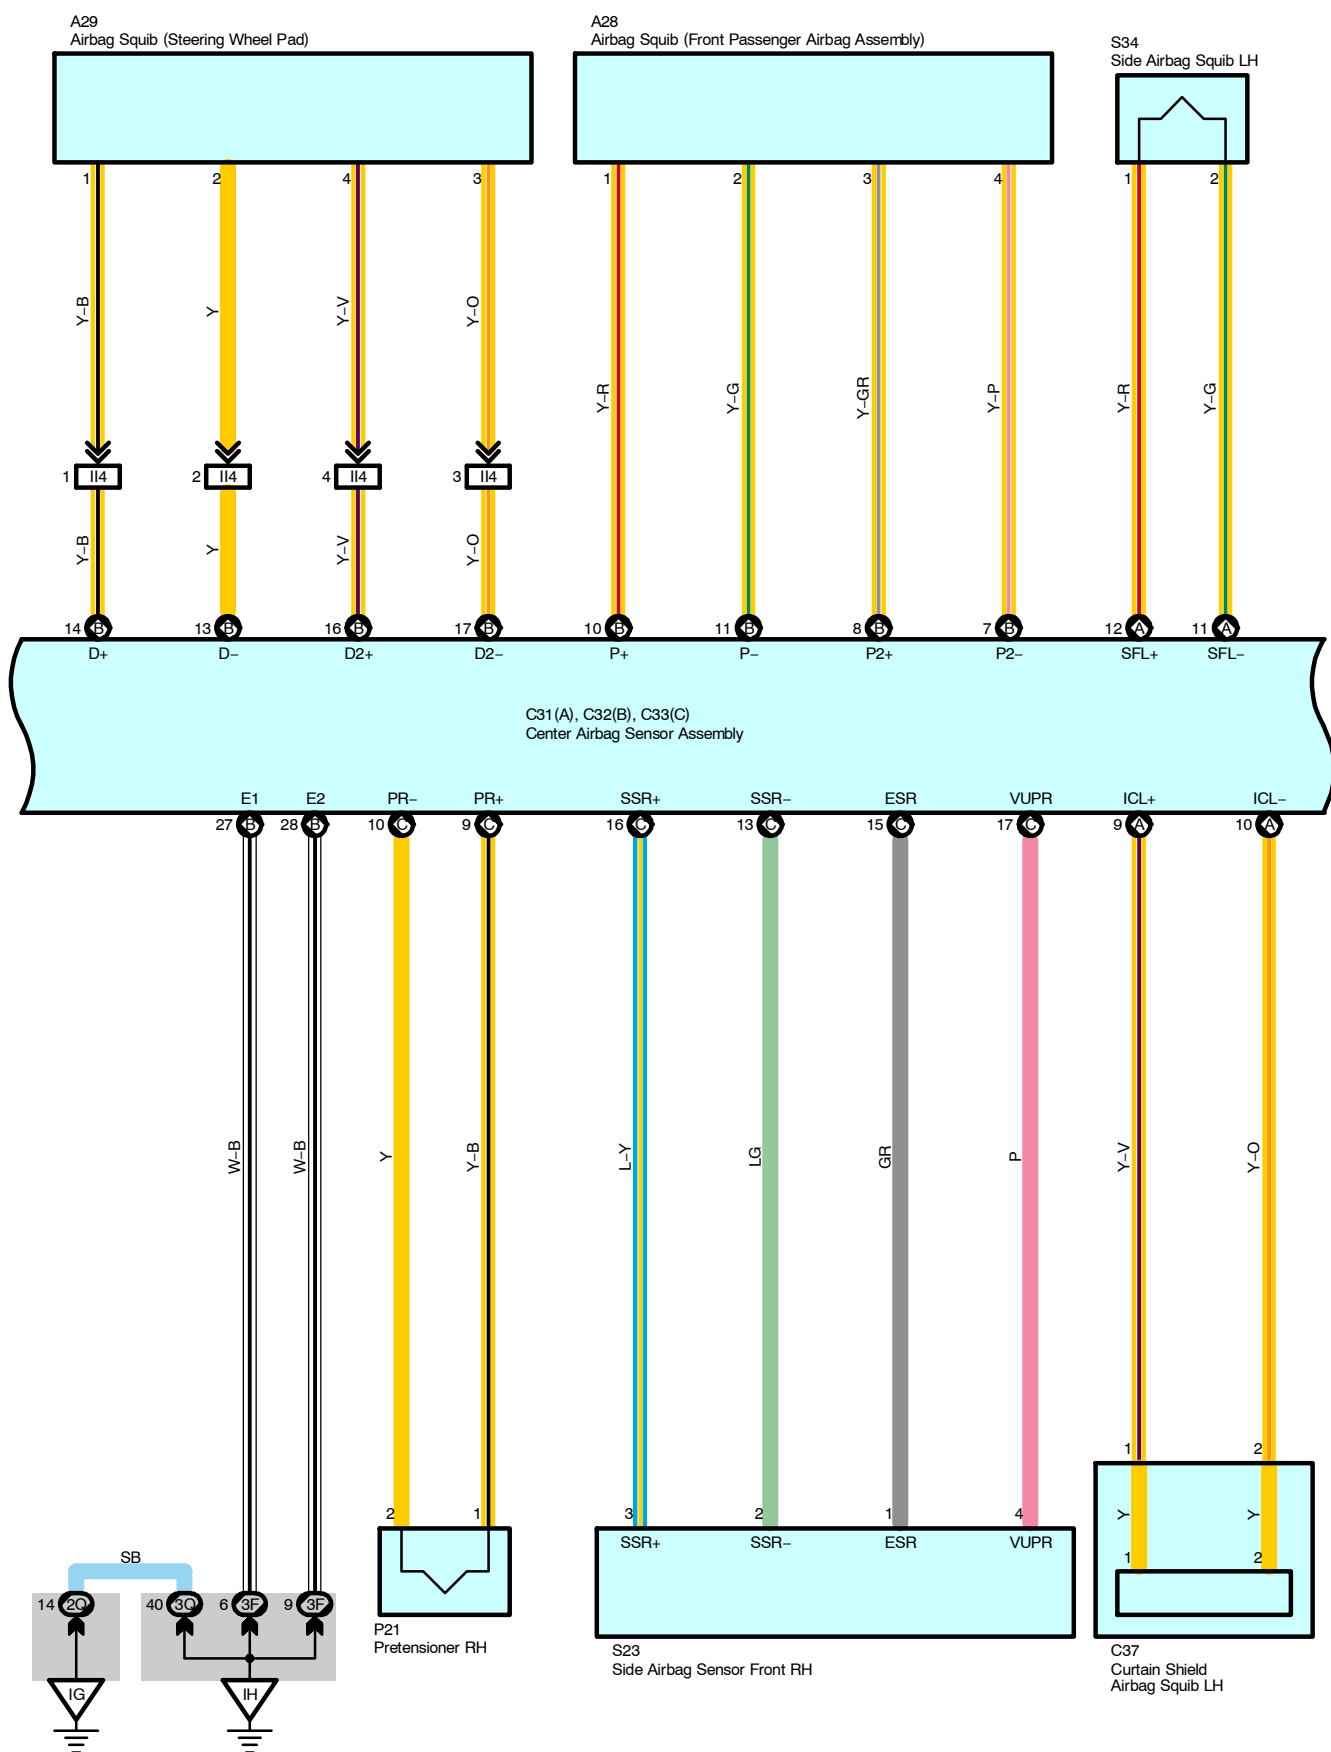

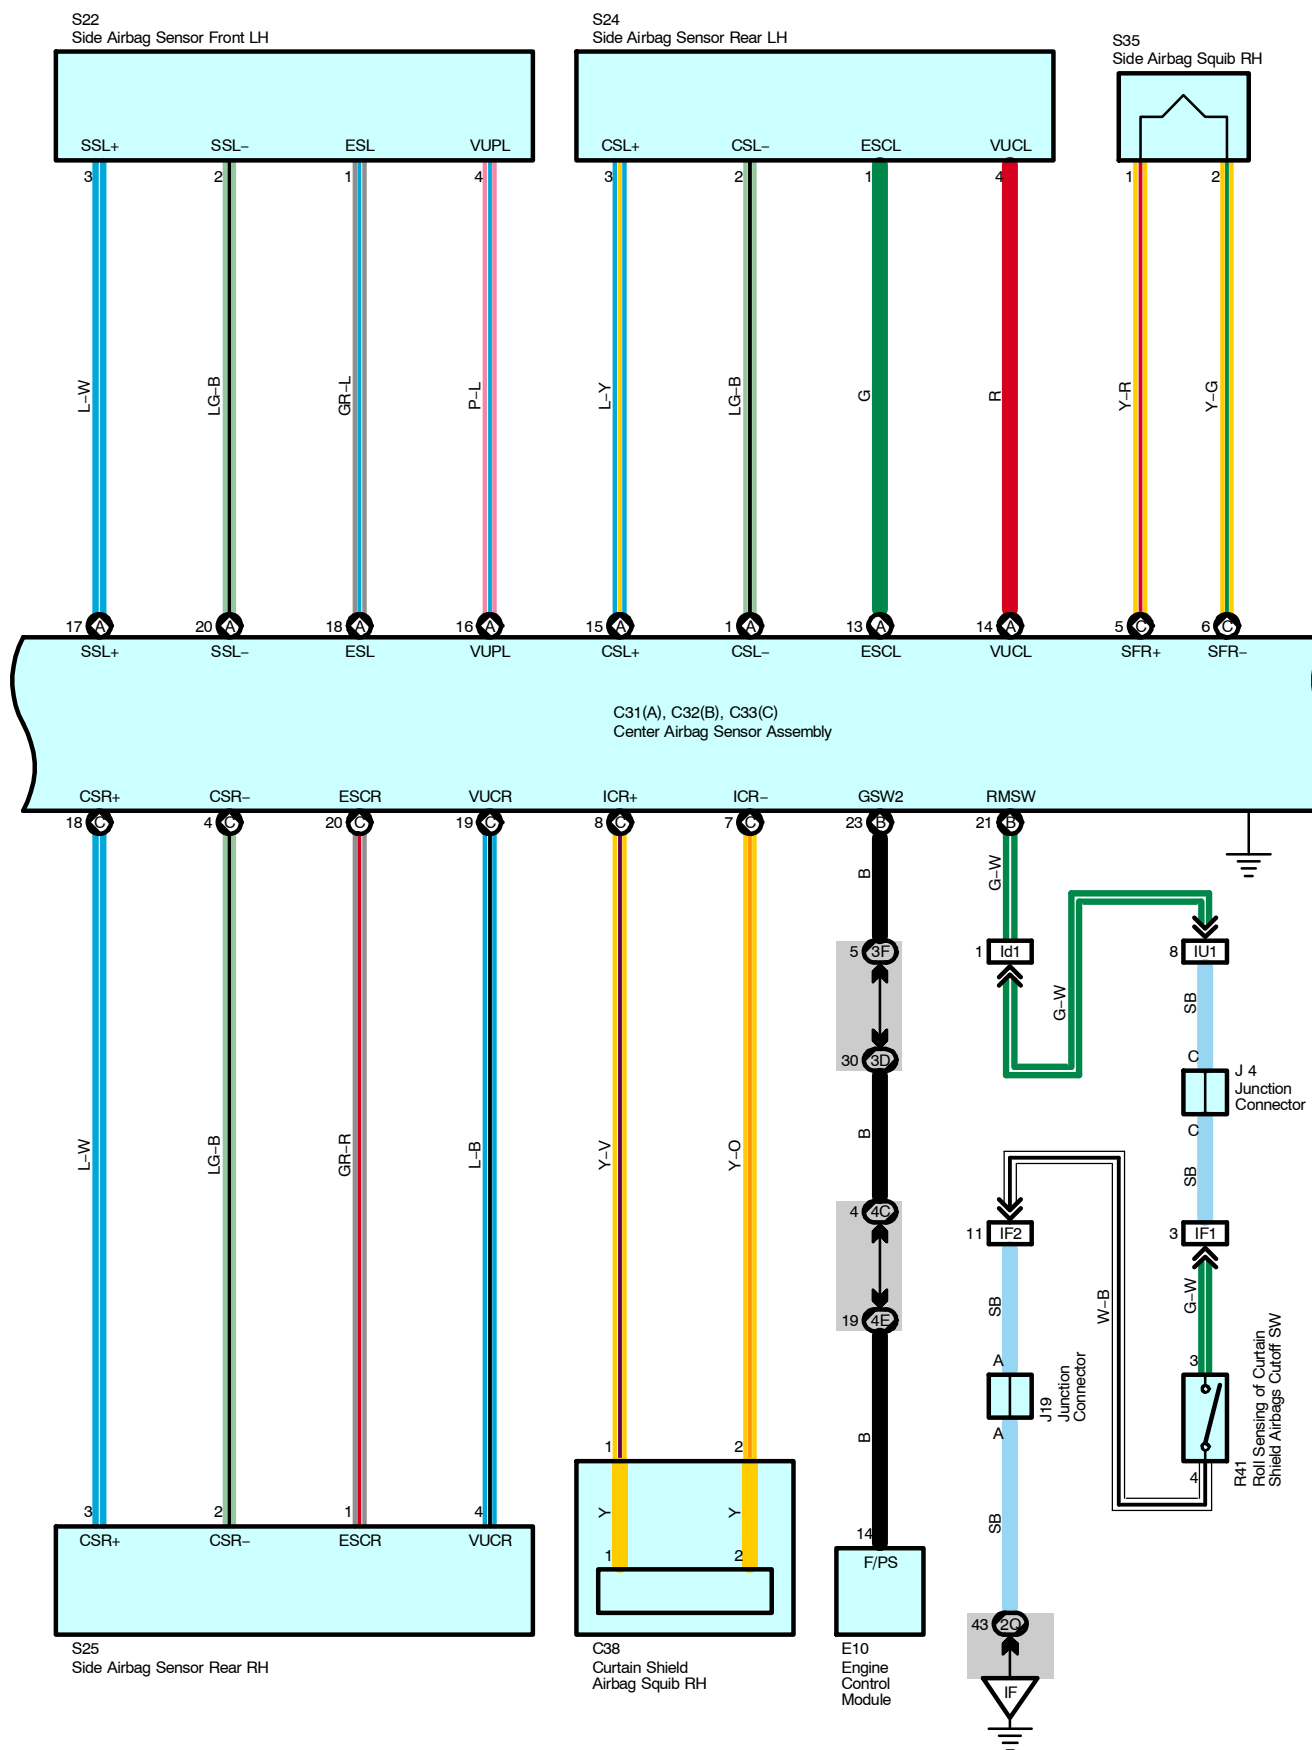

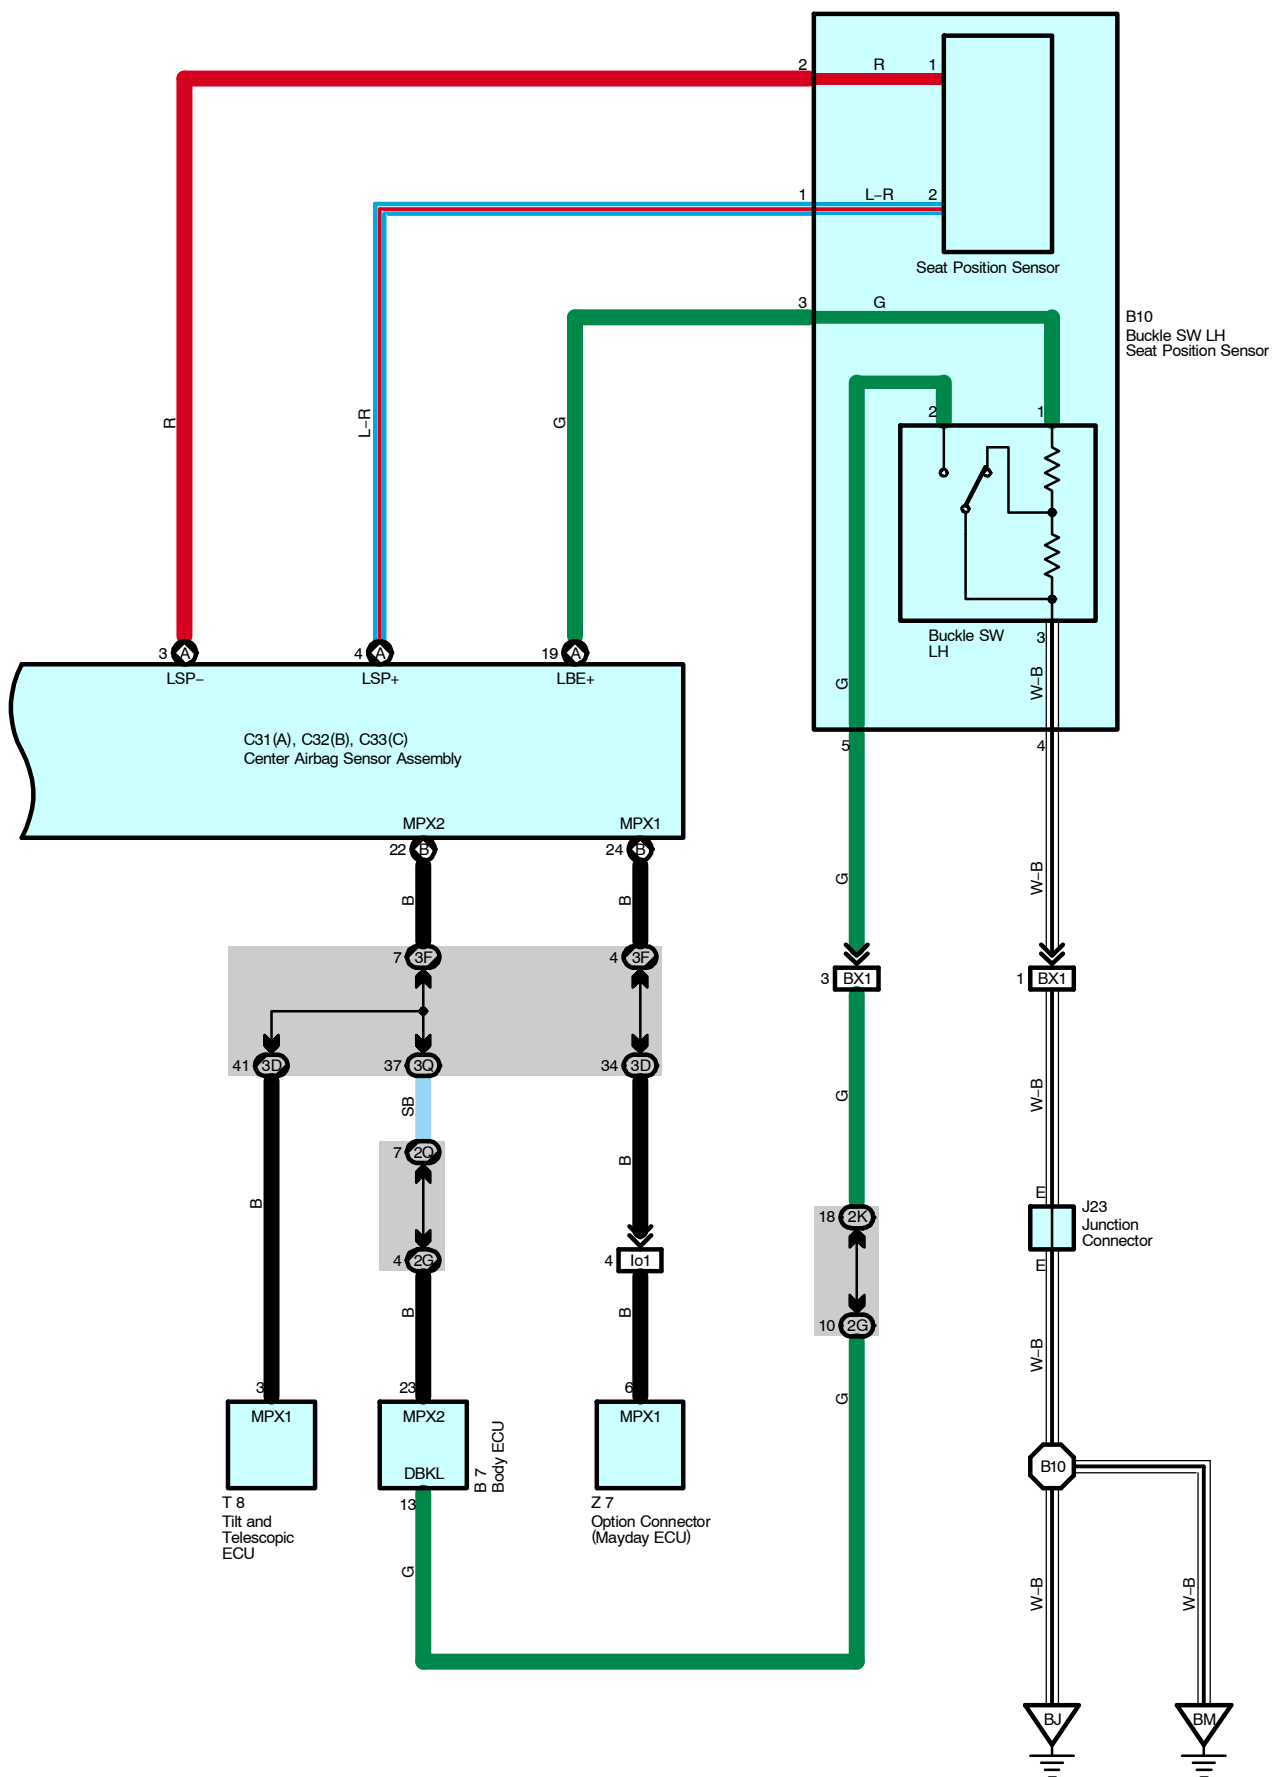

System Outline

- * The SRS airbag are provided for the driver and front passenger. The SRS airbags have been designed to help reducing the shocks to the heads and chests of the driver and front passenger in the event of a severe frontal impact collision as supplements to the seat belts.
This system is a 3-sensor type airbag system to detect the impact during a front collision using the center airbag sensor assembly and airbag sensor front LH, RH, and to make the airbag system and pretensioner operate as well.
- * In this system, a front side collision is detected by the side airbag sensor front LH, RH in order to simultaneously deploy the side and curtain shield airbags. A rear side collision is detected by the side airbag sensor rear LH, RH in order to deploy only the curtain shield airbag.
- * Roll sensing of curtain shield airbags control has been adopted in order to deploy the curtain shield airbags and the pretensioners for the driver and front passenger, in the event that the vehicle rolls over.
A roll sensing of curtain shield airbags cutoff SW is provided on the driver side of the instrument panel to enable the driver to disable this system.
- * Dual-stage SRS airbags system, that controls the airbag inflating output optimum by judging the extent of impact and seat position (Driver seat), has been used for the driver and front passenger airbags.
- * In accordance with the adoption of the dual-stage SRS airbag system, a seat position sensor has been established for the driver seat.
- * This system has adopted a fuel cut control that stops the fuel pump when the airbag is deployed.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A15	68	C33 C	71	R41	73
A16	68	C37	74	S22	75
A28	70	C38	74	S23	75
A29	70	D8	71	S24	75
B7	70	E10	71	S25	75
B10	76	J4	72	S34	76
C14 A	71	J19	72	S35	76
C15 B	71	J21	72	T8	73
C16 C	71	J23	74	Z7	73
C31 A	71	P20	75		
C32 B	71	P21	75		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2G	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3F		
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4C	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4E		
7B	64	Dash Wire and J/B No.7 (Behind the Grove Box)

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	78	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
EF1	78	Engine Room No.2 Wire and Engine Room Main Wire (Under the Engine Room J/B)
IB1	80	Engine Room No.2 Wire and Dash Wire (Left Kick Panel)
IF1	80	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2		
II4	82	Dash Wire and Column Wire (Near the Ignition SW)
IT1	84	Engine Room No.2 Wire and Dash Wire (Right Kick Panel)
IU1	84	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
Id1	86	Dash Wire and Dash Wire (Behind the Combination Meter)
Io1	88	Dash Wire and Dash Wire (Center Side of Front Console)
BX1	94	Floor No.1 Wire and Floor No.1 Wire (Near the Left Rear Suspension Support)

 : **Ground Points**

Code	See Page	Ground Points Location
IF	80	Set Bolt of Cowl Side J/B LH
IG		
IH	80	Set Bolt of Cowl Side J/B RH
BJ	90	Under the Driver's Seat
BM	90	Left Rear Side Quarter Panel

 : **Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B10	92	Floor No.1 Wire			