




ROCKER OUTER PANEL (CUT-P)

REPLACEMENT



F20692-A

REMOVAL

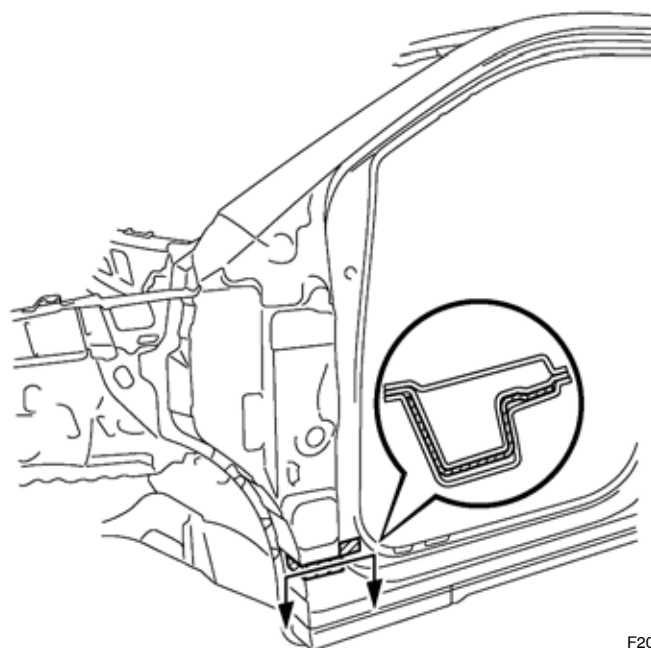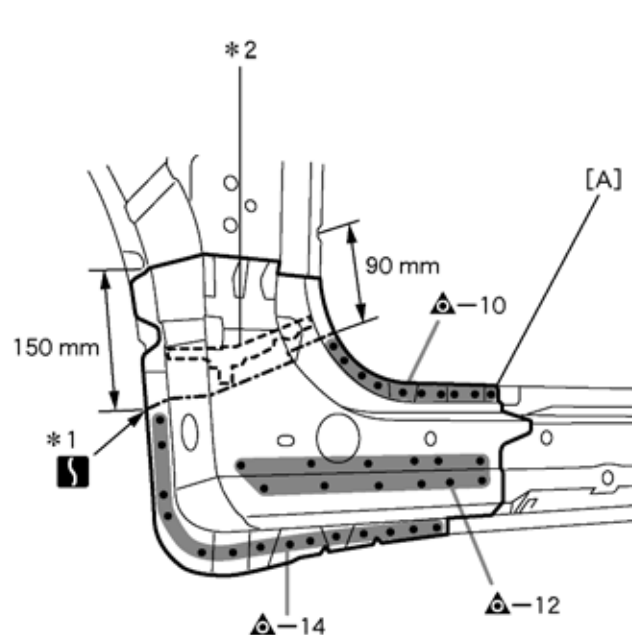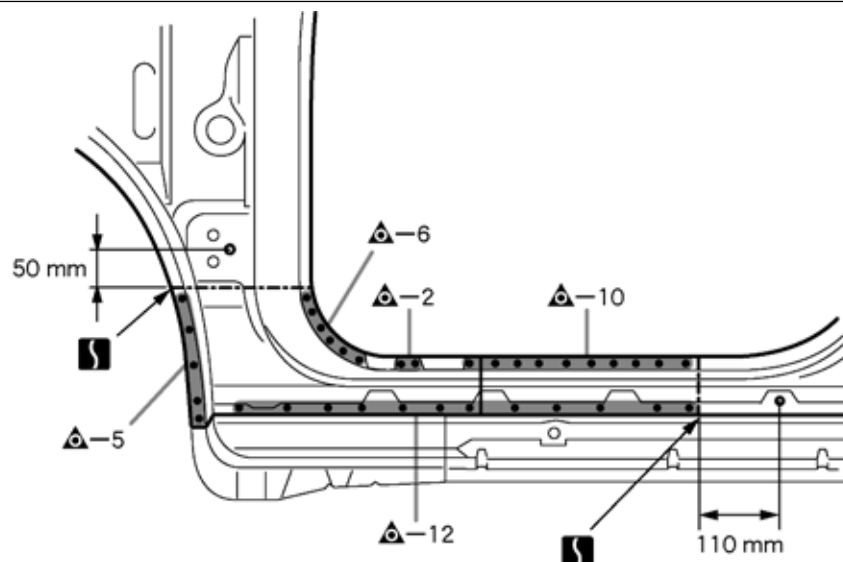

F20692

POINT

- 1 [A] is Reuse.
- 2 *1: When cutting the [A], be careful not to cut the *2. The *2 is apporoximately 15 mm (0.59 in.) above the [A].
- 3 When cutting the outer panel, be careful not to cut the pad.

PART NAME


[A] Front Pillar Lower Reinforcement

50 mm (1.97 in.)

90 mm (3.54 in.)

110 mm (4.33 in.)


150 mm (5.91 in.)

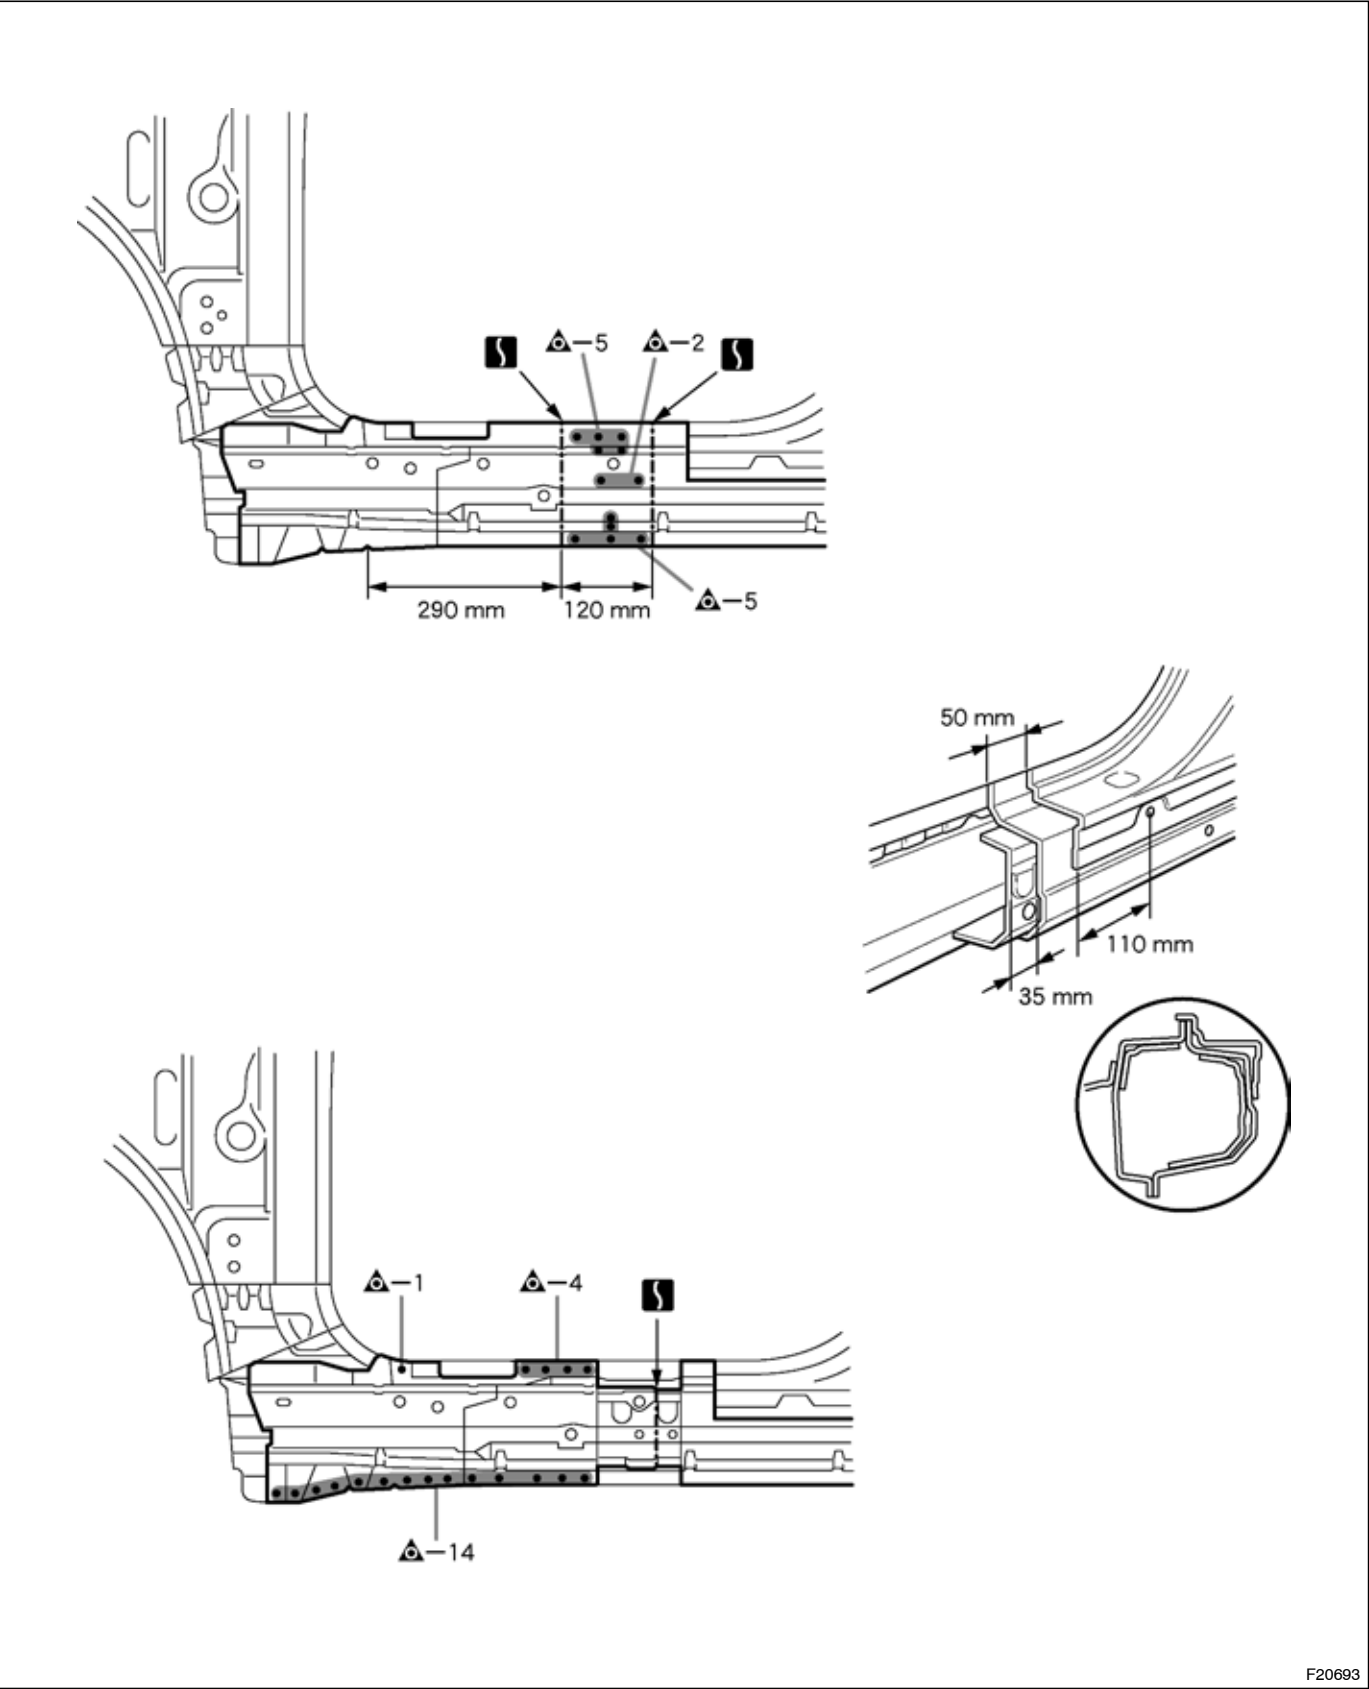

F20693

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

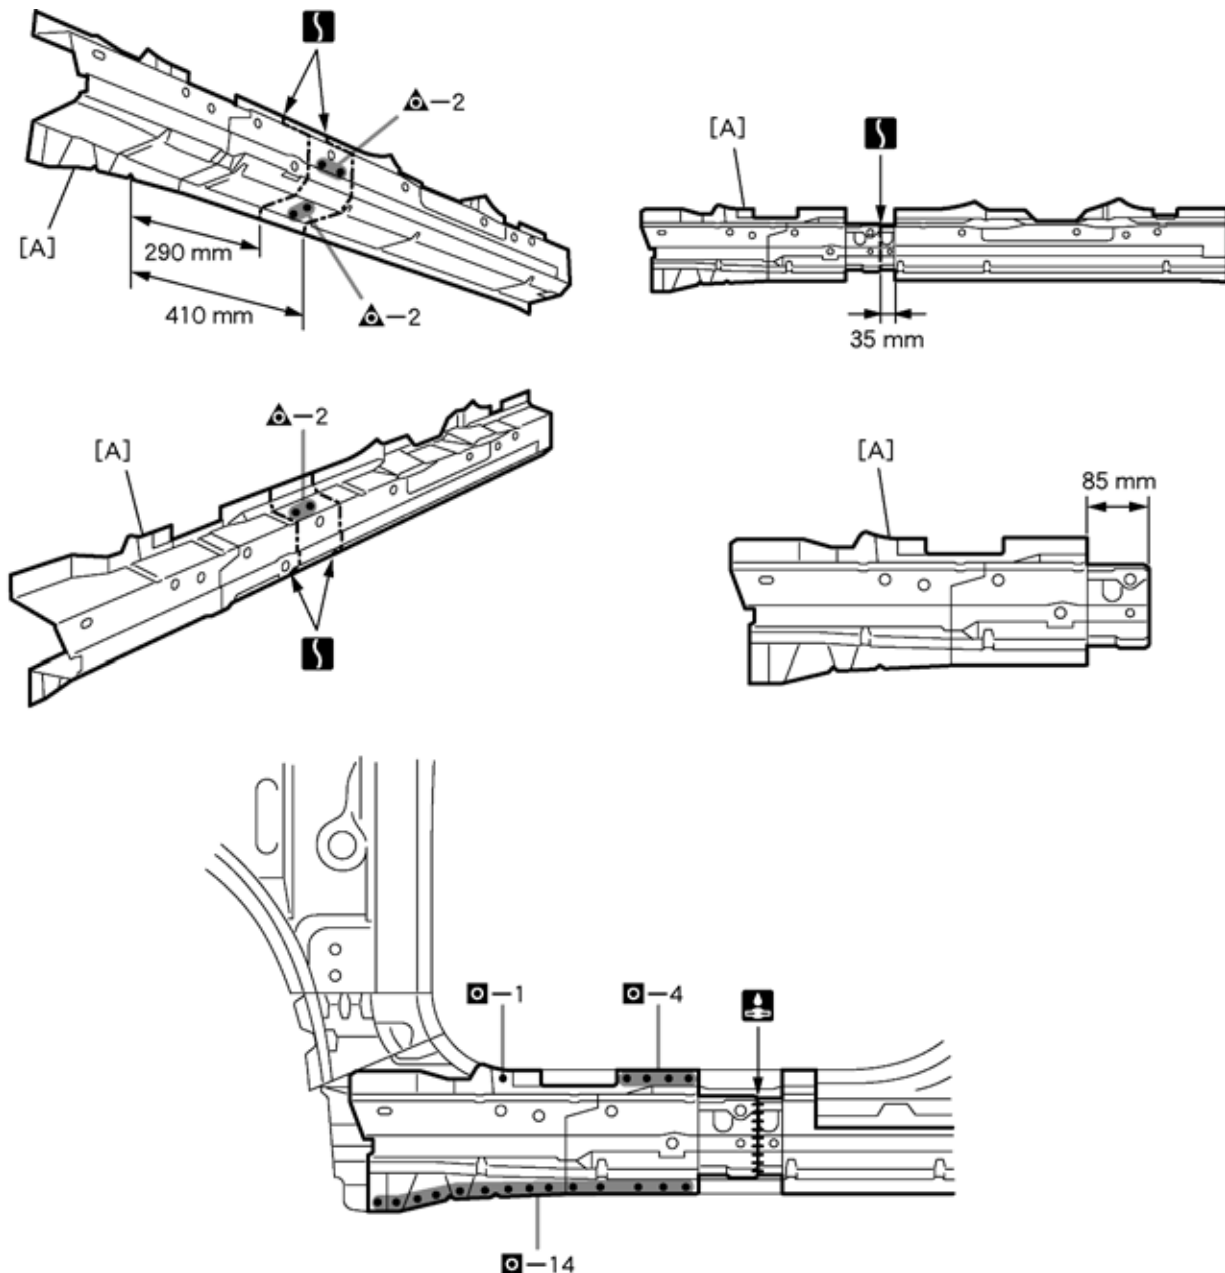

F20694

POINT

- 1 After welding the [A] to the vehicle side, install the outer panel.

PART NAME




[A] Rocker Outer Panel

35 mm (1.38 in.)

85 mm (3.35 in.)

290 mm (11.42 in.)

410 mm (16.14 in.)

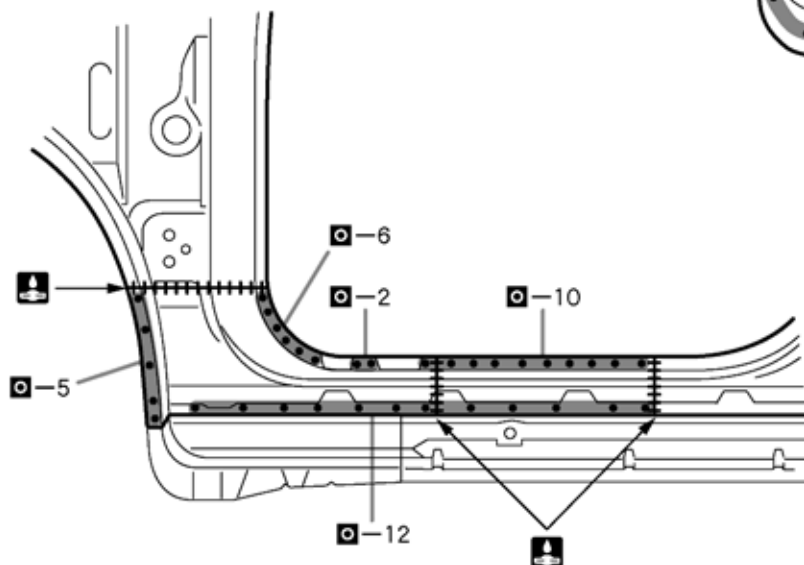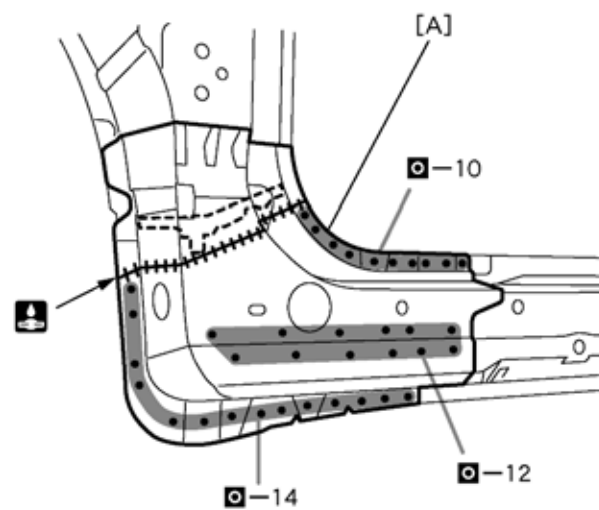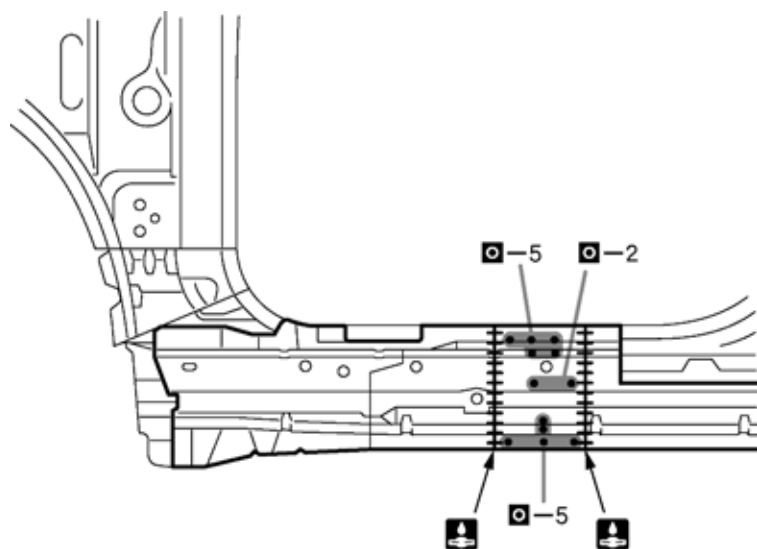

F20695

POINT

1 Inspect the fitting of the front door, etc., before welding, since this affects the appearance of the finish.

PART NAME

[A] Front Pillar Lower Reinforcement