

SECTION

ACC

ACC

ACCELERATOR CONTROL SYSTEM

CONTENTS

PRECAUTION	2	MODELS WITHOUT DISTANCE CONTROL ASSIST SYSTEM : Inspection	4
PRECAUTIONS	2	MODELS WITH DISTANCE CONTROL ASSIST SYSTEM	4
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2	MODELS WITH DISTANCE CONTROL ASSIST SYSTEM : Exploded View	5
REMOVAL AND INSTALLATION	3	MODELS WITH DISTANCE CONTROL ASSIST SYSTEM : Removal and Installation	5
ACCELERATOR CONTROL SYSTEM	3	MODELS WITH DISTANCE CONTROL ASSIST SYSTEM : Inspection	5
MODELS WITHOUT DISTANCE CONTROL ASSIST SYSTEM	3	SERVICE DATA AND SPECIFICATIONS (SDS)	7
MODELS WITHOUT DISTANCE CONTROL ASSIST SYSTEM : Exploded View	3	SERVICE DATA AND SPECIFICATIONS (SDS)	7
MODELS WITHOUT DISTANCE CONTROL ASSIST SYSTEM : Removal and Installation	3	Accelerator Control	7

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000012857587

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes dual stage front air bag modules. The SRS system may only deploy one front air bag, depending on the severity of a collision and whether the front passenger seat is occupied. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery or batteries, and wait at least three minutes before performing any service.

ACCELERATOR CONTROL SYSTEM

< REMOVAL AND INSTALLATION >


REMOVAL AND INSTALLATION

ACCELERATOR CONTROL SYSTEM

MODELS WITHOUT DISTANCE CONTROL ASSIST SYSTEM

MODELS WITHOUT DISTANCE CONTROL ASSIST SYSTEM : Exploded View

INFOID:0000000012857588

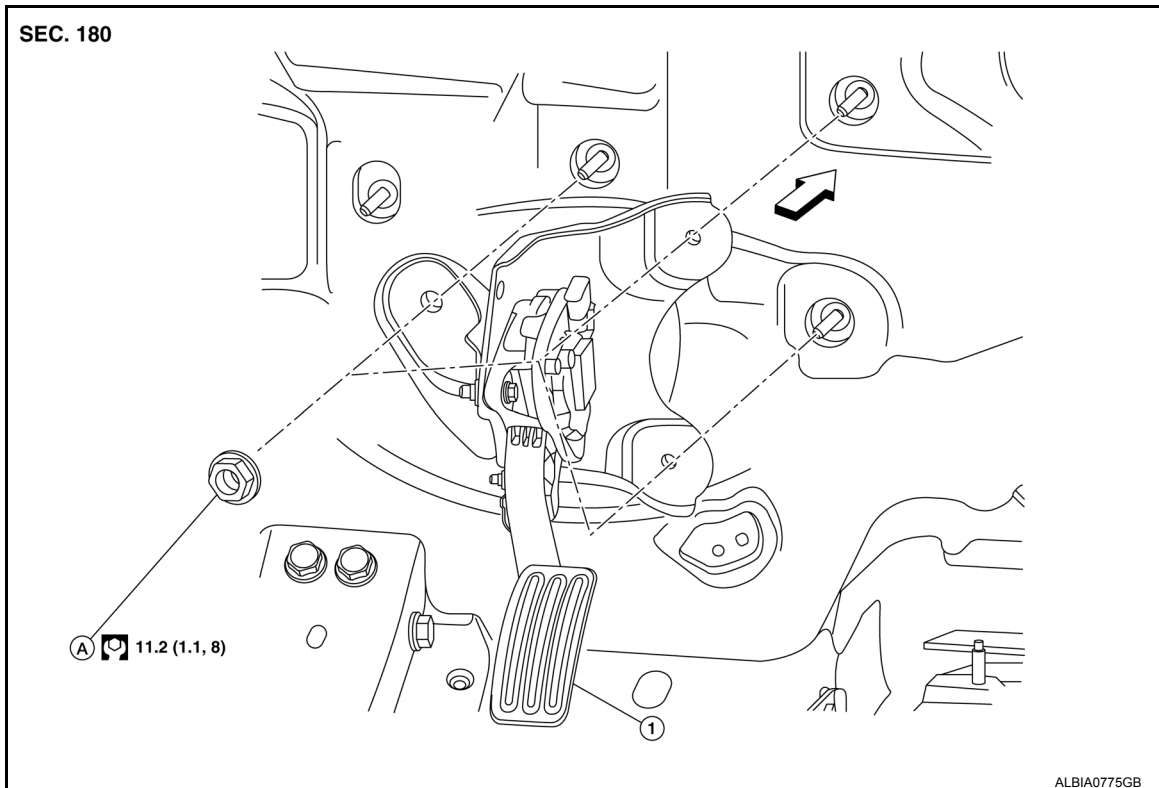

1. Accelerator pedal assembly

A. Nut

⇐ Front

MODELS WITHOUT DISTANCE CONTROL ASSIST SYSTEM : Removal and Installation

INFOID:0000000012857589

REMOVAL


1. Remove three accelerator pedal assembly nuts.
2. Disconnect harness connector (A) from the accelerator pedal assembly (1).

⇐ Front

3. Remove the accelerator pedal assembly from vehicle.

CAUTION:

- Do not disassemble accelerator pedal assembly.
- Do not drop or impact accelerator pedal assembly.
- Do not expose accelerator pedal assembly to water.

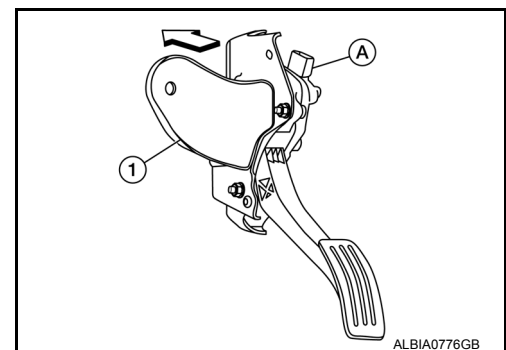

INSTALLATION

Installation is in the reverse order of removal.

NOTE:

For inspection, refer to [ACC-4. "MODELS WITHOUT DISTANCE CONTROL ASSIST SYSTEM : Inspection"](#).

ACCELERATOR CONTROL SYSTEM

< REMOVAL AND INSTALLATION >

MODELS WITHOUT DISTANCE CONTROL ASSIST SYSTEM : Inspection


INFOID:0000000012857590

INSPECTION AFTER INSTALLATION

- Check that the accelerator pedal moves smoothly within the specified range.

⇐: Front

Accelerator pedal stroke (A) : Refer to [ACC-7, "Accelerator Control"](#)

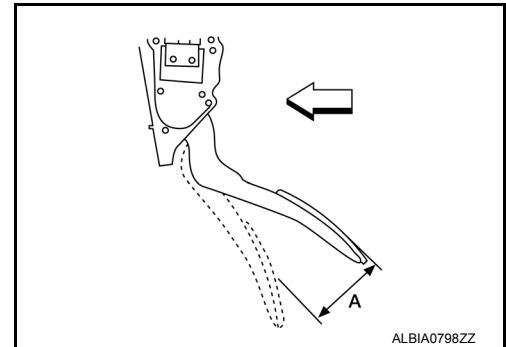

- Check the accelerator pedal height.

Accelerator pedal height : Refer to [ACC-7, "Accelerator Control"](#)

- Depress and release the accelerator pedal to check that it returns quickly and smoothly to the original released position.

CAUTION:

- Whenever the harness connector of the accelerator pedal position sensor has been disconnected, perform "Accelerator Pedal Released Position Learning". Refer to [EC-701, "Description"](#).
- The accelerator pedal should operate smoothly without catching when the pedal operating force is released. The pedal should return smoothly to the fully raised position. The spring should be free from damage.


MODELS WITH DISTANCE CONTROL ASSIST SYSTEM

ACCELERATOR CONTROL SYSTEM

< REMOVAL AND INSTALLATION >

MODELS WITH DISTANCE CONTROL ASSIST SYSTEM : Exploded View

INFOID:0000000012857591

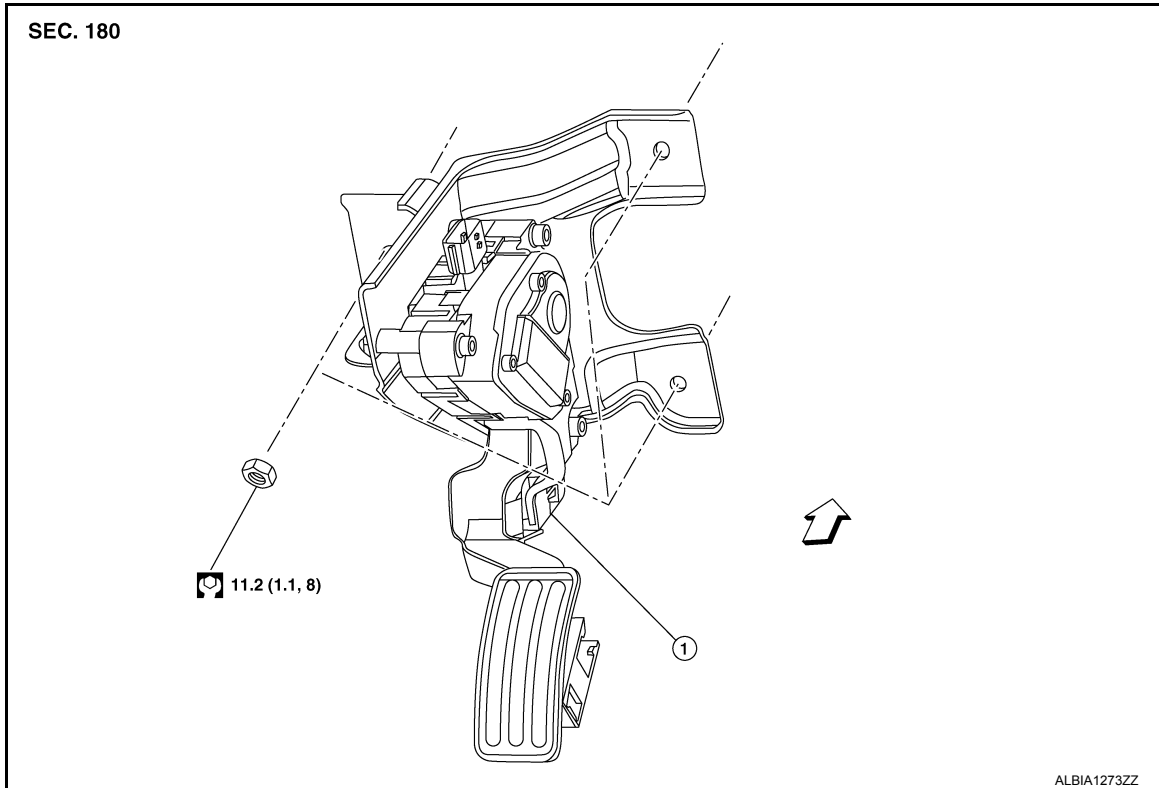

1. Accelerator pedal assembly

⇐ Front

MODELS WITH DISTANCE CONTROL ASSIST SYSTEM : Removal and Installation


INFOID:0000000012857592

REMOVAL

1. Remove three accelerator pedal assembly nuts.
2. Disconnect the harness connector (A) from the accelerator pedal assembly.
⇐ Front
3. Remove the accelerator pedal assembly from vehicle.

CAUTION:

- Do not disassemble accelerator pedal assembly.
- Do not drop or impact accelerator pedal assembly.
- Do not expose accelerator pedal assembly to water.

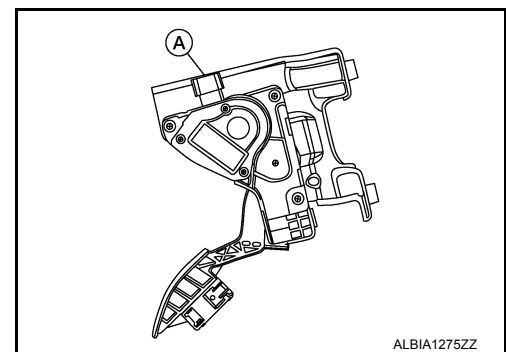

INSTALLATION

Installation is in the reverse order of removal.

NOTE:

For inspection, refer to [ACC-5. "MODELS WITH DISTANCE CONTROL ASSIST SYSTEM : Inspection"](#).

MODELS WITH DISTANCE CONTROL ASSIST SYSTEM : Inspection

INFOID:0000000012857593

INSPECTION AFTER INSTALLATION


ACCELERATOR CONTROL SYSTEM

< REMOVAL AND INSTALLATION >

- Check that the accelerator pedal moves smoothly within the specified range.

⇐: Front

Accelerator pedal stroke (A) : Refer to [ACC-7, "Accelerator Control"](#)

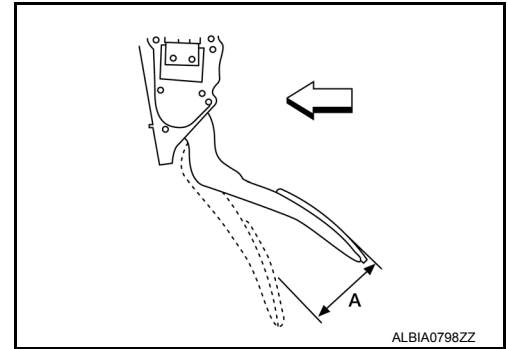

- Check the accelerator pedal height.

Accelerator pedal height : Refer to [ACC-7, "Accelerator Control"](#)

- Depress and release the accelerator pedal to check that it returns quickly and smoothly to the original released position.

CAUTION:

- Whenever the harness connector of the accelerator pedal position sensor has been disconnected, perform "Accelerator Pedal Released Position Learning". Refer to [EC-701, "Description"](#).
- The accelerator pedal should operate smoothly without catching when the pedal operating force is released. The pedal should return smoothly to the fully raised position. The spring should be free from damage.

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)


Accelerator Control

INFOID:0000000012857594

ACC

MODELS WITH AND WITHOUT DISTANCE CONTROL ASSIST ACCELERATOR PEDAL

Unit: mm (in)

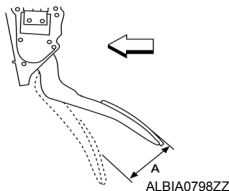

Models without distance control assist accelerator pedal stroke (A)	50.5 - 53.5 (1.99 - 2.11)
Models with distance control assist accelerator pedal stroke (A)	48.5 - 51.5 (1.91 - 2.03)
Accelerator pedal height	164.2 - 174.2 (6.46 - 6.86)

↩: Front