


# Battery Sensor

STARTING/CHARGING SYSTEMS

## 5. Battery Sensor

### A: REMOVAL

- 1) Disconnect the ground terminal from battery sensor. <Ref. to NT-5, BATTERY, NOTE, Note.>
- 2) Disconnect the connector (A) from the battery sensor, and remove the battery sensor.

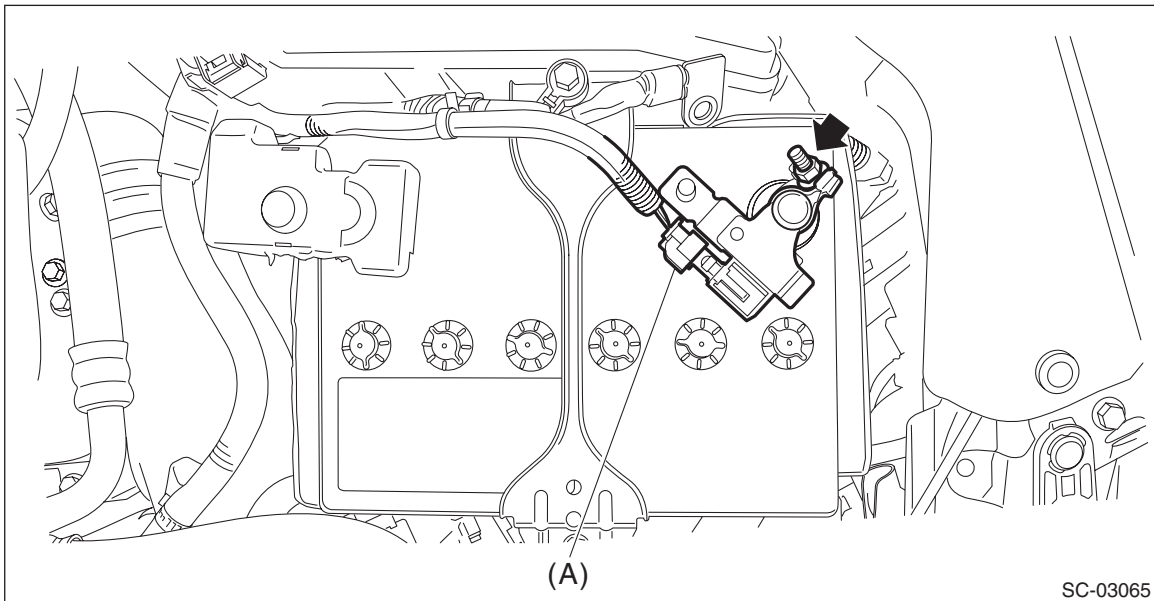

### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Install the battery sensor to the position where removal/installation of the vent plug is not interfered.

#### *Tightening torque:*

*6 N·m (0.6 kgf-m, 4.4 ft-lb)*

### C: INSPECTION

Check the battery sensor for deformation, cracks and any other damage.

# ENGINE (DIAGNOSTICS)

# *EN(w/o STI)(diag)*

---

	<b>Page</b>
1. Basic Diagnostic Procedure .....	2
2. Check List for Interview .....	4
3. General Description .....	6
4. Electrical Component Location .....	9
5. Engine Control Module (ECM) I/O Signal .....	20
6. Engine Condition Data .....	30
7. Data Link Connector .....	31
8. General Scan Tool .....	32
9. Subaru Select Monitor .....	37
10. Read Diagnostic Trouble Code (DTC) .....	46
11. Inspection Mode .....	47
12. Drive Cycle .....	50
13. Clear Memory Mode .....	61
14. System Operation Check Mode .....	62
15. Malfunction Indicator Light .....	63
16. Diagnostics for Engine Starting Failure .....	66
17. List of Diagnostic Trouble Code (DTC) .....	85
18. Diagnostic Procedure with Diagnostic Trouble Code (DTC) .....	96
19. Diagnostic Procedure without Diagnostic Trouble Code (DTC) .....	489
20. General Diagnostic Table .....	493