


## 10. Reservoir Tank

### A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the over flow hose (A).
- 3) Pull out the reservoir tank to the arrow direction while pushing the claw (B).

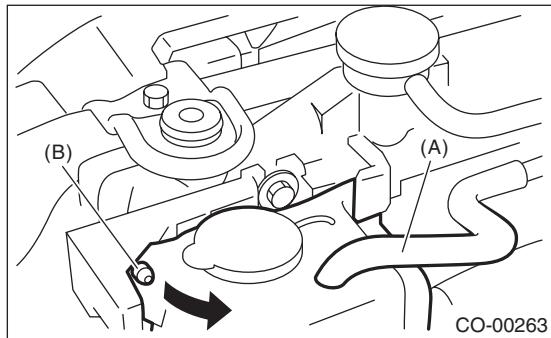

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Make sure the engine coolant level is between "FULL" and "LOW".