


# Engine Coolant Temperature Sensor

FUEL INJECTION (FUEL SYSTEMS)


## 4. Engine Coolant Temperature Sensor

### A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from battery.

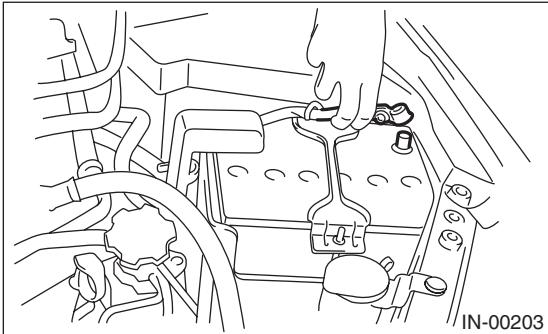

- 3) Remove the generator. <Ref. to SC(H4SO)-20, REMOVAL, Generator.>
- 4) Drain engine coolant. <Ref. to CO(H4DOTC)-13, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
- 5) Disconnect the connectors from the engine coolant temperature sensor.

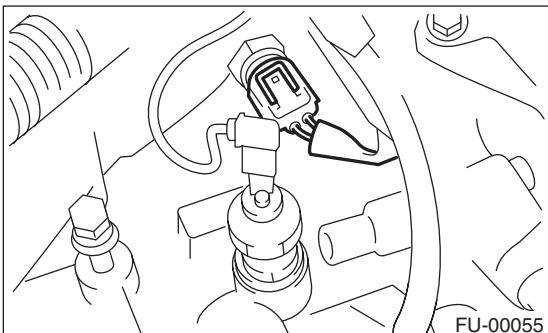

- 6) Remove the engine coolant temperature sensor.

### B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use a new gasket.

***Tightening torque:***

***18 N·m (1.8 kgf·m, 13.3 ft-lb)***