



## 10. Pressure Control Solenoid Valve

### A: REMOVAL


- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from battery.

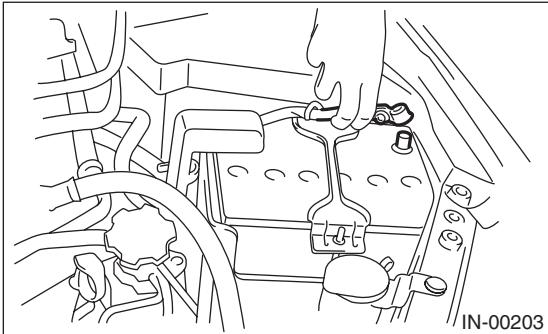

- 3) Lift-up the vehicle.
- 4) Disconnect connector (A) from the pressure control solenoid valve.
- 5) Disconnect the evaporation hose (B) from the pressure control solenoid valve.
- 6) Remove the bolts (C) which secure the bracket to the fuel tank.

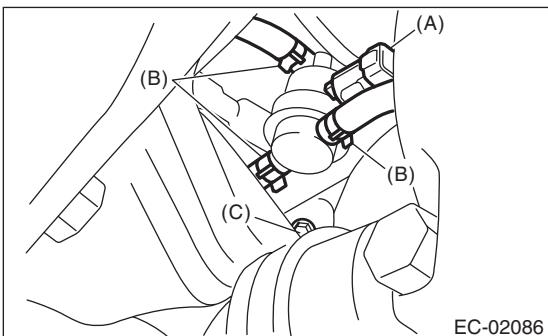

- 7) Remove the pressure control solenoid valve from the bracket.

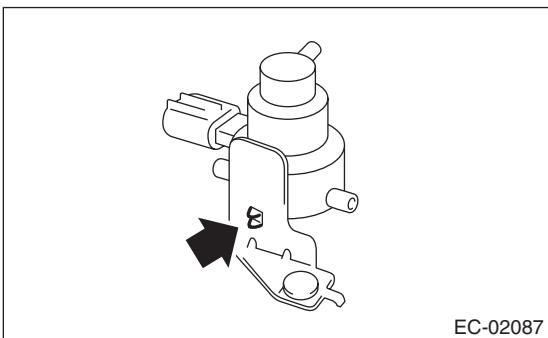

### B: INSTALLATION

Install in the reverse order of removal.

#### ***Tightening torque:***

***7.35 N·m (0.75 kgf-m, 5.4 ft-lb)***

### C: INSPECTION

Make sure the hoses are not cracked or loose.